

Black

STF-AC15T

WOOZOO®
by IRIS OHYAMA

พัดลมตั้งพื้น


STF-AC15T



คู่มือการใช้งานแบบย่อ


กรุณาอ่านและปฏิบัติตามข้อควรระวังด้านล่าง
เพื่อหลีกเลี่ยงอันตรายหรือความเสียหายต่อผู้ใช้งาน

วิธีการประกอบชิ้นส่วน

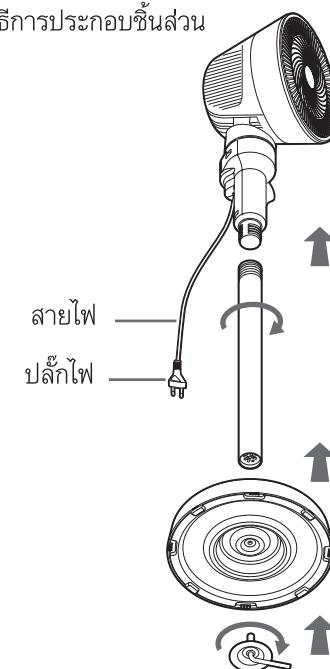


ส่วนปฏิบัติการ


- | | |
|--|--|
| | เปิดเครื่อง |
| | เลือกรate แสลมที่ต้องการ (3 ระดับ) |
| | ตั้งค่าการพัดซึ้น-ลง Long press กดค้าง: ปิดแสงไฟ ← → เปิดแสงไฟ |
| | ตั้งค่าการพัดไปซ้าย-ขวา กดค้าง: เจียบ ← → ปล่อยลม |
| | ตั้งค่าหยุด ทำงานหลังจาก 2/4/8 ชั่วโมง |
| | ตัวรับสัญญาณรีโมทคอนโทรล |

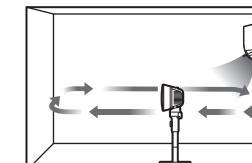


เมื่อใช้ในการหมุนเวียน
อากาศในบ้าน จะทำให้รู้สึก
เย็นมากขึ้น

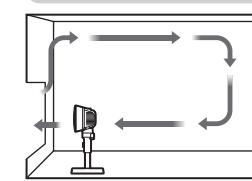


ถ่ายเทอากาศภายนอก/
ภายในอาคาร

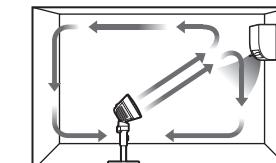


เมื่อใช้ในการหมุนเวียน
อากาศในบ้าน จะทำให้รู้สึก
เย็นมากขึ้น

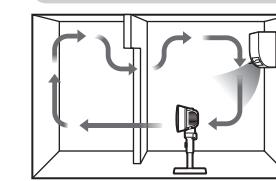

หมุนเวียนอากาศในห้อง
ที่ติดกัน

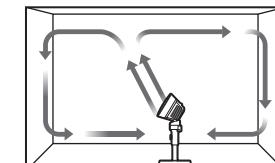

การพัดให้มหุนเวียนจะ^{ช่วยลดความไม่สม่ำเสมอ}
ของอุณหภูมิ

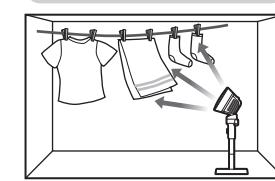

ใช้เป้าเพื่อช่วยให้ผ้าแห้ง

- วางพัดลมบนพื้นราบหรือโต๊ะที่ไม่มีสิ่งของกีดขวาง

วิธีการทำความสะอาด

ผลิตภัณฑ์อาจชำรุดเสียหายได้หากใช้งานในสภาพที่มีฝุ่นละออง โปรดบำรุงรักษาเป็นระยะอย่างสม่ำเสมอ
ตามระดับการสะสมของฝุ่น



คำเตือน

- ตรวจสอบให้แน่ใจว่าปิดแหล่งจ่ายไฟและยกสายไฟขึ้นก่อนการบำรุงรักษา
- มองเตอร์ยังคงมีความร้อนอยู่หลังจากการใช้งาน ตรวจสอบให้แน่ใจว่ามอเตอร์เย็น
ลงดีแล้วจึงทำการบำรุงรักษา

- โปรดอย่าใช้สารเจือจาง แอลกอฮอล์ น้ำมันหอมระเหย น้ำยาทำความสะอาดที่มีฤทธิ์เป็นด่าง น้ำยาฟอก
ขาว ฯลฯ หากไม่ปฏิบัติตาม อาจทำให้ผลิตภัณฑ์เปลี่ยนสี เสียรูป เสื่อมสภาพ แตกหักเสียหาย หรือเกิด
การขัดข้อง

การทำความสะอาด

- เช็ดด้วยผ้าぬ่ำและแห้ง
หาก不慎ลั่งสกปรกอย่างมาก ให้ใช้ผ้าชูบ้น้ำยาทำความสะอาดที่มีฤทธิ์เป็นกลางเจือจางบิดจนหมวด แล้วเช็ดซ้ำไปมา

การจัดเก็บ

- เมื่อไม่ได้ใช้งานเป็นเวลานาน ให้คลุมตัวเครื่องของผลิตภัณฑ์ด้วยถุงพลาสติกและเก็บไว้ในที่แห้งและเย็นโดย
ไม่ถูกแสงแดดส่องโดยตรง

ผลิตภัณฑ์:
IRIS OHYAMA Inc., 2-12-1, Itsutsubashi, Aoba-ku, Sendai-shi, Miyagi-ken, Japan
นำเข้าและจัดจำหน่ายโดย:

IRIS OHYAMA(THAILAND) CO.,LTD.

ที่อยู่: บริษัท ไอริส ออยาม่า (ไทยแลนด์) จำกัด 399 อาคารอเนกประสงค์ชั้น 21 ห้องเลขที่ 2207-2208
ชั้นที่ 22 ถนนสุขุมวิท แขวงคลองเตยเหนือ เขตวัฒนา กรุงเทพมหานคร 10110


CODE: 691437
品名:④タイ取説ACF15T-EN
サイズ: H297×W210mm (A4)
材質: 上質紙 四六判70kg (81.4g/m²)
刷色: 1C (Black)

Black

STF-AC15T

WOOZOO®
by IRIS OHYAMA

Stand fan
STF-AC15T

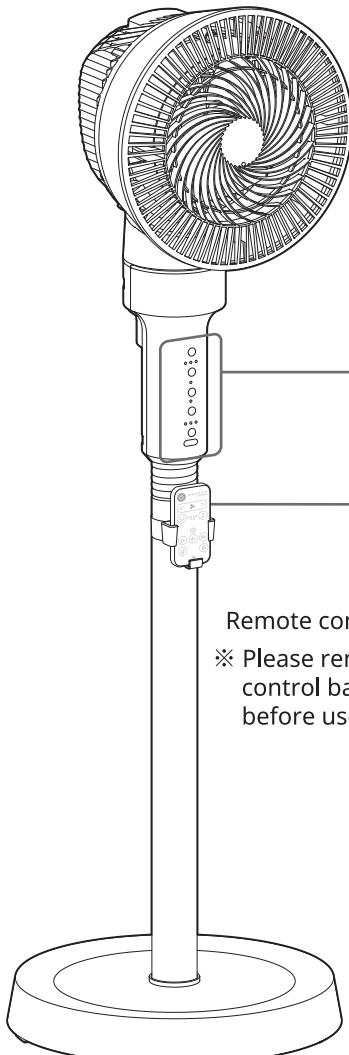


Remote control (accessory)
※ Please remove the remote control battery protector before use.

Operating section


- Turn on power
- Select desired airflow (3 levels)
- Set up-down oscillation
Long press:
turn off the light ← → turn on the light
- Set left-right oscillation
Long press: Silence ← → Release
- Set to stop after 2/4/8 hours
- Remote control receiver

How to assemble

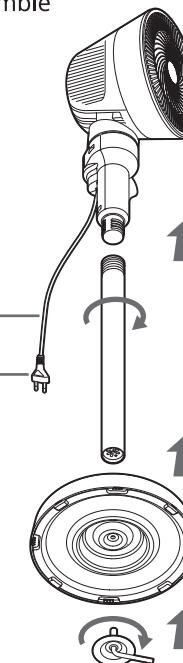


Quick Operation Guide


To avoid causing harm and property damage to you or others, please carefully read and follow the "Safety Precautions" below.

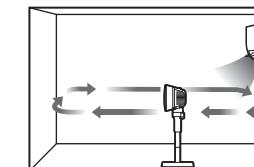


When using cooling,
enhances your feeling
of coolness

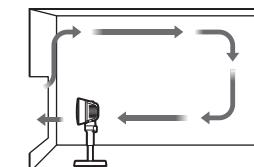

Ventilates the outdoor/
indoor air

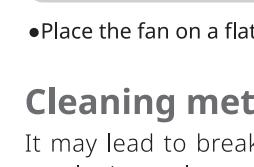

Circulates the air of
adjacent rooms

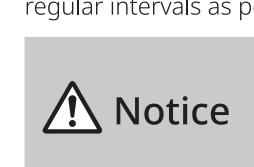

Use the fan to assist
with drying of washing

Cleaning method

It may lead to breakdown in condition of using with accumulated dust. Please maintain at regular intervals as per the dust accumulation degrees.



Notice

- Make sure to cut off the power supply and pull up the power line before maintenance.
- The motor keeps heating after operation. Make sure to maintain after the motor is cooling down.

- Please do not use diluents, alcohol, volatile oil, alkaline detergent, decolorizer, etc. Otherwise it may lead to discoloration, transformation, deterioration, damage or breakdown.

■ Cleaning

- Wipe with a soft and dry cloth.
- When it is difficult to clean the product, please dip a cloth with diluted neutral detergent, wring out the cloth, then wipe the product repeatedly.

■ Storage

- In condition of no use for a long term, cover the main body of the product with a plastic bag, and then store it in a dry and cool place with no direct sunshine.

Brand Principal : IRIS Ohyama Inc.,
Address : 2-12-1, Itsutsubashi, Aoba-ku, Sendai-shi, Miyagi-ken, Japan
Distributor :

IRIS OHYAMA(THAILAND) CO., LTD.

Address : No. 399 Interchange 21, Room No. 2207-2208, 22 Floor, Sukhumvit Road,
Klongtoey Nua Sub-district, Wattana District, Bangkok 10110

691437
040324-FYN-GRJ-01

Safety Precautions

Please read these safety precautions carefully before using the fan.

The precautions explain the things that must be adhered to in order to prevent injury to persons or damage to property.

Meaning of the symbols



Indicates a caution.



Indicates a prohibition.



Indicates an action that must be performed.

Warning

Indicates that incorrect handling may result in death or serious injury.



Do not disassemble, repair, or modify

Doing so may cause fire, electrocution or injury.
For repairs, consult with the store where you purchased the product from or with our dedicated repairs call center.



Never use the fan in locations with high humidity, such as where water is circulated or in bathrooms.
Do not immerse the fan in water, or splash water on it.
Doing so may cause fire or electrocution.



When abnormal operation or malfunction occurs, stop using the fan immediately, turn off the power, and remove the power plug from the socket.
Failure to do so may result in fire, electrocution, or emission of smoke.

[Examples of abnormal operations]

- An unusual sound or smell occurs.
- The power plug or cord becomes unusually hot.
- Power conduction is interrupted or resumes when the power cord is moved.
- The fan stops sometimes during operation.
- You feel a light electrical shock when you touch the fan.
- Stop using the fan, and contact the store you purchased it from or the IRIS Call Center.

Use the power plug and power cord correctly.



Regularly remove dust from the power plug.
If dust builds up, humidity and the like will lead to poor insulation, and may cause fire or electrocution.

Insert the power plug fully into the socket.

Failure to do so may result in a short circuit that causes fire or electrocution.



Do not use a voltage other than 220V~.
Doing so may cause fire.

Do not use the fan if the power cord or power plug is damaged, or if the plug fits loosely in the socket.
Doing so may result in a short circuit that causes fire or electrocution.

Do not use the fan with the power cord bundled up.
Doing so may cause fire. Always use the fan with the power cord straightened out.

Do not damage the power cord.

Do not scratch, modify, bend forcefully, pull, twist, place heavy items on, or pinch the power cord.
Doing so may damage the power cord, and cause fire or electrocution.

Do not pull on the power cord when carrying or storing the fan.
Doing so may cause fire or electrocution.



Always remove the power plug from the socket before cleaning, inspection, or moving the fan.
Failure to do so may cause electrocution or injury.



Do not insert or remove the power plug with wet hands.
Doing so may cause electrocution, burns, or injury.



Do not use the fan outdoors.
Do not use the fan near anything that may interfere with the airflow.
Do not cover or block the fan with a cloth, paper, plastic bag, and the like.
Do not use the fan in a location with a lot of dust or fine particles.

Doing so may cause malfunction, short circuit, or fire.
Do not apply sprays (insecticides, hair products, lubricants, etc.)
Do not use the fan near flammable items (kerosene, gasoline, thinner, etc.), items that are a source of fire (cigarettes, incense, etc.), or combustible items.

Doing so may cause fire.

Do not use the fan facing a burning appliance such as a stove.

Doing so may cause incomplete combustion or scattering of fire, resulting in carbon monoxide poisoning or fire.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.



If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



Caution
Indicates that incorrect handling may cause injury to persons or damage to property.



Do not allow inexperienced persons such as children handle the fan, and do not allow infants to come into contact with the fan.

Do not sit or lean on the fan.
Doing so may result in electrocution or injury.

Do not move the fan by dragging it.
Doing so may damage the tatami mat or flooring.

Do not operate the fan with the blades, front guard, or rear guard removed.
Doing so may cause fire, electrocution or injury.

Do not peel the warning label off the blades.
The label is to be displayed by law to prevent accidents.

Do not point the fan directly toward your body for long periods of time.
Doing so may damage your health.

Do not point the fan directly toward animals and plants.
Doing so may cause harm.

Do not subject the fan to strong impacts.
Doing so may cause malfunction, fire, or electrocution.



Use the fan on a flat and stable floor.

Using the fan on an unstable surface may cause it to fall over, resulting in injury or damage to surrounding objects.

Do not place the fan where a curtain or drawstring could become caught up in it.

Doing so may cause damage to surrounding objects or injury.



When removing the power plug, always hold the power plug to pull it out, without holding the power cord.

Failure to do so may damage the power cord, and cause fire or electrocution.

Always remove the power plug from the socket when not using the fan for long periods of time.

Deterioration of the insulation may cause fire or electrocution.

Stand fan STF-AC15T

Warranty card

The purchase receipt constitutes the certificate so that you can enjoy free repairs in accordance with the following repair provisions within the next period from the day of purchase.

| Purchase date * | Warranty period |
|------------------------------------|--|
| | 1 years from the day of purchase Except for consumables |
| Customer Name: | |
| Postal code: Address: | Telephone number () - |
| Retail shop Shop name: Address: | Telephone number () - |

Notice to retail shops: Please fill in the fields marked with a * symbol and then deliver it to your customer.

Warranty provisions

1. The company will replacements in conditions of malfunction or damage present under normal operating conditions as per the aspects that must be given attention according to the labels affixed on the operation manual and the product.

2. Warranty repairs can only be performed by an authorised service centre. When filling a warranty claim, the original bill of purchase (with the date of purchase) must be submitted.

3. The warranty contents are only limited to the free repair of the product. No other warranty service is provided even within the warranty period. The warranty only covers defects in materials or workmanship.

4. The warranty will not apply in cases of:

- ① Normal wear and tear
- ② Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- ③ Failures and damages caused by product crashes after purchase. The use of force or damage caused by external influences
- ④ Failures and damages caused by fires, earthquakes or other natural disasters
- ⑤ Damage caused by non-compliance with the user manual, e.g. Connection to an inadequate power supply or non-compliance with the installation instructions
- ⑥ Failures and damages during the handling and transportation process after purchase
- ⑦ Partially or completely dismantled appliances
- ⑧ Not being able to show the purchase receipt
- ⑨ The warranty card has not been filled with the date of purchase, the customer's name, the name of the retail shop or any of the above data has been modified

5. The warranty card is only valid in THAILAND.

6. The warranty card must be the original and must be kept appropriately.

Repair memorandum

* The purchase receipt constitutes the certificate corresponding to the repair and replacement conditions clearly stipulated in the user manual. However, the warranty card restricts any customer from enjoying any legal rights from the company (person responsible for the warranty) and any dealer.

Please check with your retail shop for repair-related matters after the warranty period.

* Please check with the "Warranty and after-sales service" for any repairs after the warranty period and the remaining period of spare parts.

Specifications

| | | | |
|-------------------------|-------|----------------------|---|
| Rated voltage | 220V~ | Cord length | Approx. 1.4 m |
| Rated frequency | 50 Hz | Product dimensions | W325mm×D325mm×H1002mm (not including the power cord) |
| Rated power consumption | 40 W | Applicable room size | Product weight |
| | | 28m ² | Approx. 4.5kg |

● The product specifications may change without notice.