


CODE : 856672 TH PCF-MKM15-18-TH
サイズ : 210mm×148mm (A5) 12 ページ
材質 : 上質紙 四六判 70kg (81.4kg)
刷色 : 1C (Black)

TH
PCF-MKM18/PCF-MKM15

WOOZOO®
by IRIS OHYAMA

สำหรับใช้ภายในบ้าน

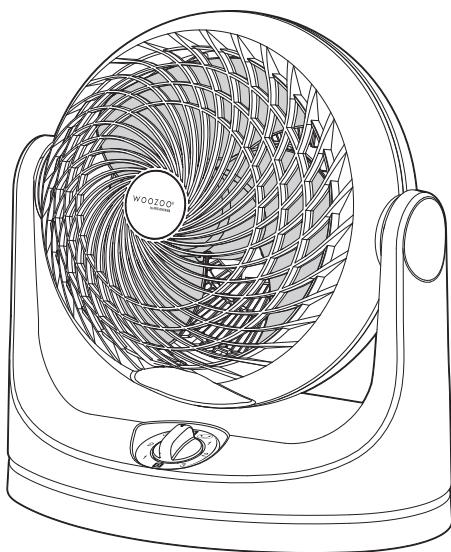

<PCF-MKM18>

พัดลมหมุนเวียนอากาศ

PCF-MKM18/PCF-MKM15

คู่มือการใช้งาน

สารบัญ

การเตรียมความพร้อมก่อนการใช้

ข้อควรระวังด้านความปลอดภัย	2
ข้อควรระวังเกี่ยวกับตำแหน่งการจัดวาง	5
การจัดวาง	6
ส่วนประกอบ	6

คำแนะนำการใช้งาน

วิธีการใช้งาน	7
การทำความสะอาดและการบำรุงรักษา	8
วิธีการจัดเก็บ	8

อื่นๆ

การแก้ไขปัญหา	9
ข้อกำหนดทางเทคนิค	10
การรับประกันและบริการหลังการขาย	11
ใบรับประกัน	ปกหลัง

ข้อควรระวังด้านความปลอดภัย

กรุณารู้ว่าบุคคลตามที่ข้อควรระวังที่อธิบายไว้ด้านล่างเพื่อให้เกิดเลี้ยงการบาดเจ็บหรือความเสียหายทางด้านทรัพย์สิน ข้อควรระวังด้านความปลอดภัยแบ่งตามระดับความอันตรายหรือความเสียหายที่เกิดจากการใช้งานในรูปที่ไม่ถูกต้อง

ความหมายของสัญลักษณ์



สัญลักษณ์นี้หมายถึง
ข้อควรระวัง



สัญลักษณ์นี้หมายถึง
สิ่งที่ห้ามทำ



สัญลักษณ์นี้หมายถึง
สิ่งที่ต้องทำ



คำเตือน

การใช้งานไม่ถูกวิธีอาจนำไปสู่การเสียชีวิตหรือบาดเจ็บสาหัสได้



ห้ามทดสอบแยกชิ้นส่วน
ที่นี่

- ห้ามทดสอบแยกชิ้นส่วน หรือดัดแปลงด้วยตนเอง
หากไม่ปฏิบัติตามอาจนำไปสู่การเกิดเพลิงไหม้ การเสียชีวิตจากไฟฟ้าหรือไฟฟ้าชื้อต่อ ได้รับบาดเจ็บ อาจเป็นอันตรายได้หากพยายามซ่อมด้วยตัวเอง เว้นแต่ทำการซ่อมโดยผู้เชี่ยวชาญ โปรดนำผลิตภัณฑ์ไปที่ร้านค้าปลีกที่ซื้อมา



สิ่งที่ต้องทำ

- ในการรีเซ็ตเกิดความผิดปกติหรือความผิดพลาดในการใช้งาน ให้หยุดใช้งาน อดปลั๊กไฟออกจากเดรรับไฟฟ้า และดักแหล่งจ่ายไฟฟ้าโดยเร็วที่สุด
หากไม่ปฏิบัติตามอาจนำไปสู่การเกิดควันไฟ ประกายไฟ หรือการเสียชีวิตจากไฟฟ้าชื้อต่อได้
(ตรวจสอบของจวนผิดปกติ)
 - เมื่อยังคงมีก้อนไฟฟ้าอยู่
 - ปลั๊กไฟและสายไฟมีความร้อนมากกว่าปกติ
 - เครื่องหมายทำงานเมื่อยังไม่เข้าระบบ
 - เครื่องหมายทำงานเมื่อยังไม่เข้าระบบ
 - คุณลักษณะอื่นๆ ที่ไม่ถูกต้อง
 ➔โปรดหยุดการใช้งาน และตรวจสอบกับร้านค้าปลีก โดยโทรไปที่หมายเลขให้คำปรึกษาของทางร้าน



สิ่งที่ต้องทำ

- อุปกรณ์นี้ไม่เหมาะสมสำหรับการใช้งานโดยบุคคล (รวมถึงเด็กๆ) ที่มีความสามารถในการร่วงกายประสานสัมภาระ หรืออัจฉิตใจไม่สมบูรณ์หรือขาดประสบการณ์และความรู้ หากใช้งานควรได้รับการดูแลหรือดำเนินการโดยผู้ใหญ่เด็กควรได้รับการดูแลเพื่อให้แนใจว่าพากษาไม่ได้เล่นกับอุปกรณ์นี้



สิ่งที่ต้องทำ

- หากสายไฟชำรุด จะต้องเปลี่ยนโดยผู้มีลิขิต ตัวแทนบริการหรือบุคคลที่มีคุณสมบัติ ใกล้เคียงกันเพื่อหลีกเลี่ยงการเกิดอันตรายห้ามใช้ในบริเวณที่มีความชื้นมากเกินไป

ใช้ปลั๊ก/สายไฟหัวหมายมาตรฐาน



สิ่งที่ต้องทำ

- ทำความสะอาดฝุ่นที่ปลั๊กเป็นประจำ
- การสะสมของฝุ่นอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อตได้
- ตรวจสอบไฟแน็คจ้วงว่าได้เสียบปลั๊กเข้าไปในเต้ารับจนสุด

เพราะอาจนำไฟสู่การเกิดไฟฟ้าช็อตหรือไฟไหม้ที่เกิดจากไฟฟ้าลัดวงจรได้ เนื่องจากจนวนกันความร้อนไม่ทำงาน



ถอดปลั๊ก

- ถอดปลั๊กออกก่อน เมื่อต้องการทำการทำบำรุงรักษาหรือเคลื่อนย้าย
- เพราะอาจนำไฟสู่การเสียชีวิตจากไฟฟ้าช็อตหรือได้รับบาดเจ็บได้



ห้ามสูบบุหรี่
ขณะที่มือเปียก

- ห้ามจับปลั๊กขณะมือเปียก
- เพราะอาจนำไฟสู่การเสียชีวิตจากไฟฟ้าช็อตหรือได้รับบาดเจ็บได้



ห้ามทำ

- ห้ามใช้ในเต้ารับอื่นที่ไม่ใช่ 220V~ โวลต์
- เพราะอาจนำไฟสู่การเกิดประกายไฟหรือเกิดเพลิงไหม้ได้
- ห้ามใช้หากสายไฟชำรุดหรือเดี้ยวรับ荷瘤
- เพราะอาจนำไฟสู่การเกิดประกายไฟ หรือเสียชีวิตจากไฟฟ้าช็อตได้
- ห้ามทำให้สายไฟเสียหาย
- ตรวจสอบให้แน่ใจว่าไม่ได้งอ, ดัดแปลง, ทำให้เกิดรอยขีดข่วน ดึง บิด หรือ วางเรื่งของที่หนักบนสายไฟ เนื่องจากอาจนำไฟสู่การเกิดเพลิงไหม้ หรือการเสียชีวิตจากไฟฟ้าช็อตได้
- ห้ามทำให้สายไฟพันกัน
- อาจนำไฟสู่การเกิดเพลิงไหม้ได้ ต้องตรวจสอบให้แน่ใจว่าได้เชื่อมสายไฟออกไฟปุ่นสุดก่อนการใช้งานทุกครั้ง
- ห้ามดึงสายไฟเมื่อเคลื่อนย้ายผลิตภัณฑ์หรือเมื่อจัดเก็บ
- เพราะอาจทำให้เกิดเพลิงไหม้ หรือเสียชีวิตจากไฟฟ้าช็อตได้



ห้ามทำ

- ห้ามวางแผนผลิตภัณฑ์ที่นี่ใกล้กับอุปกรณ์ที่ทำความร้อน เช่น เตาไฟ
- เพราะอาจทำให้เกิดประกายไฟพิษการบอนมอนออกไซด์ไฟไหม้และอื่นๆ ที่เกิดจากการทำความร้อนเผาไหม้ไม้สมบูรณ์

ข้อควรระวังด้านความปลอดภัย ต่อ



- ห้ามใช้สเปรย์ฉีดพ่นผลิตภัณฑ์ (ย่าง่าเมลง, สเปรย์ฉีดผน, น้ำมันล้อลี่น ฯลฯ)
- ห้ามวางวัสดุไวไฟไวกับกับผลิตภัณฑ์ หรือวัตถุที่มีประกายไฟหรือฟูนไฟ (ชั่วน้ำมันด้า, น้ำมัน, ตินเนอร์ ฯลฯ)
เนื่องจากอาจนำไปสู่การเกิดประกายไฟหรือเกิดเพลิงไหม้ได้



- ผลิตภัณฑ์นี้ใช้ภายในอาคารเท่านั้น
- ห้ามใช้ผลิตภัณฑ์นี้กับวัตถุใด ๆ ที่เป็นอุปสรรคต่อการระบายน้ำอากาศ
- ก่อนงานผลิตภัณฑ์ ห้ามน้ำวัสดุที่ติดไฟง่ายมาครอบผลิตภัณฑ์ เช่น เสื้อผ้า กระดาษ หรือ ถุงพลาสติก
- ห้ามใช้ในบริเวณที่มีฝุ่นมาก
อาจนำไปสู่การเกิดไฟฟ้าลัดวงจรหรือเกิดเพลิงไหม้ได้



- ห้ามใช้ในบริเวณที่มีความชื้นมากเกินไป เช่น อ่างอาบน้ำ หรือโถล้างหน้า
- ห้ามทำให้ผลิตภัณฑ์เปียก
อาจทำให้เกิดเพลิงไหม้/การเสียชีวิตจากไฟฟ้าช็อตได้



ข้อควรระวัง


การใช้งานไม่ถูกวิธีอาจทำให้เกิดการบาดเจ็บหรือความเสียหายได้



- ห้ามนั่งหรือเอนกายบนผลิตภัณฑ์นี้
อาจนำไปสู่การบาดเจ็บจากไฟฟ้าช็อตได้



- ห้ามใช้ผลิตภัณฑ์เป้ากับคนโดยตรง
เนื่องจากผลิตภัยที่เป็นพัดลมอากาศ ลมจึงถ่ายเข้าสู่แรง อย่าหันพัดลมไปทางเด็กหรือผู้สูงอายุโดยตรง เพราะอาจทำให้สั่งผลกระทบต่อสุขภาพ
- ห้ามใช้ผลิตภัณฑ์เป้ากับสัตว์เลี้ยงหรือพืชโดยตรง
 เพราะอาจส่งผลต่อกับสุขภาพของสัตว์เลี้ยงและขัดขวางการเจริญเติบโตของพืช

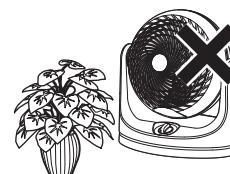



สิ่งที่ต้องทำ

- ใช้บันพื้นราบที่มั่นคงและแข็งแรง
การใช้ผลิตภัณฑ์บนพื้นไม่เรียบหรือไม่มั่นคง อาจทำให้ตกและอาจทำให้เกิดการบาดเจ็บได้
- วางในบริเวณที่ไม่สมสัคกับผู้มี/manualหรืออื่น ๆ
การไม่ปฏิบัติตามอาจนำไปสู่การบาดเจ็บหรือการเสียหายของสิ่งของโดยรอบ



ห้ามทำ

- ห้ามผลิตภัณฑ์ได้รับแรงกระแทกรุนแรง
อาจทำให้เกิดการทำงานไม่ปกติ เกิดเพลิงไหม้ หรือเสียชีวิตจากไฟฟ้าช็อตได้



ดูดปลั๊ก

- จับที่หัวปลั๊กเมื่อถอดปลั๊กผลิตภัณฑ์ อย่าจับที่สายไฟ
อาจทำให้สายไฟเสียหายและนำไปสู่การเกิดเพลิงไหม้/การเสียชีวิตจากไฟฟ้าช็อตได้
- ถอดปลั๊กผลิตภัณฑ์เมื่อไม่ใช้งานเป็นระยะเวลานาน
อาจนำไปสู่การเติ่อมสภาพของจนวนและทำให้เกิดเพลิงไหม้ หรือเสียชีวิตจากไฟฟ้าช็อตได้



ห้ามทำ

- ห้ามลากหัวอุดผลิตภัณฑ์ออก
อาจทำให้พื้นเสียหายและเป็นรอยชำรุดข่วนได้


ข้อควรระวังเกี่ยวกับตำแหน่งการจัดวาง

- กรุณาอย่าติดตั้งผลิตภัณฑ์ในสถานที่ใกล้กับการเผาergus สี โดยตรงของดวงอาทิตย์เครื่องปรับอากาศหรือกระแสไฟฟ้าอุ่นจากความร้อน การกระทำขานนี้อาจทำให้เกิดภัยจากการเสียรูปหรือมีการเปลี่ยนสีของผลิตภัณฑ์ซึ่งอาจส่งผลให้เกิดความผิดปกติ

- อย่าวางไว้ใกล้โทรทัศน์หรือวิทยุ เพราะอาจนำไปสู่การรบกวนทางแม่เหล็กไฟฟ้าต่อการทำงานของวิทยุหรือโทรทัศน์


การจัดวาง

ให้วางบนพื้นผิวเรียบ โดยไม่มีสิ่งกีดขวางไว้ๆ

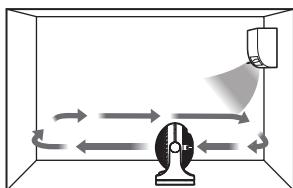


เมื่อใช้อุปกรณ์ทำความเย็น

ให้หันด้านหลังของผลิตภัณฑ์เข้าหาทางเดินของ
ปรับอากาศเพื่อสร้างกระแสลมและเพิ่ม
ความเย็น

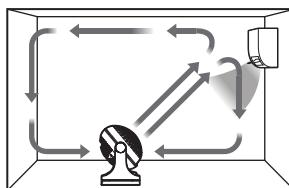


เมื่อใช้อุปกรณ์ทำความร้อน

เปิดอากาศเข้าสู่เครื่องปรับอากาศที่อยู่ทาง
ไฟอร์นิลหรือท่อสูญ เพื่อสร้างการหมุนเวียน
อากาศดูนจากด้านบน

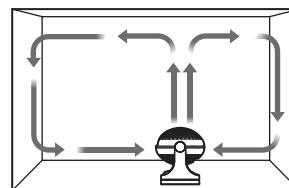


การหมุนเวียน

พัดลมที่เพดานเพื่อให้อากาศหมุนเวียน

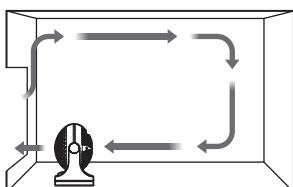

การแลกเปลี่ยนอากาศ

ดูดซับอากาศจากภายนอกและระบาย
อากาศภายในห้อง

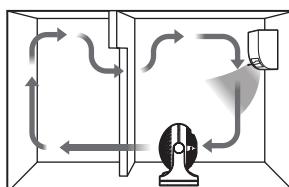


การหมุนเวียนระหว่างห้องสองห้อง


หมุนเวียนอากาศในห้องที่ติดกันระหว่าง
สองห้อง

ส่วนประกอบ

ด้านหน้า

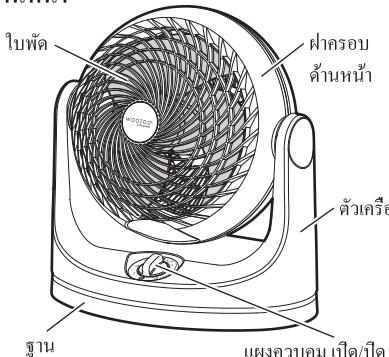


ด้านหลัง

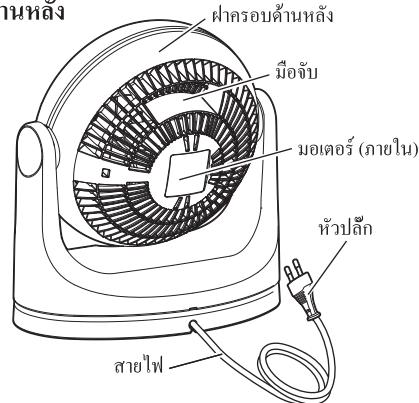

วิธีการใช้งาน


เลี้ยงปลัก

- ตรวจสอบให้แน่ใจว่าได้เสียบปลั๊กเข้าไปจนสุด

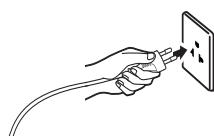


ปิด

- บิดเบี้นหมุนไปทางตัวเลขด้านซ้ายเพื่อเลือกระดับความแรง

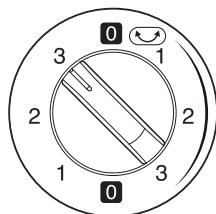

ปิด



- บิดเบี้นหมุนไปที่ตำแหน่ง “0” เพื่อหยุด

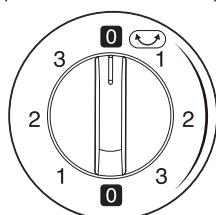

การล่าม

การล่ามในแนวอน


- เปิดการล่ามโดยบิดเบี้นหมุนไปทางตัวเลขด้านขวา

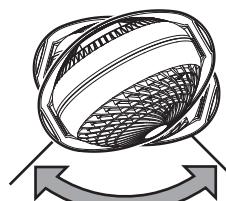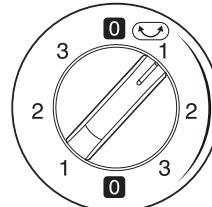

- อย่าหมุนกองของพัดลมด้วยมือต้องใช้สวิตช์เพื่อปรับการหมุนซ้ายขวา → ใช้ปุ่มหยุดเพื่อปรับทิศทางลม

การหมุนในแนวตั้ง (หมุนด้วยมือ)

- รุ่น PCF-MKM18 สามารถปรับได้ 7 ตำแหน่ง ตั้งแต่ -20° ถึง 90°
- รุ่น PCF-MKM15 สามารถปรับได้ 6 ตำแหน่ง ตั้งแต่ -22.5° ถึง 90°

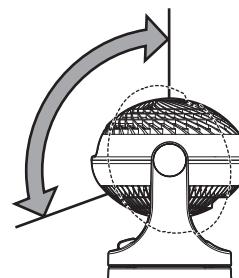

การทำความสะอาดและการบำรุงรักษา

กรุณารักษาความสะอาดอย่างสม่ำเสมอเพื่อการสะสมของฝุ่น อาจส่งผลเสียต่อผลิตภัณฑ์




- หากต้องการทำความสะอาดและบำรุงรักษาให้ปิดเครื่องและถอดปลั๊กออกจากทุกครั้ง
- มองตรวจสอบหลังจากการใช้งาน ตรวจสอบให้แน่ใจว่ามอเตอร์ยืนก่อนที่จะเริ่มทำความสะอาดและบำรุงรักษา

- ห้ามใช้พิมเสนอร์, แมลคอกออลด์, บエンชิน, สารละลายพื้นฐาน หรือสารฟอกขาว อาจทำให้เปลี่ยน, เสียรูปร่าง หรือเกิดความเสียหายต่อผลิตภัณฑ์

ภายนอก

- เช็ดผลิตภัณฑ์ด้วยผ้ามุ่งและแห้ง หากขังมีคราบอยู่ให้ใช้สารละลายเจือจางทำความสะอาด แล้วเช็ดออกภายในหลัง

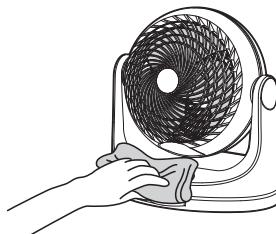


วิธีการจัดเก็บ

หากไม่ได้ใช้งานเป็นระยะเวลานาน ให้คุณด้วยถุงพลาสติก และเก็บไว้ในสถานที่ที่มีแสงแดดร้อน และความชื้นต่ำ

การแก้ไขปัญหา

หากมีความผิดปกติใด ๆ ระหว่างการใช้งาน โปรดตรวจสอบรายการต่อไปนี้ก่อนนำส่งซ่อม

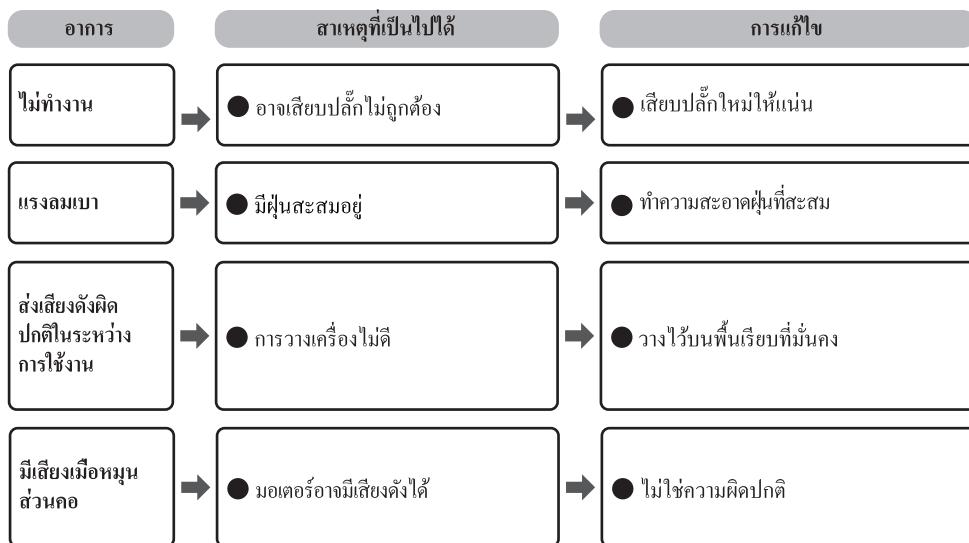


หากไม่สามารถแก้ไขปัญหาได้

โปรดตรวจสอบกับร้านค้าปลีก โดยสามารถโทรศัพท์ไปยังหมายเลขให้คำปรึกษาของร้านค้านั้น ๆ




- อย่าพยายามถอดและกันส่วน ช่อง หรือตัดแปลงผลิตภัณฑ์ที่หัวยศตามเอง



ข้อมูลกำหนดทางเทคนิค

หมายเลขผลิตภัณฑ์	PCF-MKM18	PCF-MKM15
แรงดันไฟฟ้าปกติ		220V~
ความถี่เครื่องวิ่ง		50Hz
ค่ากุณสมบัติการป้องกันของ การซื้อขายไฟฟ้า		Class II
กำลังไฟฟ้า	49W	35W
ปรับระดับการไฟเลี้ยงอากาศ		3 Stages
ความยาวสายไฟ (โดยประมาณ)		1.4m
ขนาดผลิตภัณฑ์ (โดยประมาณ) (ไม่รวมสายไฟ)	W291XD191XH310mm	W241XD177XH286mm
น้ำหนักผลิตภัณฑ์ (โดยประมาณ)	2.1 kg	1.6 kg

※ ข้อมูลกำหนดทางเทคนิคอาจมีการเปลี่ยนแปลง ขอสงวนสิทธิในการเปลี่ยนแปลงเงื่อนไขใด ๆ โดยไม่จำต้องแจ้งให้ทราบล่วงหน้า



การรับประกันและบริการหลังการขาย

โปรดอ่านเนื้อหาต่อไปนี้อย่างละเอียด

■ ในส่วนรับเงินการซื้อ

กรุณาอ่านเรื่องรับเงินการซื้อที่ว่า “ค่าปลีกเมื่อ คุณซื้อ ผลิตภัณฑ์” คุณจะต้องชำระค่าธรรมเนียมการซื้อรวม เช่น ภาษีอากรไม่สามารถเดสคัลป์ไป เนื่องจากคุณต้องเก็บไว้ใน เส้นรับเงินการซื้อไว้ให้ดี

■ ภายใต้ระยะเวลาประกัน

ระยะเวลาประกัน: จำกัดเวลาจราจรไว้ในบริการประกัน (ด้านหลัง) บริษัทฯ ให้การซ่อมฟรีตาม “ข้อกำหนดการรับประกัน” ภายใต้เงื่อนไขการทำงานที่ผิดปกติภายในระยะเวลา เรับประกัน

■ หมดระยะเวลาการรับประกัน


โปรดตรวจสอบวันที่ค่าปลีกของคุณและคุณต้องจ่ายค่าซ่อมที่เกี่ยวข้อง โดยหลังการซ่อม เช่น คุณสามารถจ่ายให้เจ้าของสินค้าได้ ซึ่งจะถูกเรียกเก็บเงินค่าซ่อมบางชนิด ตามความประสงค์ของลูกค้า

■ เกี่ยวกับระยะเวลาที่เหลือของขึ้นส่วนอะไหล่

ระยะเวลาที่เหลือของขึ้นส่วนอะไหล่หลักของริมบท กือ 5 ปีหลังจากผลิตภัณฑ์หยุดการผลิต ขึ้นส่วนอะไหล่ที่ใช้งาน สอดคล้องกับอะไหล่ที่จำเป็นในการคงการใช้งานของผลิตภัณฑ์

■ เกี่ยวกับบริการหลังการขาย

โปรดตรวจสอบวันที่ค่าปลีกของคุณสำหรับบัญชีทางการขายอื่น ๆ



พัดลมหมุนเวียนอาคาร PCF-MKM18 / PCF-MKM15

ใบรับประกัน

ใบเสร็จรับเงินการซื้อประกันเป็นส่วนหนึ่งของใบรับรองเพื่อให้คุณสามารถทำการซ่อมได้ที่ร้านภายในระยะเวลาอันดังไปนั้นจากวันที่ซื้อตามข้อกำหนดดังต่อไปนี้

วันที่ซื้อ *	ระยะเวลาการรับประกัน
	1 ปีนับจากวันที่ซื้อ
แบบ	ชื่อ: _____ รหัสไปรษณีย์: _____ หมายเลขอุตสาหกรรม () -
	ชื่อร้าน: ที่อยู่: หมายเลขอุตสาหกรรม () -

สำหรับร้านค้าปลีก: โปรดกรอกข้อมูลในช่องที่มีสัญลักษณ์ * แล้วส่งไปยังลูกค้าของคุณ

ข้อกำหนดการรับประกัน

- 1 บริษัทจะจัดให้มีการซ่อมแซมหรือเปลี่ยนชิ้นส่วนที่ชำรุดเสื่อมสภาพที่มีการทำงานผิดปกติ หรือความเสียหายที่เกิดขึ้นจากไฟฟ้าสภาพอากาศใช้งานปกติ โดยอุบัติเหตุ ให้ความสนใจตามลักษณะที่ได้อธิบายไว้ในสัญญาการซื้อขายและผลิตภัณฑ์
- 2 การซ่อมแซมตามการรับประกันสามารถทำได้โดยศูนย์บริการที่ได้รับอนุญาต เท่านั้น เมื่อกรอกใบเรียกร้องการรับประกัน จะต้องส่งใบใบเสร็จการชำระเงิน ทั้งหมด (พร้อมวันที่ซื้อ)
- 3 เพื่อทำการรับประกันจะจำต้องอยู่ที่การซ่อมแซมที่บริการนั้น ไม่มีการรับประกันที่ใดให้อภัยเมื่อย้ายสถานที่ในระยะเวลาอันดับรับประกัน การรับประกันจะถูกยกเว้นหากย้ายไปอื่นๆ
- 4 ไม่ว่ารับประกันในกรณีของ:
 - ① การชำรุดสึกหรอความไม่ปกติ
 - ② การใช้งานไม่ถูกต้อง เช่น การไม่โหลดเดินพิภัตดองเครื่อง ใช้อุปกรณ์เสริมที่ไม่ผ่านการอนุมัติ
 - ③ ขัดข้องและเสียหายที่เกิดจากการกระทำการทารุณของผู้ใช้งาน
 - ④ ขัดข้องและเสียหายที่เกิดจากไฟฟ้าเมืองไทย แต่เดินไฟฟ้าหรือขั้วหัวลงชาร์จมารชิดตัวอื่น ๆ
 - ⑤ ความเสียหายที่เกิดจากการไม่ปฏิบัติตามอยู่บ้านที่ซื้อใช้ เช่น การเชื่อมอุปกรณ์ แหล่งจ่ายไฟไม่ใช่ของพ่อ หรือไม่ปฏิบัติตามคำแนะนำที่แนบมาในการติดตั้ง
 - ⑥ ขัดข้องและเสียหายระหว่างการจัดการและขั้นตอนการทำงานส่วนหลังการซื้อ

- ⑦ ส่วนประกอบหรือไขว้ไฟฟ้าบางส่วนหรือทั้งหมดถูกออกโดยอุบัติเหตุ
- ⑧ ไม่สามารถแสดงในสิ่งที่ระบุเงื่อนไขการซื้อ
- ⑨ ในรับประกันไม่ได้รับประกันที่ซื้อต่อไปนี้ ชื่อร้านค้าปลีก หรือข้อมูลข้างต้นใด ๆ ถูกแก้ไข

5 ในรับประกันมีผลบังคับใช้ในประเทศไทยเท่านั้น


6 ในรับประกันจะดำเนินการซ่อมแซมและตรวจสอบท้องที่บ้านที่ไม่ใช่ประเทศไทย

บันทึกข้อตกลงการซ่อม

- * ใบเสร็จบันทึกการซ่อมแซมเป็นส่วนหนึ่งของใบรับรองที่ออกโดยบังคับ เนื่องจากการซ่อมและการเปลี่ยนทดสอบที่ระบุไว้อย่างชัดเจนในสัญญาซื้อขาย อย่างไรก็ตาม ในรับประกันจะจัดการให้สิทธิ์ตามกฎหมายของลูกค้าได้ ต่อวิชาชีพ (ผู้รับผิดชอบในการรับประกัน) และหัวหน้าผู้ดูแลโครงการ สอบถามกับร้านค้าปลีกของคุณสำหรับเรื่องที่เกี่ยวกับการซ่อมแซมและระยะเวลา รับประกัน
- * โปรดตรวจสอบกับ "การรับประกันและบริการหลังการขาย" สำหรับการซ่อมแซม ด้านล่าง หลังระยะเวลาประกันและระยะเวลาที่เหลือของรับประกันจะหมด

ผู้ซื้อ:	บริษัท อิริส อายาม่า จำกัด
ที่อยู่:	388 Exchange Tower, 29th Floor, Unit 2901-2904, Sukhumvit Road, Klongtoey, Klongtoey, Bangkok, 10110
โทรศัพท์:	090620_WAJ_DIM_01
โทรสาร:	856672

IRIS OHYAMA(THAILAND) CO.,LTD.



CODE : 856672 @ THPCF-MKM15-18-EN
サイズ : 210mm×148mm (A5) 12 ページ
K 材質 : 上質紙 四六判 70kg (81.4kg)
刷色 : 1C (Black)

EN

PCF-MKM18/PCF-MKM15


WOOZOO®
by IRIS OHYAMA

Indoor for home use

Circulator fan

PCF - MKM18 / PCF - MKM15

User manual

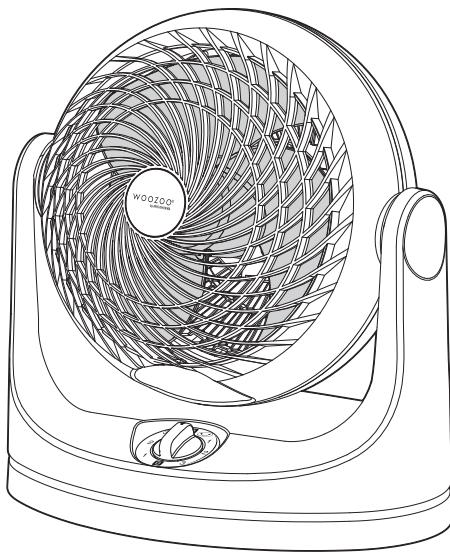

<PCF-MKM18>

Contents

Preparations


Safety precautions	2
Precautions for placing	5
How to place	6
Parts	6

Operation instructions

How to use	7
Cleaning and maintenance	8
Storage method	8

Others

Troubleshooting	9
Specifications	10
Warranty and after-sales services	11
Warranty card	Back cover



Safety precautions

Make sure to follow the precautions described below to avoid injury or unnecessary property loss to anybody. The safety precautions are classified according to the degree of harm or damage caused by misuse.

Examples of symbols



This symbol means
“reminding”.



This symbol means
“forbidden”.



This symbol means
necessary “instructions”.



Warning

The symbol means matters which may lead to death or serious injury during faulty operation.



Do not
disassemble

- Please do not disassemble, repair or modify this product by yourself**

Failure to do so may cause fire, electric shock or injury.

Please check with the retail shop by calling the consultation number for related matters.



Be sure to

- In case of abnormality or breakdowns, please stop using immediately and unplug the power plug from the power socket and cut off the power supply**

Failure to do so may cause fire or electric shock.

[Cases for abnormalities]

- Abnormal sounds or peculiar smells
- Abnormal heating of the power plug and power cord
- Power on intermittently when power cord is moved
- Breakdowns during operation
- Tingling or burning pain caused by electric shocks when touching the product with the hands

→ Please stop using and check with the retail shop by calling the consultation number for related matters.




Be sure to

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance**



Be sure to

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard**



Correct use of power plug and power cord



Be sure to

- **Please remove dust from the power plug regularly**
Dust accumulation can cause fire or otherwise electric shock due to insulation failures.
- **Please insert the power plug firmly into the power socket**
Failure to do so may cause fire or electric shock due to short circuit.



Unplug the product

- **Make sure to unplug the power plug from the power socket before cleaning, maintaining, checking and moving the product**
Failure to do so may cause electric shock, burns or injury.



Avoid contact with wet hands

- **Do not insert or otherwise unplug the power plug with wet hands**
Failure to do so may cause electric shock or injury.




Prohibited

- **The product can only be powered by 220V~**
Failure to do so may cause fire.
- **Do not use damaged power cord, power plug and loose socket**
Failure to do so may cause fire or electric shock due to short circuits.
- **Please do not damage the power cord**
Please do not damage, damage processing, forcefully bend, pull, twist or squeeze the power cord, or place weight on it.
Failure to do so may cause fire or otherwise electric shock due to damage to the power cord.
- **Please do not energize the product with the power cord tangled**
Failure to do so may cause fire. Make sure to unfold the power cord before use.
- **Do not stretch the power cord when moving or otherwise storing it**
Failure to do so may cause fire or electric shock.



Prohibited

- **Do not point this product at heating equipment such as furnaces**
Failure to do so may cause sparks, carbon monoxide poisoning, fire, etc. due to incomplete combustion of the heater.



Safety precautions

continued



Prohibited

- Please do not spray mist on the body (insecticide, hairdressing mist spray, lubricating oil, etc.)
- Do not operate this product near flammable liquids (such as kerosene, gasoline, thinners, etc.), objects with sparks or flammable dust


Failure to do so may cause fire.



Prohibited

- The product is utilized indoors only
- Do not use the product around any object that hinders ventilation
- Do not cover the product with combustible items such as clothing, paper or plastic bags before use
- Do not use the product in a place with too much dust or powder

Failure to do so may cause fire or electric shock.

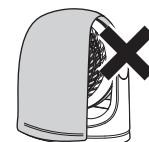

Avoid getting
the product wet

- Do not use the product in a damp place, such as a bath or otherwise near water source
- Do not soak the body of the product in water or pour water on it

Failure to do so may cause fire or electric shock.



Caution

Faulty operation may lead to personnel injury or article damage.



Prohibited

- Do not sit or otherwise lean on the product

Failure to do so may cause electric shock or burns.




Prohibited


- Do not blow directly on people

The wind is relatively strong. Do not blow directly on young children and the elderly. Failure to do so may affect their health.

- Do not blow directly on any pet or plant

Failure to do so may affect the health of your pets and hinder the growth of your plants.

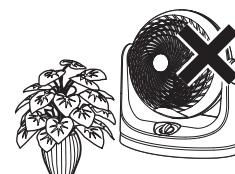



- Please use this product on a smooth table

Failure to do so may cause injury or product failure due to a fall.

- Do not use near curtains, etc.

Failure to do so may cause damage to surrounding items and injury.



Prohibited

- Do not strike the body of the product

Failure to do so may cause malfunction, fire or electric shock.



Unplug the product

- Make sure to hold the power plug when unplugging it. Do not drag the power cord

Failure to do so may cause fire and electric shock caused by damaged power cord.

- If you do not use the product, make sure to unplug the power plug from the power socket

Failure to do so may cause electric shock or fire caused by aging insulation.



Prohibited

- Please do not drag and remove this product

Failure to do so may lead to scratches on the tatami or floor.


Precautions for placing

- Please do not install the product in a place near the direct radiation of the sun, air conditioning or a warm current from a heating stove
Failure to do so may lead to deformation or discoloration of the product, which may result in malfunction.

- Do not operate the product around a radio or TV
Failure to do so may lead to electromagnetic interference to the normal operation of the radio or TV.


How to place

Please use it on a smooth, obstacle-free desktop or on the ground.

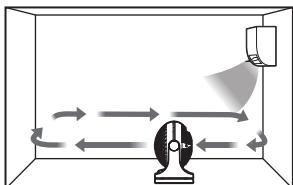


When using the cooling equipment

Place the product back next to the air conditioner, so that cool breeze circulates fully from bottom to top.

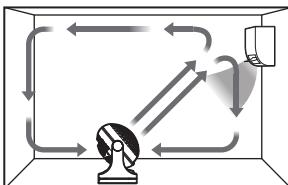


When using the heating equipment

Blow air downward in the direction of the air conditioning or from raised furniture to generate the recirculating hot air from the top.

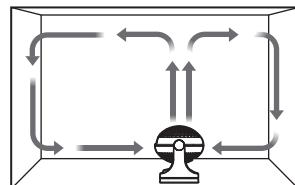


Circulation

Blow to the ceiling to recirculate the air.

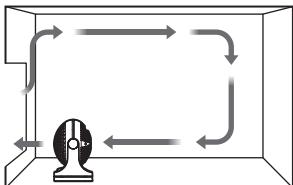

Air exchange

Absorb the outside air and discharge the air in the room out at the same time.

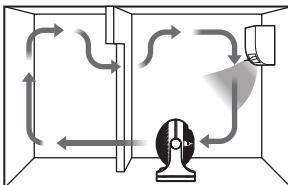


Circulation between two rooms


Circulate the air between two adjoining rooms.


Parts

Front

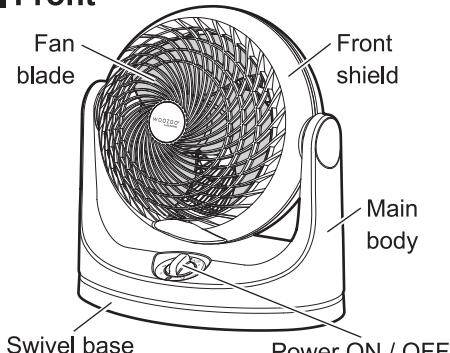

Back

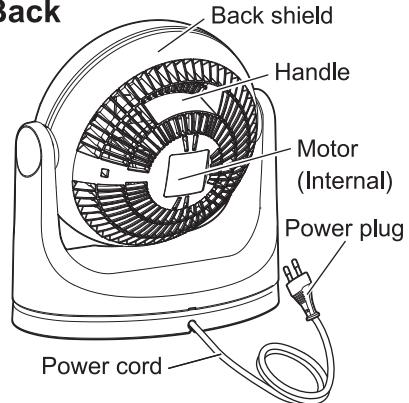




How to use


■ Connect the power plug

- Please insert the power plug firmly into the power socket.

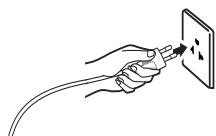


■ Operating

- Please rotate the power switch to select the required wind power.

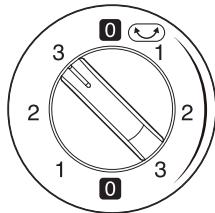

■ Off



- Please turn the power switch to OFF.

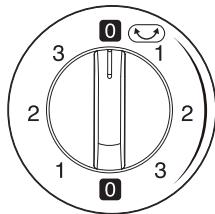

■ Swing head

Left and right head swing


- Turn the power switch to the swing head direction.

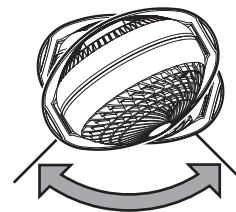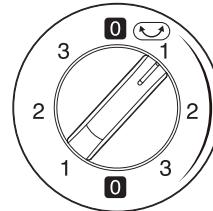


- Do not manually adjust the left and right swinging angle; make sure to use the head swing switch to swing the head → Stop to adjust the wind direction.

Upper and lower head swing (manually)

- The PCF-MKM18 can be adjusted in 7 positions from -20° to 90°.
- The PCF-MKM15 can be adjusted in 6 positions from -22.5° to 90°.

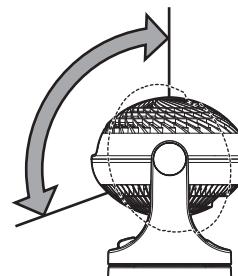



Cleaning and maintenance

Please clean regularly to avoid dust accumulation and failure.




- Make sure to cut off the power supply and pull up the power cord before cleaning and maintenance.
- The motor keeps heating after operation. Make sure to clean and maintain after the motor is cooling down.

- Please do not use diluents, alcohol, volatile oils, alkaline detergents, discoloring agents, etc.

Failure to do so may lead to discoloration, transformation, deterioration, damage or breakdown.


Main body

- Wipe with a soft and dry cloth. If it is difficult to clean the dirt, remove it with a cloth with diluted neutral detergent, and repeatedly wipe it after wringing it out.

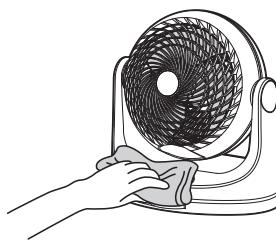

Storage method

Cover the main body of the product with a plastic bag and then store it in a dry and cool place outside the direct action of the sunlight, when you are going to stop using it for extended periods of time.



Troubleshooting

Please confirm the following problems after reading the operation manual carefully before you entrust to repair it.

State	Cause	Measures
Out of operation	● The power plug is not inserted properly into the power socket	● Please insert the power plug securely into the power socket.
Low air volume	● Dust accumulation	● Please maintain the product and clean the dust.
Make an abnormal sound during operation	● Not horizontally placed	● Please use this product on a smooth table.
It makes noises while swinging	● It makes noises when it starts swinging, which is specific to motor operation	● This is not an anomaly.

If you still cannot solve the problem

Please check with the retail shop by calling the consultation number.




- Do not disassemble, repair or transform the product without approval.

Specifications

Product model	PCF-MKM18	PCF-MKM15
Rated voltage		220V~
Rated frequency		50Hz
Protection against electric shock		Class II
Rated power	49W	35W
Air flow adjustment		3 Stages
Power cord length (about)		1.4m
Product size (about) (Without power cord)	W291×D191×H310mm	W241×D177×H286mm
Product weight (about)	2.1 kg	1.6 kg

※ The specifications may be changed with no additional notification.



Warranty and after-sales services

Please make sure to carefully read the following contents.

■ Purchase receipt

Be sure to request a Purchase Receipt at the retail shop when you purchase the product.

The repair fee needs to be paid if you are unable to present a Purchase Receipt. Therefore, you must keep the Purchase Receipt securely.

■ Within the warranty period

Warranty period: Time limit specified by the warranty card (back cover).

The company will provide free repair as per the "Warranty Provisions" under abnormal operating conditions within the warranty period.

■ Over the warranty period


Please check with your retail shop and you will have to pay for related repair expenses. It will be possible to maintain the functions of the product after repair. A certain repair cost will be charged according to customer's requirements.

■ About the remaining period of spares parts

The remaining period of the company's major spare parts is 5 years after the production stop of the product. The spare parts in operation correspond to the spare needed to maintain the functions of parts needed to maintain the functions of the product.

■ About after-sales service

Please check with your retail shop for other after-sales issues.



Air circulator PCF-MKM18 / PCF-MKM15 Warranty card

The purchase receipt constitutes the certificate so that you can enjoy free repairs in accordance with the following repair provisions within the next period from the day of purchase.

Purchase date ☈ Warranty period		Warranty period 1 years from the day of purchase Except for consumables	
Customer	Name:	※ Retail shop	Shop name: Address:
	Postal code:		
	Telephone number () -		Telephone number () -

Notice to retail shops: Please fill in the fields marked with a ☈ symbol and then deliver it to your customer.

Warranty provisions

- 1 The company will provide free repairs or replacements in conditions of malfunction or damage present under normal operating conditions as per the aspects that must be given attention according to the labels affixed on the operation manual and the product.
 - 2 The company will provide free repairs or replacements in conditions of malfunction or damage present under normal operating conditions as per the aspects that must be given attention according to the labels affixed on the operation manual and the product.
 - 3 The warranty contents are only limited to the free repair of the product. No other warranty service is provided even within the warranty period. The warranty only covers defects in materials or workmanship.
 - 4 The warranty will not apply in cases of:
 - ① Normal wear and tear
 - ② Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
 - ③ Failures and damages caused by product crashes after purchase. The use of force or damage caused by external influences
 - ④ Failures and damages caused by fires, earthquakes or other natural disasters
 - ⑤ Damage caused by non-compliance with the user manual, e.g. Connection
- to an inadequate power supply or non-compliance with the installation instructions
- ⑥ Failures and damages during the handling and transportation process after purchase
 - ⑦ Partially or completely dismantled appliances
 - ⑧ Not being able to show the purchase receipt
 - ⑨ The warranty card has not been filled with the date of purchase, the customer's name, the name of the retail shop or any of the above data has been modified
 - 5 The warranty card is only valid in THAILAND.
 - 6 The warranty card must be the original and must be kept appropriately.

Repair memorandum

- ※ The purchase receipt constitutes the certificate corresponding to the repair and replacement conditions clearly stipulated in the user manual. However, the warranty card restricts any customer from enjoying any legal rights from the company (person responsible for the warranty) and any dealer. Please check with your retail shop for repair-related matters after the warranty period.
- ※ Please check with the "Warranty and after-sales service" for any repairs after the warranty period and the remaining period of spare parts.

Client : IRIS Ohyama Inc.,
 Address : 2-12-1, Itsutsubashi, Aoba-ku, Sendai-shi, Miyagi-ken, Japan
 Manufacturer : IRIS HOME PRODUCTS (GUANGZHOU)CO.,LTD.
 Address : 1 DONGJI ROAD, HUANGPU DISTRICT, GUANGZHOU
 GUANGDONG P.R.CHINA

Distributor :

IRIS OHYAMA(THAILAND) CO.,LTD.

Address : 388 Exchange Tower, 29th Floor, Unit 2901-2904,
 Sukhumvit Road, Klongtoey, Klongtoey, Bangkok, 10110

856672

090620_WAJ_DIM_01