


WOZOO®  
by IRIS OHYAMA

## พัดลมหมุนเวียนอากาศ

PCF-SC15T

### คู่มือการใช้งาน

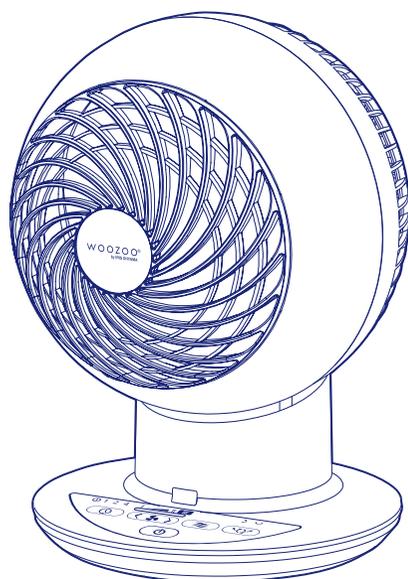

### สารบัญ

#### การเตรียมความพร้อมก่อนการใช้

ข้อควรระวังด้านความปลอดภัย .....	2
การจัดวาง .....	7
ข้อควรระวังเกี่ยวกับตำแหน่งการจัดวาง .....	7
ส่วนประกอบ .....	8

#### คำแนะนำการใช้งาน

รีโมตคอนโทรล .....	9
วิธีการใช้งาน .....	10
การทำความสะอาดและการบำรุงรักษา .....	13

#### อื่นๆ

การแก้ไขปัญหา .....	14
ข้อมูลทางเทคนิค .....	15
การรับประกันและบริการหลังการขาย .....	15
ใบรับประกัน .....	ปกหลัง

## ข้อควรระวังด้านความปลอดภัย

กรุณาปฏิบัติตามข้อควรระวังที่อธิบายไว้ด้านล่างเพื่อหลีกเลี่ยงการบาดเจ็บหรือความเสียหายทางด้านทรัพย์สิน ข้อควรระวังด้านความปลอดภัยแบ่งตามระดับความอันตรายหรือความเสียหายที่เกิดจากการใช้งานในวิธีที่ไม่ถูกต้อง

### ความหมายของสัญลักษณ์



สัญลักษณ์นี้หมายถึง  
ข้อควรระวัง



สัญลักษณ์นี้หมายถึง  
สิ่งที่ห้ามทำ



สัญลักษณ์นี้หมายถึง  
สิ่งที่ต้องทำตาม



### คำเตือน

การใช้งานไม่ถูกวิธีอาจนำไปสู่การเสียชีวิตหรือบาดเจ็บสาหัสได้



ห้ามถอดแยก  
ชิ้นส่วน

- โปรดอย่าถอดแยกชิ้นส่วน ซ่อมหรือดัดแปลงผลิตภัณฑ์นี้ด้วยตัวเอง การไม่ปฏิบัติตามอาจทำให้เกิดไฟไหม้ ไฟฟ้าช็อต, ได้รับบาดเจ็บ และอุบัติเหตุอื่น ๆ การไม่ปฏิบัติตามอาจทำให้เกิดไฟไหม้ ไฟฟ้าช็อตหรือได้รับบาดเจ็บ โปรดตรวจสอบกับร้านค้าปลีก โดยโทรไปที่หมายเลขให้คำปรึกษาสำหรับเรื่องที่เกี่ยวข้อง



ถอดปลั๊ก

- กรณีที่เครื่องไม่ทำงานและทำงานผิดปกติ ให้หยุดใช้ทันที และปิดสวิทช์ ถอดปลั๊กไฟออกจากเต้ารับเพื่อป้องกันไม่ให้เกิดควันไฟ อัคคีภัย และไฟฟ้าช็อต
- กรณีผิดปกติ
- กลิ่นไหม้ เสียงผิดปกติในการทำงาน
  - ปลั๊กไฟและสายไฟมีความร้อนผิดปกติ
  - เครื่องติ๊กๆคักๆ เมื่อเคลื่อนย้ายสายไฟ
  - เครื่องหยุดทำงานบ่อยในขณะที่ใช้งาน
  - มีอาการชากจากไฟฟ้าดูดเมื่อสัมผัสผลิตภัณฑ์
- ➡ โปรดหยุดใช้และตรวจสอบกับร้านค้าปลีก โดยโทรไปที่หมายเลขให้คำปรึกษาสำหรับเรื่องที่เกี่ยวข้อง



หลีกเลี่ยงไม่ให้  
ผลิตภัณฑ์ไปโดนน้ำ

- ห้ามใช้ผลิตภัณฑ์ในสถานที่ใกล้แหล่งน้ำ, ห้องอาบน้ำและสถานที่ชื้นอื่นๆ
  - ห้ามแช่ตัวผลิตภัณฑ์ในน้ำ หรือเทน้ำบนผลิตภัณฑ์
- การไม่ปฏิบัติตามอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อต

## การใช้ปลั๊กไฟและสายไฟที่ถูกต้อง



สิ่งที่ต้องทำ

- **โปรดกำจัดฝุ่นปลั๊กไฟเป็นประจำ**  
การสะสมของฝุ่นสามารถทำให้เกิดไฟไหม้และไฟฟ้าช็อตได้เนื่องจากความเสียหายของฉนวนที่เกิดจากการสะสมของฝุ่น
- **ตรวจสอบให้แน่ใจว่า เสียบปลั๊กไฟเข้ากับเต้ารับอย่างแนบสนิท**  
เพื่อไม่ให้เกิดไฟไหม้และไฟฟ้าช็อตเนื่องจากไฟฟ้าลัดวงจร
- **หากสายไฟชำรุดจะต้องถูกเปลี่ยนโดยผู้เชี่ยวชาญจากผู้ผลิต**  
แผนกบำรุงรักษาหรือแผนกที่มีคุณสมบัติใกล้เคียงกันเพื่อหลีกเลี่ยงอันตราย



ถอดปลั๊ก

- **ต้องแน่ใจว่าได้ถอดปลั๊กไฟก่อนที่จะทำความสะอาดผลิตภัณฑ์**  
การบำรุงรักษา การตรวจสอบและการเคลื่อนย้ายเพื่อไม่ให้เกิดไฟฟ้าช็อตและการบาดเจ็บ



ห้ามสัมผัส  
ขณะที่มือเปียก

- **ห้ามเสียบหรือถอดปลั๊กไฟด้วยมือที่เปียก**  
การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือบาดเจ็บได้



ห้ามทำ

- **ผลิตภัณฑ์ใช้กับไฟ 220V~ เท่านั้น**  
การไม่ปฏิบัติตามอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อต
- **อย่าใช้สายไฟที่ชำรุด**  
ปลั๊กไฟ หรือเต้ารับไฟหลวมการไม่ปฏิบัติตามอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อต
- **อย่าทำให้สายไฟเสียหาย**
- **ห้ามทำลาย**  
กระบวนการทำให้เสียหาย ออกแรงอ ดึง บิดหรือบีบสายไฟ หรือวางของหนักทับสายไฟ  
การไม่ปฏิบัติตามอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อตเนื่องจากสายไฟเสียหาย
- **อย่าใช้ผลิตภัณฑ์กับสายไฟที่พันกัน**  
การไม่ปฏิบัติตามอาจทำให้เกิดไฟไหม้
- **ห้ามดึงสายไฟขณะเคลื่อนย้ายหรือจัดเก็บ**  
การไม่ปฏิบัติตามอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อต

## ข้อควรระวังด้านความปลอดภัย ต่อ



สิ่งที่ต้องทำ

- อุปกรณ์ที่ไม่เหมาะสำหรับการใช้งานโดยบุคคล (รวมถึงเด็ก) ที่มีความสามารถทางร่างกายประสาทสัมผัสหรือจิตใจไม่สมบูรณ์หรือขาดประสบการณ์และความรู้ หากใช้งานควรได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้งานเครื่อง โดยผู้รับผิดชอบด้านความปลอดภัย
- เด็กควรได้รับการดูแลเพื่อให้แน่ใจว่าพวกเขาไม่ได้เล่นกับอุปกรณ์
- หากสายไฟชำรุด จะต้องเปลี่ยนโดยผู้ผลิต ตัวแทนบริการหรือบุคคลที่มีคุณสมบัติใกล้เคียงกันเพื่อหลีกเลี่ยงการเกิดอันตรายห้ามใช้ในบริเวณที่มีความชื้นมากเกินไป



ห้ามทำ

- ผลิตภัณฑ์นี้ใช้ภายในอาคารเท่านั้น
- ห้ามใช้ผลิตภัณฑ์รอบวัตถุใดๆ ที่กีดขวางการระบายอากาศ
- ก่อนใช้งาน อย่าคลุมผลิตภัณฑ์ด้วยสิ่งของที่ติดไฟได้ เช่น เสื้อผ้า, กระดาษหรือถุงพลาสติก
- อย่าใช้ผลิตภัณฑ์ในสถานที่ซึ่งมีฝุ่นหรือผงแข็งจำนวนมาก หรือสาเหตุนี้อาจทำให้เกิดไฟไหม้ได้



ห้ามทำ

- อย่าใช้สเปรย์ฉีดพ่น (ยาฆ่าแมลง, สเปรย์ฉีดผม, น้ำมันหล่อลื่น ฯลฯ)
- ห้ามใช้งานผลิตภัณฑ์ใกล้ของเหลวที่ติดไฟได้ เช่น น้ำ, น้ำมัน, น้ำมันเบนซิน, ทินเนอร์ และวัตถุไวไฟอื่นๆ หรือเศษขยะที่ติดไฟได้ การไม่ปฏิบัติตามอาจทำให้เกิดไฟไหม้



ห้ามทำ

- อย่าใช้ผลิตภัณฑ์ใกล้ผ้าม่าน ฯลฯ เพื่อหลีกเลี่ยงความเสียหายต่อสิ่งของรอบตัวและทำให้เกิดการบาดเจ็บ



สิ่งที่ต้องทำ

- ตรวจสอบให้แน่ใจว่าใช้งานผลิตภัณฑ์บนพื้นราบและมั่นคง มิฉะนั้น อาจเกิดการบาดเจ็บต่อบุคคลหรือความเสียหายต่อทรัพย์สิน โดยรอบ
- อย่าใช้ผลิตภัณฑ์ใกล้กับม่านม้วน มิเช่นนั้นอาจทำให้เกิดความเสียหายต่อสิ่งของโดยรอบหรือเกิดการบาดเจ็บ



## ข้อควรระวัง

การใช้งานไม่ถูกวิธีอาจทำให้เกิดการบาดเจ็บหรือความเสียหายได้



ห้ามทำ

- ห้ามนั่งหรือเอนตัวอิงผลิตภัณฑ์ เพื่อไม่ให้เกิดไฟฟ้าช็อตและการบาดเจ็บ



ห้ามทำ

- อย่าเป่าลมใส่ร่างกายโดยตรง พัดลมมีพลังงานลมสูงกว่าผลิตภัณฑ์ทั่วไปมาก อย่าเป่าลมให้เด็กและผู้สูงอายุโดยตรงเพื่อหลีกเลี่ยงผลกระทบต่อสุขภาพ
- ห้ามเป่าใส่สัตว์เลี้ยงหรือพืชใดๆ โดยตรง หากไม่ปฏิบัติตาม อาจส่งผลต่อสุขภาพของสัตว์เลี้ยงและขัดขวางการเจริญเติบโตของพืช



ถอดปลั๊ก

- ตรวจสอบให้แน่ใจว่าถอดปลั๊กไฟไว้เมื่อถอดปลั๊กออก ห้ามลากสายไฟหากไม่ปฏิบัติตามอาจเป็นสาเหตุทำให้เกิดไฟฟ้าช็อต ไฟฟ้าลัดวงจรและไฟไหม้เนื่องจากความเสียหายของสายไฟ
- หากคุณไม่ใช้งานผลิตภัณฑ์ ตรวจสอบให้แน่ใจว่าได้ถอดปลั๊กไฟออกจากเต้ารับแล้ว หากไม่ปฏิบัติตามอาจเป็นสาเหตุทำให้เกิดไฟฟ้าช็อต และไฟไหม้เนื่องจากฉนวนเก่า



ห้ามทำ

- ห้ามลากหรือถอดผลิตภัณฑ์ออก อาจทำให้พื้นเสียหายและเป็นรอยขีดข่วนได้

## ข้อควรระวังด้านความปลอดภัย ต่อ

ข้อควรระวังเกี่ยวกับแบตเตอรี่ที่ใช้ในรีโมตคอนโทรล



สิ่งที่ต้องทำ

- ระหว่างการใส่แบตเตอรี่ให้ตรวจสอบขั้วบวกและขั้วลบของแบตเตอรี่ โดยควรใส่แบตเตอรี่ให้ถูกต้องตามคำแนะนำ เพื่อป้องกันไม่ให้แบตเตอรี่ชำรุดหรือรั่วเนื่องจากการติดตั้งที่ไม่ถูกต้อง โดยอาจเป็นสาเหตุของไฟไหม้หรือการปนเปื้อนวัตถุโดยรอบ
- ถอดแบตเตอรี่ออกเมื่อไม่ได้ใช้งานเป็นเวลานาน เพื่อป้องกันไม่ให้แบตเตอรี่รั่ว ซึ่งอาจเป็นสาเหตุของไฟไหม้ การบาดเจ็บและการปนเปื้อนของวัตถุโดยรอบ  
ในกรณีที่เกิดการรั่วของแบตเตอรี่ ให้ทำความสะอาดบริเวณรอบๆ ขั้วแบตเตอรี่และใส่แบตเตอรี่ใหม่  
หากเกิดการสัมผัสโดนแบตเตอรี่โดยไม่ตั้งใจ ให้รีบล้างออกด้วยน้ำปริมาณมากทันที



ห้ามถอดแยก  
ชิ้นส่วน

- อย่าถอดชิ้นส่วนแบตเตอรี่ อาจทำให้ผิวหนังหรือเสื้อผ้าเสียหายได้




ห้ามทำ

- ห้ามวางและเก็บผลิตภัณฑ์ไว้กับใกล้วัตถุที่เป็นโลหะ มีเช่นนั้นอาจทำให้เกิดไฟฟ้าลัดวงจรเนื่องจากแบตเตอรี่รั่วและทำให้เกิดความเสียหาย
- ห้ามใช้แบตเตอรี่อื่นนอกเหนือจากรุ่นที่ระบุไว้ เพื่อป้องกันไม่ให้แบตเตอรี่รั่วซึ่งอาจเป็นสาเหตุของไฟไหม้ การบาดเจ็บและการปนเปื้อนของวัตถุโดยรอบ
- อย่าชาร์จแบตเตอรี่ เพื่อป้องกันไม่ให้แบตเตอรี่รั่วซึ่งอาจเป็นสาเหตุของไฟไหม้ การบาดเจ็บและการเผาไหม้


## การจัดวาง

กรุณาวางผลิตภัณฑ์นั้นบนพื้นผิวเรียบหรือพื้นราบที่ปราศจากสิ่งกีดขวางใดๆ

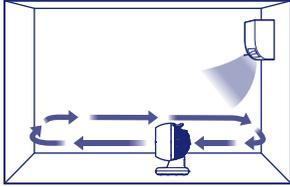


### เมื่อใช้อุปกรณ์ทำความเย็น

วางให้ด้านหลังของผลิตภัณฑ์อยู่ติดจากเครื่องปรับอากาศ เพื่อให้ลมเย็นไหลเวียนได้อย่างเต็มที่จากบนลงล่าง

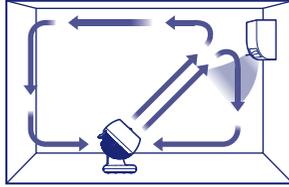


### เมื่อใช้อุปกรณ์ทำความร้อน

เป่าลมไปที่เครื่องปรับอากาศหรือเป่าลมลงล่างเพื่อพัดไล่ลมร้อนจากด้านบนให้หมุนเวียน

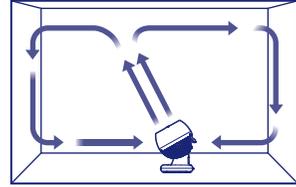


### การไหลเวียน

เป่าไปที่เพดานให้อากาศไหลเวียนอยู่ภายในห้อง

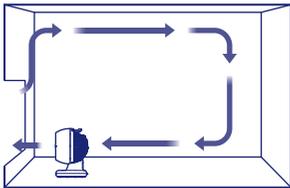

### การแลกเปลี่ยนอากาศ

ระบายอากาศภายในอาคารในขณะที่ดูดอากาศจากภายนอก

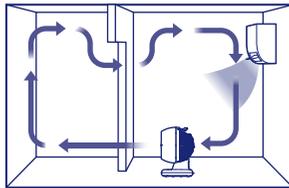

### การหมุนเวียนระหว่างห้องสองห้อง


หมุนเวียนอากาศในห้องที่ติดกันระหว่างสองห้องกันสองห้อง

## ข้อควรระวังเกี่ยวกับตำแหน่งการจัดวาง


- วางผลิตภัณฑ์ให้ห่างจากการสัมผัสกับแสงแดดโดยตรงและแหล่งที่มาของความร้อน เช่น เครื่องทำความร้อนเตา หรือตู้เย็นเพื่อป้องกันไม่ให้ผลิตภัณฑ์เสียหายหรือเปลี่ยนสี ซึ่งอาจทำให้เครื่องทำงานผิดปกติ
- วางผลิตภัณฑ์ให้ห่างจากโทรทัศน์หรือวิทยุและอุปกรณ์อื่นๆ เพื่อป้องกันไม่ให้เกิดสัญญาณรบกวนของแม่เหล็กไฟฟ้า

## ส่วนประกอบ


### ■ ด้านหน้า

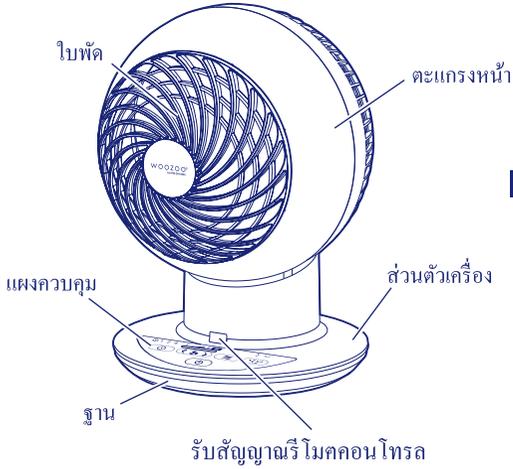

### ■ ด้านหลัง

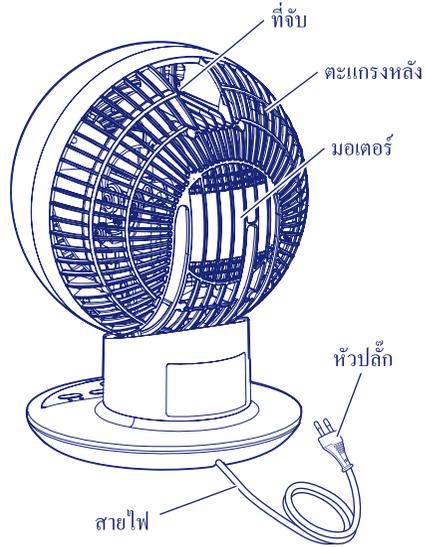


### ■ แผงควบคุม

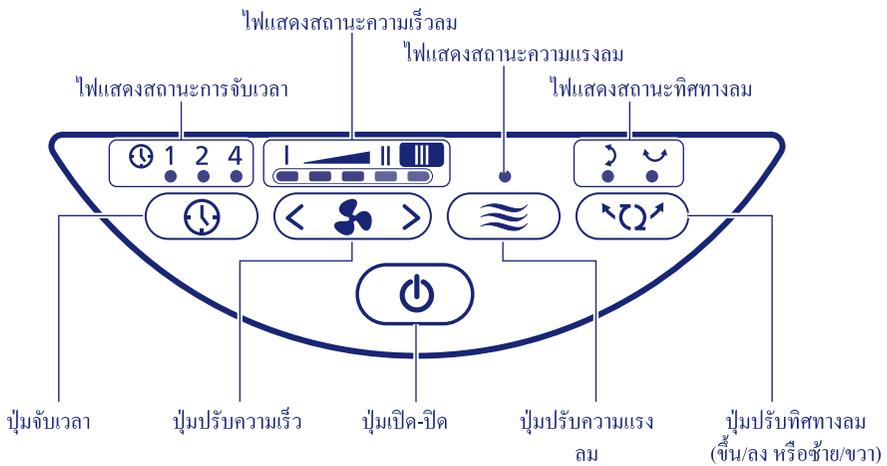

## รีโมทคอนโทรล

- ※ ถอดฟิล์มห่อแบตเตอรี่ออกก่อนใช้งาน
- ※ วางให้ตำแหน่งตัวส่งสัญญาณอินฟราเรดของรีโมทตรงกับตัวรับสัญญาณของอุปกรณ์

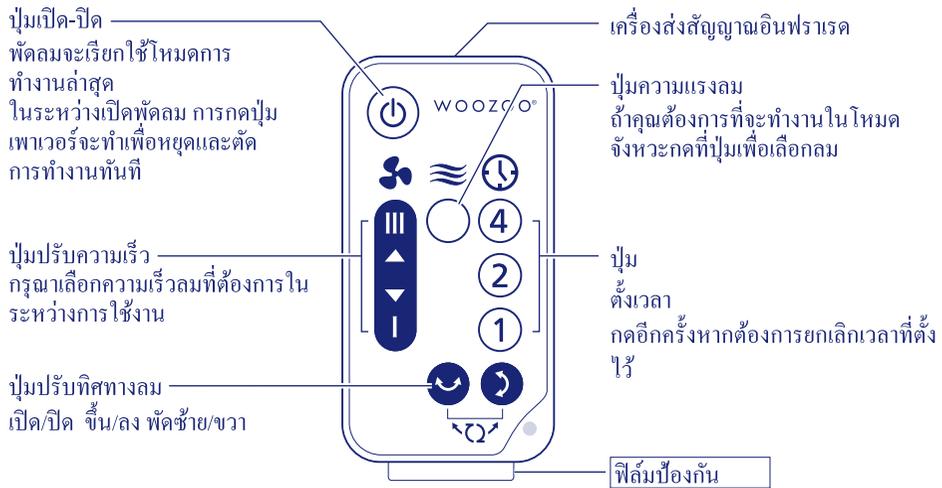

### วิธีเปลี่ยนแบตเตอรี่

เมื่ออายุการใช้งานของแบตเตอรี่เหลือน้อย และตัวเครื่องเริ่มไม่ทำงาน ควรเปลี่ยนแบตเตอรี่ใหม่ (แบตเตอรี่แบบกระดุม CR2025)

#### 1 ถอดกลับใส่แบตเตอรี่

- กดแผงแบตเตอรี่ข้างไว้ตามทิศทางของลูกศรจากนั้นดึงแบตเตอรี่ออก



#### 2 ใส่แบตเตอรี่ใหม่

- ใส่แบตเตอรี่ใหม่ลงไปยังช่องตามทิศทางที่ถูกต้อง จากนั้นใส่เข้าไปยังตัวเครื่องของรีโมทคอนโทรล




- ※ ห้ามใส่แบตเตอรี่ผิดทาง
- ※ ทิ้งแบตเตอรี่ใช้แล้วให้เป็นที่



- โปรดอ่าน “ข้อควรระวังเกี่ยวกับแบตเตอรี่” อย่างระมัดระวังเพื่อหลีกเลี่ยงการเสียหาย การรั่ว การเผาไหม้ของแบตเตอรี่และการปนเปื้อนของวัตถุโดยรอบเนื่องจากการใช้งานที่ไม่เหมาะสม


# วิธีการใช้งาน

## 1 เสียบปลั๊กไฟเข้ากับเต้ารับ

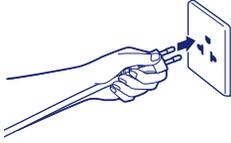


## 2 กดปุ่มเปิด-ปิด

- พัดลมจะทำงาน โดยเรียกใช้โหมดการทำงานล่าสุดก่อนปิดเครื่อง
- กรุณา กดปุ่มเพาเวอร์จากรีโมทคอนโทรลเพื่อใช้งาน

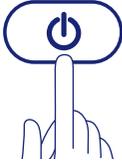

## 3 เลือกโหมดการทำงานที่ต้องการ

- เลือกปุ่มปรับความเร็วเพื่อเลือกแรงลม ทุกครั้งที่กดปุ่ม อุปกรณ์จะส่งเสียง "คลิก"

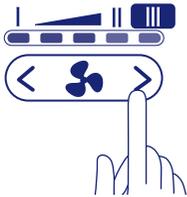

## หยุดทำงาน

- กดปุ่มเพาเวอร์ (ปุ่มเปิด-ปิด)
- คุณจะได้ยินเสียงเตือนด้วยการคลิกและพัดลมจะหยุดทำงาน




## ปุ่มความแรงลม

ใช้โหมดbreeze โดยปรับความแรงลม

- กดปุ่มความแรงลม ไฟแสดงสถานะจะสว่างขึ้น และผลิตภัณฑ์จะทำงานในโหมด Breeze




- กดปุ่มความแรงลมอีกครั้ง ไฟแสดงสถานะจะดับลง และจะเปลี่ยนเป็นโหมดปกติ

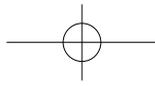


## ■ ปุ่มปรับทิศทางลม


- เมื่อกดปุ่ม ปรับทิศทางลม ตัวเครื่องจะมีเสียง “คลิก” และตัวแสดงสถานะจะสว่างขึ้น ผลัดกันนี้สามารถ ปรับสวิง ขึ้น/ลง หรือ ซ้าย/ขวา
- ไฟจะแสดงทั้งในกรณีปรับสถานะ ขึ้น/ลง และ ซ้าย/ขวา หรือพัด ไปทุกทิศทาง

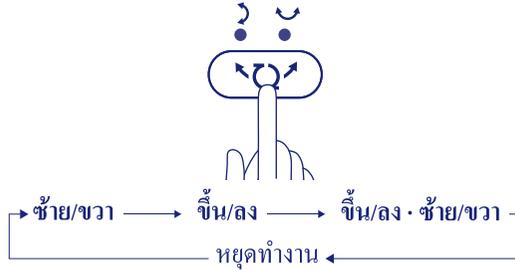


ซ้าย/ขวา

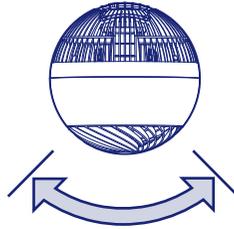

ขึ้น/ลง

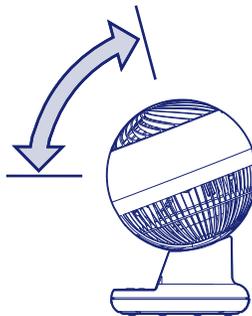

- อย่าปรับมุมการสวิงด้วยตนเอง ขึ้น/ลง หรือ ซ้าย/ขวา ต้องแน่ใจว่าใช้ปุ่มสวิงเพื่อควบคุมการทำงานของตัวเครื่องและเปลี่ยนทิศทางลมเท่านั้น

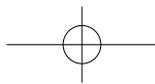

## วิธีการใช้งาน ต่อ

### ■ ปุ่มตั้งเวลาปิด

- ทุกครั้งที่กดปุ่มตั้งเวลาปิดตัวเครื่องจะส่งเสียง “คลิก” และไฟแสดงสถานะจะสว่างขึ้นตามลำดับ 1 ชั่วโมง → 2 ชั่วโมง → 4 ชั่วโมง เมื่อกดปุ่มเมื่อกดปุ่มอีกครั้งการตั้งค่านั้นจะทำงานและไฟแสดงสถานะจะดับลง



→ 1 (h) → 2 → 4 → ไฟดับลง  
(การตั้งค่ากำหนดเวลา)

- กดปุ่มตั้งเวลาบนรีโมทคอนโทรลเพื่อตั้งค่าเวลาปิด กดปุ่มตั้งเวลาซ้ำอีกครั้งเพื่อยกเลิกการตั้งค่าการปิดเครื่อง
- เมื่อถึงกำหนดเวลาที่ตั้งไว้ตัวเครื่องจะส่งเสียง “คลิก” ผลัดกันจะหยุดการทำงานและเครื่องจะปิดโดยอัตโนมัติ

## การทำความสะอาดและการบำรุงรักษา

กรุณาทำความสะอาดอย่างสม่ำเสมอ เพื่อไม่ให้สะสมฝุ่นและทำให้การใช้งานขัดข้อง




- ตรวจสอบให้แน่ใจว่าปิดเครื่องและถอดปลั๊กไฟออกจากเต้าเสียบก่อนทำความสะอาด
- หลังจากหยุดใช้ผลิตภัณฑ์ มอเตอร์ยังคงความร้อนช่วงระยะเวลาหนึ่ง ตรวจสอบให้แน่ใจว่ามอเตอร์เย็นลงแล้วจึงค่อยทำการบำรุงรักษา

- อย่าเช็ดผลิตภัณฑ์นี้ด้วยทินเนอร์, เอทิลแอลกอฮอล์, น้ำมันหอมระเหย, ผงซักฟอกอัลคาไลน์, สารฟอกขาว เป็นต้น มิฉะนั้นอาจทำให้เกิดการเปลี่ยนสี เปลี่ยนรูป เสื่อมสภาพ และการแตกหักเสียหายของพื้นผิวหรือเกิดการขัดข้องได้

### ■ การทำความสะอาด

- เช็ดด้วยผ้านุ่มและแห้ง หากมีความยากในการทำความสะอาดกำจัดสิ่งสกปรกให้ใช้ผ้าชุบผงซักฟอกชนิดกลางเจือจางเช็ดแล้วบิดทิ้ง โดยทำซ้ำๆ

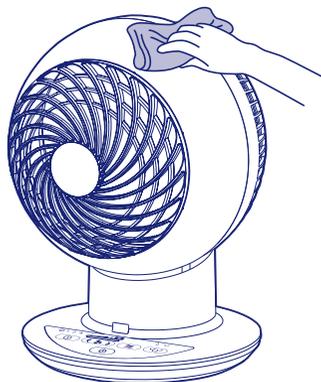

### ■ วิธีการจัดเก็บ

- เมื่อคุณจะใช้เป็นระยะเวลานาน ให้คลุมตัวผลิตภัณฑ์ด้วยถุงพลาสติกแล้วเก็บไว้ในที่แห้งและเย็น สถานที่ที่อากาศถ่ายเทและแห้ง

## การแก้ไขปัญหา

หากมีความผิดปกติใด ๆ ระหว่างการใช้งาน โปรดตรวจสอบรายการต่อไปนี้ก่อนนำส่งซ่อม

อาการ	สาเหตุที่เป็นไปได้	การแก้ไข
เครื่องไม่ทำงาน	● ปลั๊กไม่ได้เสียบเข้ากับเต้าเสียบอย่างถูกต้อง	● กรุณาเสียบปลั๊กไฟเข้าไปในเต้าเสียบอีกครั้งให้แน่น
ไม่สามารถทำงานกับรีโมตคอนโทรล	● แบตเตอรี่หมด	● กรุณาเปลี่ยนแบตเตอรี่
	● มีสิ่งกีดขวางระหว่างตัวรับสัญญาณและรีโมตคอนโทรล	● กรุณาทำความสะอาดสิ่งสกปรก
	● รีโมตคอนโทรลไม่อยู่ในทิศทางที่ถูกต้อง	● จัดตำแหน่งให้ตัวปล่อยแสงอินฟราเรดกับตัวรับสัญญาณระยะไกลอยู่ด้านหน้าผู้ใช้งานในระยะ 5 เมตร
เสียงดังขณะเครื่องทำงาน	● การวางที่ไม่ถูกต้อง	● กรุณาวางบนพื้นราบ
เสียงดังระหว่างการหมุน	● เสียงของมอเตอร์อาจดังขึ้นในระหว่างใช้โหมคหมุนเหยียง ซึ่งเป็นเสียงการทำงาน โดยเฉพาะของมอเตอร์	● เป็นปกติ
แรงลมเบา	● การสะสมของฝุ่น	● กรุณานำมาบำรุงรักษาผลิตภัณฑ์และทำความสะอาดสิ่งสกปรก

กรณีไม่สามารถแก้ไขปัญหานี้ได้

ให้ตรวจสอบกับร้านค้าปลีก โดยโทรไปที่หมายเลขให้คำปรึกษา



● ห้ามถอดแยกชิ้นส่วน ซ่อม และปรับเปลี่ยนผลิตภัณฑ์นี้

## ข้อมูลทางเทคนิค

แรงดันไฟฟ้าพิกัด	220V~
ความถี่ไครเวอร์	50Hz
กำลังไฟฟ้า	38W
ความยาวของสายไฟ (โดยประมาณ)	1.8m
ขนาดผลิตภัณฑ์ (ไม่รวมสายไฟ) (โดยประมาณ)	W210XD210XH290mm (ไม่รวมสายไฟ)
น้ำหนักผลิตภัณฑ์ (โดยประมาณ)	2.0kg

※ ข้อมูลจำเพาะของผลิตภัณฑ์อาจมีการเปลี่ยนแปลงโดยไม่ต้องแจ้งให้ทราบล่วงหน้า

## การรับประกันและบริการหลังการขาย

โปรดอ่านเนื้อหาต่อไปนี้ อย่างละเอียด

### ใบเสร็จรับเงินการซื้อ

กรุณาขอใบเสร็จรับเงินการซื้อที่ร้านค้าปลีกที่คุณซื้อผลิตภัณฑ์  
คุณจะต้องชำระค่าธรรมเนียมการซ่อมแซมหาก  
คุณไม่สามารถแสดงใบเสร็จรับเงินการซื้อ ดังนั้น  
คุณต้องเก็บใบเสร็จรับเงินการซื้อไว้ให้ดี

### ภายในระยะเวลาประกัน

ระยะเวลาประกัน: จำกัดเวลาจะระบุไว้ในใบรับประกัน (ด้านหลัง)  
บริษัทจะให้การซ่อมฟรีตาม “ข้อกำหนดการรับประกัน” ภายใต้เงื่อนไขการทำงานที่ผิดปกติภายใน  
ระยะเวลาประกัน

### หมดระยะเวลาการรับประกัน

โปรดตรวจสอบกับร้านค้าปลีกของคุณและคุณ  
ต้องจ่ายค่าซ่อมที่เกี่ยวข้อง โดยหลังการซ่อมแซม  
คุณสามารถการใช้งานของผลิตภัณฑ์ได้ ซึ่งจะ  
ถูกเรียกเก็บเงินค่าซ่อมบางชนิดตามความ  
ประสงค์ของลูกค้า

### เกี่ยวกับระยะเวลาที่เหลือของชิ้นส่วนอะไหล่

ระยะเวลาที่เหลือของชิ้นส่วนอะไหล่หลักของ  
บริษัท คือ 5 ปีหลังจากผลิตภัณฑ์หยุดการผลิต  
ชิ้นส่วนอะไหล่ที่ใช้งานสอดคล้องกับอะไหล่ที่  
จำเป็นในการคงการใช้งานของผลิตภัณฑ์

### เกี่ยวกับบริการหลังการขาย

โปรดตรวจสอบกับร้านค้าปลีกของคุณสำหรับ  
ปัญหาหลังการขายอื่น ๆ

## พัดลมหมุนเวียนอากาศ PCF-SC15T

ใบรับประกัน

ใบเสร็จรับเงินการซื้อประกอบเป็นส่วนหนึ่งของใบรับรองเพื่อให้คุณสามารถทำการซ่อมได้ฟรีภายในระยะเวลาถัดไปนับจากวันที่ซื้อตามข้อกำหนดการซ่อมแซมต่อไป

วันที่ซื้อ ※		ระยะเวลาการรับประกัน	
		1 ปีนับจากวันที่ซื้อ ยกเว้นวัสดุสิ้นเปลือง	
แบบ	ชื่อ	※ ร้านค้าปลีก	ชื่อร้าน:
	รหัสไปรษณีย์:		ที่อยู่:
	ที่อยู่:		หมายเลขโทรศัพท์ (       ) -
	หมายเลขโทรศัพท์ (       ) -		

สำหรับร้านค้าปลีก: โปรดกรอกข้อมูลในช่องที่มีสัญลักษณ์ ※ แล้วส่งไปยังลูกค้าของคุณ

### ข้อกำหนดการรับประกัน

- บริษัทจะจัดให้มีการซ่อมแซมหรือเปลี่ยนชิ้นส่วนฟรีในสภาวะที่มีการทำงานผิดปกติ หรือความเสียหายที่เกิดขึ้นภายใต้สภาพการใช้งานปกติ โดยลูกค้าต้องให้ความสะดวกตามสถานที่ตั้งของผู้ใช้งานและผลิตภัณฑ์
- การซ่อมแซมตามการรับประกันสามารถทำได้โดยศูนย์บริการที่ได้รับอนุญาตเท่านั้น เมื่อกรอกใบเรียกร้องการรับประกัน จะต้องส่งใบเสร็จการชำระเงินคั้งเดิม (พร้อมวันที่ซื้อ)
- เนื้อหาการรับประกันจะจำกัดอยู่ที่การซ่อมผลิตภัณฑ์ฟรีเท่านั้น ไม่มีการรับประกันอื่นใดให้อีกเมื่ออยู่ในระยะเวลาการรับประกัน การรับประกันครอบคลุมเฉพาะข้อบกพร่องในวัสดุหรือฝีมือการผลิต
- จะไม่รับประกันในกรณีของ:
  - การชำรุดสึกหรอตามปกติ
  - การใช้งาน ไม่ถูกต้อง เช่น การโหลดเกินขีดของเครื่อง ใช้อุปกรณ์เสริมที่ไม่ผ่านการอนุมัติ
  - ขัดข้องและเสียหายเกิดจากผลิตภัณฑ์ชิ้นกระแทกหลังการซื้อ การใช้กำลังหรือความเสียหายที่เกิดจากการกระทำภายนอก
  - ขัดข้องและเสียหายที่เกิดจากไฟไหม้ แผ่นดินไหวหรือภัยธรรมชาติอื่น ๆ
  - ความเสียหายที่เกิดจากการไม่ปฏิบัติตามคู่มือผู้ใช้ เช่น การเชื่อมต่อกับแหล่งจ่ายไฟไม่เพียงพอ หรือไม่ปฏิบัติตามคำแนะนำในการติดตั้ง

- ขัดข้องและเสียหายระหว่างการจัดการและขั้นตอนการขนส่งหลังการซื้อ
- ส่วนประกอบเครื่องใช้ไฟฟ้าบางส่วนหรือทั้งหมดหลุดออก
- ไม่สามารถแสดงใบเสร็จรับเงินการซื้อ
- ใบรับประกัน ไม่ได้ระบุวันที่ซื้อ ชื่อลูกค้า ชื่อร้านค้าปลีก หรือข้อมูลข้างต้นใด ๆ ถูกแก้ไข
- ใบรับประกันมีผลบังคับใช้ในประเทศไทยเท่านั้น
- ใบรับประกันจะต้องเป็นต้นฉบับและจะต้องเก็บไว้อย่างเหมาะสม

บันทึกข้อตกลงการซ่อม

- ※ ใบเสร็จรับเงินการซื้อประกอบเป็นส่วนหนึ่งของใบรับรองที่สอดคล้องกับเงื่อนไขการซ่อมและการเปลี่ยนทดแทนที่ระบุไว้อย่างชัดเจนในคู่มือผู้ใช้ อย่างไรก็ตาม ใบรับประกันจะจำกัดการใช้สิทธิตามกฎหมายของลูกค้าใดๆ ต่อบริษัท (ผู้รับผิดชอบในการรับประกัน) และตัวแทนจำหน่ายใด
- โปรดตรวจสอบกับร้านค้าปลีกของคุณสำหรับเรื่องที่เกี่ยวข้องกับการซ่อมแซมหลังระยะเวลาการรับประกัน
- ※ โปรดตรวจสอบกับ" การรับประกันและบริการหลังการขาย" สำหรับการซ่อมแซมใดๆ หลังระยะเวลาการรับประกันและระยะเวลาที่เหลือของชิ้นส่วนอะไหล่

ลูกค้า : IRIS Ohyama Inc.,  
 ที่อยู่ : 2-12-1, Itsutsubashi, Ooba-ku, Sendai-shi, Miyagi-ken, Japan  
 ผู้ผลิต : IRIS HOME PRODUCTS (SUZHOU) CO.,LTD.  
 ที่อยู่ : NO.139 QINGHUA ROAD XUSHUGUAN TOWN,  
 SUZHOU NEW DISTRICT, JIANGSU P.R.CHINA

ผู้จัดจำหน่าย :

**IRIS OHYAMA(THAILAND) CO.,LTD.**

ที่อยู่ : 388 Exchange Tower, 29th Floor, Unit 2901-2904,  
 Sukhumvit Road, Klongtoey, Klongtoey, Bangkok, 10110


CODE : 855347 ㊟タイ取説 SC15T-TH  
サイズ : 210mm×148mm (A5) 16 ページ  
材質 : 上質紙 四六判 70kg (菊判 48.5kg)  
刷色 : 1C (Black)

**WOZZOO®**  
by IRIS OHYAMA

# Circulator Fan

PCF-SC15T

## User manual

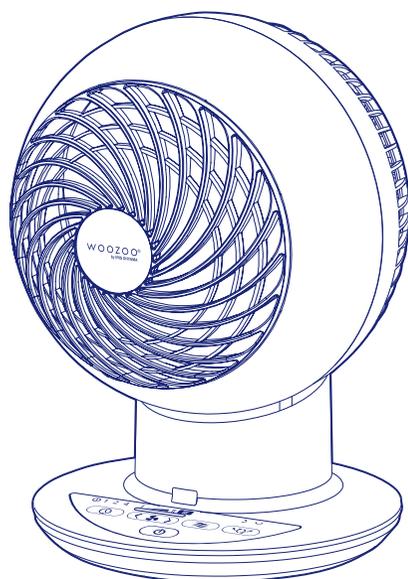

## Contents

### Preparations

Safety precautions.....	2
Using places.....	7
Precautions for placing.....	7
Parts.....	8

### Operation instructions

Remote controller.....	9
How to use.....	10
Cleaning and maintenance.....	13

### Others

Troubleshooting.....	14
Specifications.....	15
Warranty and after-sales services.....	15
Warranty card.....	Back cover

# Safety precautions

Make sure to follow the precautions described below to avoid injury or unnecessary property loss to anybody. The safety precautions are classified according to the degree of harm or damage caused by misuse.

## Examples of symbols



This symbol means "reminding".



This symbol means "forbidden".



This symbol means necessary "instructions".



## Warning

The symbol means matters which may lead to death or serious injury during faulty operation.



Do not disassemble

- **Do not disassemble, maintain and transform, so as not to cause fire, electric shock, injury and other accidents**  
Failure to do so may cause fire, electric shock or injury.  
Please check with the retail shop by calling the consultation number for related matters.



Unplug the product

- **In case of exception and failure, please immediately stop using, turn off the power and disconnect the power. plug from the power socket, so as not to cause smoking, fire and electric shock**

Exception examples

- Smell of burning, abnormal sound in operation
- Abnormal heating of power plug and power cord
- Intermittent power-on when moving the power cord
- Frequent stop in operation
- Numb feeling of electric shock when touching

- ➡ Please stop using and check with the retail shop by calling the consultation number for related matters.



Avoid getting the product wet

- **Do not use this product near water source, bathroom and other damp places**
- **Do not spray water on the main body or immerse the main body into water**  
So as not to cause fire and electric shock.

## Correctly use power plug and power cord



Be sure to

- **Please regularly clean dust on the power plug**  
So as not to cause fire and electric shock due to poor insulation resulting from dust accumulation.
- **Be sure to firmly insert the power plug into the socket**  
So as not to cause fire and electric shock due to short circuit.
- **If the power cord is damaged**  
It must be replaced by the professionals of the manufacturer's maintenance department or the similar department in order to avoid danger.



Unplug the product

- **Be sure to disconnect the power plug before product cleaning**  
Maintenance, inspection and movement, so as not to cause electric shock and injury.



Avoid contact with wet hands

- **Do not insert and disconnect the power plug by wet hands**  
So as not to cause electric shock and injury.



Prohibited

- **Do not use power supply beyond 220V~**  
So as not to cause electric shock and fire.
- **Do not use damaged power cord**  
Power plug and loose socket, so as not to cause electric shock and fire due to short circuit.
- **Do not break the power cord**
- **Do not damage**  
Process and forcibly bend the power cord or place the heavy object on the power cord, so as not to cause fire and electric shock due to broken power cord.
- **Do not power on in the bundling state of power cord**  
So as not to cause fire.
- **Do not pull the power cord when moving**  
So as not to cause electric shock and fire.

## Safety precautions Continued



Be sure to

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play with the appliance
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard



Prohibited

- The product is used indoors only
- Do not use the product around any article hindering ventilation
- Do not cover the product with combustible articles such as clothes, paper or plastic bags before operating
- Do not use the product in a place with too much dust or powder  
Or it may lead to fire.



Prohibited

- Do not use spray (insecticide, hair spray, lubricating oil, etc.)
- Do not use this product near kerosene, gasoline, thinner and other flammable liquids as well as objects with sparks and combustible dust, so as not to cause fire



Prohibited

- Do not use this product near the curtain etc.  
So as to avoid damaging surrounding articles and causing injury.



Be sure to

- **Make sure to use it on level and firm floors**  
Or it may lead to personnel injury or damage to surrounding articles due to upside down.
- **Do not use the product in a place near rolled-up curtains**  
Or it may lead to damage to surrounding articles or injury.



## Caution

Faulty operation may lead to personnel injury or article damage.



Prohibited

- **Do not ride or lean on this product**  
So as not to cause electric shock and injury.



Prohibited

- **Do not blow against persons**  
The air circulating fan compared to a normal fan has relatively high air power. Do not blow against children and the aged to avoid affecting health.

- **Do not blow against pets and plants to avoid affecting pet's health and affect plant growth**



Unplug the product

- **Be sure to hold the power plug part when disconnecting it**  
Do not pull the power cord, so as not to cause electric shock, short circuit and fire due to damage to power cord.
- **Be sure to disconnect the power plug if this product is not used**  
So as not to cause electric shock and fire due to insulation aging.



Prohibited

- **Please do not drag during moving**  
Or it may lead to scratches on tatami or floor.

## Safety precautions Continued

### Precautions About Battery used in the Remote Control



Be sure to

- **During installation, pay attention to the positive and negative electrodes of the battery, and install it properly according to the instructions**

So as to prevent the battery from being broken or leakage due to incorrect installation, causing a fire or contaminating the surrounding objects.

- **Remove the battery when it is not used for a long time**

So as to prevent the battery from leakage, which may cause fire, injury and contamination of the surrounding object.

In the event of a leak, clean the leakage on the battery case and install a new battery.

If your body accidentally contact with the battery, flush it with plenty of water.



Do not disassemble

- **Do not disassemble the battery**

Or it may damage the skin or clothing.



Prohibited

- **Do not place and keep with metal objects**

Or it may cause short circuits due to battery leakage, damage.

- **Do not use batteries other than the specified model**


So as to prevent the battery from leakage, which may cause fire, injury and contamination of the surrounding objects.

- **Do not charge**

So as to prevent the battery from leakage, which may cause fire, injury and burns.


## Using places

Please place this product on the flat surface or ground with any obstacles.

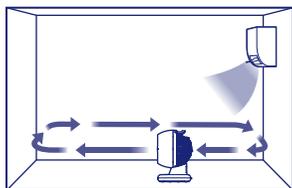


### When using cooling equipment

Turn the circulating fan back to the air conditioner, so that the cool air is fully circulated from top to bottom.

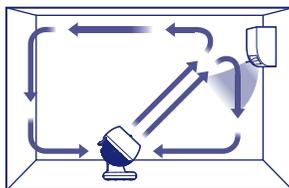


### When using heating equipment

Blow towards the air conditioning direction or blow downwards from the high furniture, so that the hot air at the upper part is circulated.

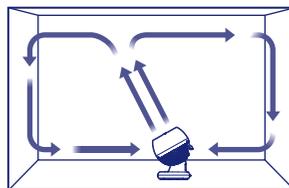


### When circulating

Blow towards the ceiling, so that air is circulating in the room.

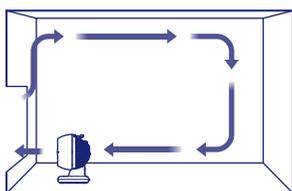

### When ventilating

Exhaust indoor air while sucking outdoor air.

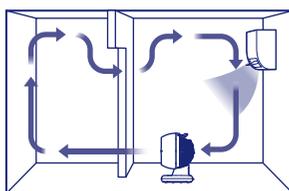

### Circulation in two rooms


Circulate air in two connected rooms.

## Precautions for placing


- **Do not place it near direct sunlight places, electric heater**  
Furnace or refrigeration equipment, to avoid product distortion, discoloration and operation exception.
- **Keep this product away from TV**  
Radio and other devices, to avoid electromagnetic interference.

# Parts


## ■ Front

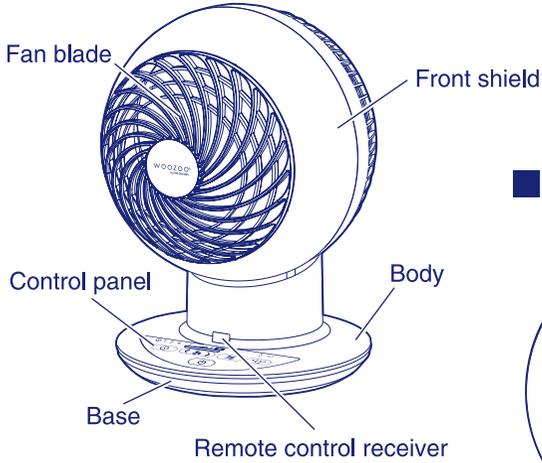

## ■ Back

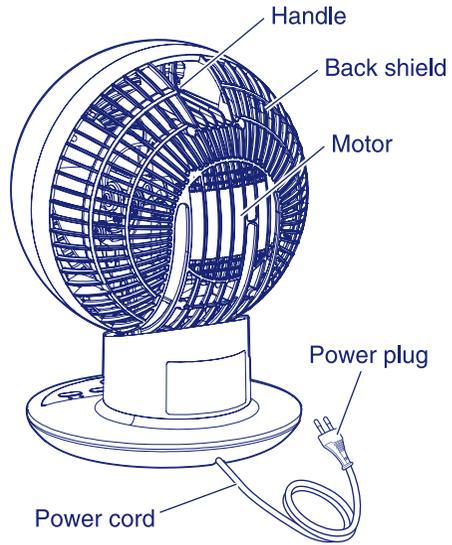


## ■ Control panel

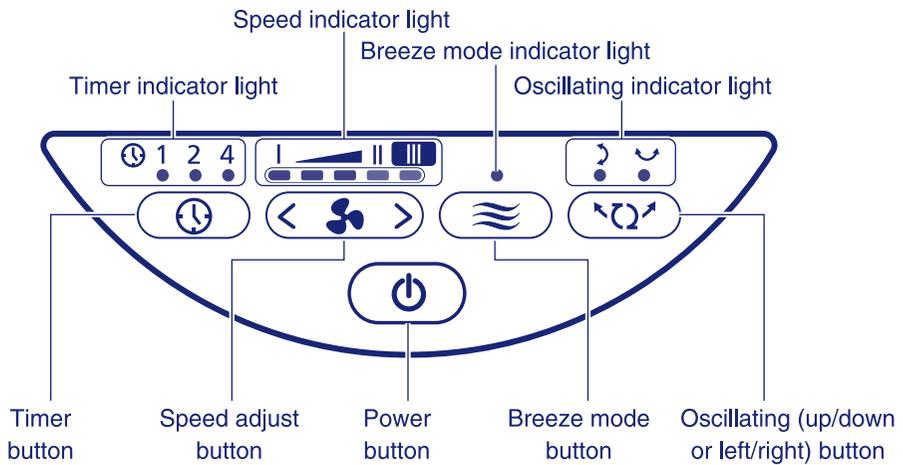

# Remote controller

- ※ Please remove the battery protective film before use.
- ※ Please align the infrared emission part of the remote controller to the signal receiver of the device.

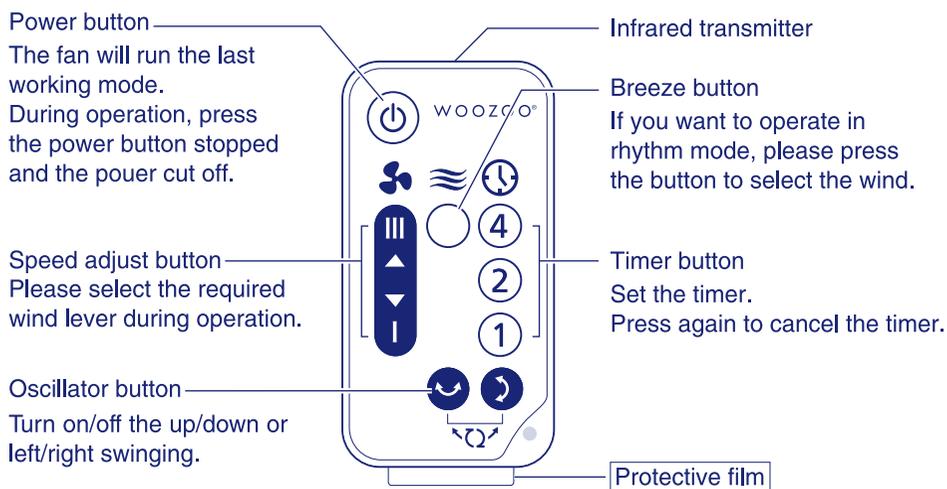


## How to replace the battery

When the operation range of the remote controller becomes smaller and the body does not respond, please replace it with a new battery (CR2025 button battery).


### 1 Withdraw the battery case

- Hold down the claws in the direction of the arrow and pull the battery case out.

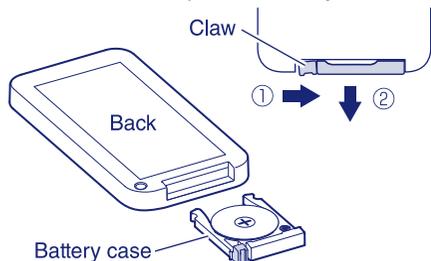

### 2 Install new battery

- Insert the new battery into the battery case with the correct direction and insert it into the body of remote controller.

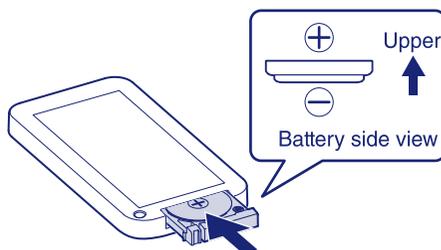


- ※ Do not install the wrong direction.
- ※ Please dispose of used batteries properly.



- Please read "Precautions About Battery" carefully to avoid battery breakage, leakage, burns, and contamination of the surrounding objects due to improper use.

# How to use

## 1 Plug the power plug into the socket

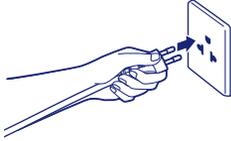


## 2 Press power button

- Run the mode set same as the previous shutdown.
- Please press the power button of remote controller to operate.



## 3 Select the desired operating mode

- Select speed adjust button to switch wind. Each time the button is pressed, the device will make a "click" sound.

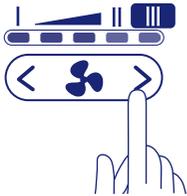

Weak ← ... → Strong ↔ Ultrastrong ←

## ■ Stop running


- Press the power button.
- You will hear a beep sound with click and the fan will stop running.




## ■ Breeze

Simulating the breeze by changing wind strength.

- Press the breeze button, the breeze indicator will light up and the product will run in breeze mode.

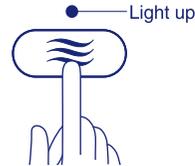


- Press the breeze button again, the natural light indicator will turn off and switch to normal mode. (The fan will restore the gear before the rhythm)

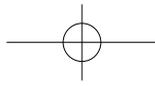


## ■ Oscillating


- When the oscillator button is pressed, the body will make a “click” sound and the indicator will light as below.  
This product can swing up/down or left/right.
- If both up/down and left/right lights are on, the wind will blow in all directions.

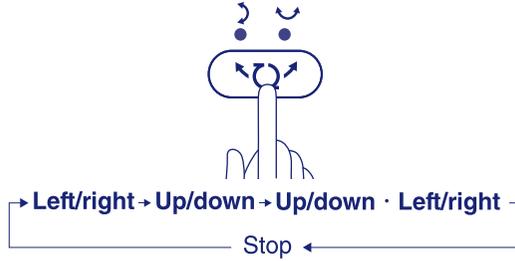


Left/right

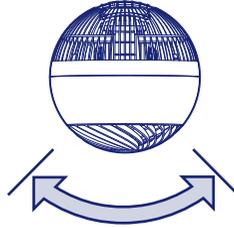

Up/down

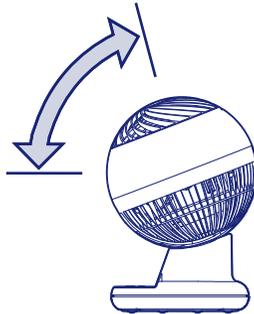


- Do not manually adjust the swing angle of the up/down or left/right. Be sure to use the swing button to control the operation of the body and change the wind direction.

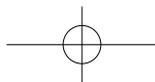

## How to use Continued

### ■ Timer settings

- Every time the timer button is pressed, the body will make a “click” sound, and the indicator light will light up in the order of 1 hour → 2 hours → 4 hours. When the button is pressed again, the setting will be released and the indicator light will be off.

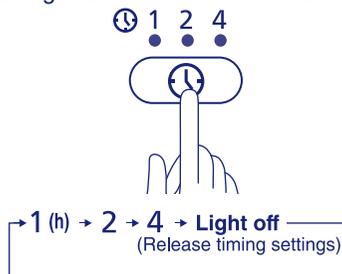

- Press the corresponding timer button while operating with the remote controller to set the timer. If the corresponding timer button is pressed again, the timer setting will be released.
- When the operating time is reaching to the setting time, the body will make a “click” sound, the product will stop operating and the power will be turned off automatically.

# Cleaning and maintenance

Please regularly clean , so as not to cause failure due to dust accumulation.



- Be sure to turn off the power and disconnect the power plug from the socket before cleaning.
- Clean and maintain when the motor is fully cooled, as it may keep high temperature after use.

- Do not wipe this product with thinner, ethyl alcohol, volatile oil, alkaline detergent, bleaching agent, etc. , so as to avoid discoloration, distortion, deterioration and surface breakage or failure.

## ■ Cleaning

- Please wipe with soft rag. When it is not easy to clean, repeatedly wipe with rag dipped with neutral detergent after the rag is fully wrung.



## ■ Storage Method

- When the circulating fan is not used for a long time, please pack it in the plastic bag, and store it in the cool, ventilated and dry place.

# Troubleshooting

Please confirm the following problems after reading the operation manual carefully before you entrust to repair it.

State	Cause	Measures
Not running	● Plug is not inserted into the outlet correctly	● Please reinsert the power plug into the socket firmly.
Unable to operate with remote controller	● Battery exhausted	● Please replace the battery.
	● There is an obstacle between the remote controller receiver and the remote controller	● Please clear obstacles.
	● Remote controller misaligned in correct direction	● Please align the infrared emitter with the remote receiver to the front of the body within a distance of 5m.
Large operating noises	● Unfavorable placing	● Please place it on level ground.
Noises during oscillating	● The sound of the motor may change louder during the pivoting mode, which is the unique operating sound of the motor	● This is normal.
Small wind	● Dust accumulation	● Please maintain the product and clean dust for it.

## If the fault cannot be rectified yet

Please check with the retail shop by calling the consultation number.



● Do not disassemble, repair and transform this product at all.

## Specifications

Rated voltage	220V~
Rated frequency	50Hz
Rated power	38W
Length of power cord (about)	1.8m
Product dimensions (excluding power cord) (about)	W210XD210XH290mm (Without power cord)
Product weight (about)	2.0kg

※ The product specification is subject to change without notice.

## Warranty and after-sales services

Please make sure to carefully read the following contents.

### ■ Purchase Receipt

Be sure to request a Purchase Receipt at the retail shop when you purchase the product.

The repair fee needs to be paid if you are unable to present a Purchase Receipt. Therefore, you must keep the Purchase Receipt securely.

### ■ Within the warranty period

Warranty period: Time limit specified by the warranty card (Back cover).  
The company will provide free repair as per the “Warranty Provisions” under abnormal operating conditions within the warranty period.

### ■ Over the warranty period

Please check with your retail shop and you will have to pay for related repair expenses. It will be possible to maintain the functions of the product after repair. A certain repair cost will be charged according to customer's requirements.

### ■ About the remaining period of spares parts

The remaining period of the company's major spare parts is 5 years after the production stop of the product. The spare parts in operation correspond to the spare parts needed to maintain the functions of the product.

### ■ About after-sales service

Please check with your retail shop for other after-sales issues.

## Circulator Fan PCF-SC15T

## Warranty card

The purchase receipt constitutes the certificate so that you can enjoy free repairs in accordance with the following repair provisions within the next period from the day of purchase.

Purchase date ※		Warranty period	
Warranty period		1 years from the day of purchase Except for consumables	
Customer	Name	※ Retail shop	Shop name:
	Postal code: Address:		Address:
	Telephone number (     ) -		Telephone number (     ) -

Notice to retail shops: Please fill in the fields marked with a ※ symbol and then deliver it to your customer.

### Warranty provisions

- The company will provide free repairs or replacements in conditions of malfunction or damage present under normal operating conditions as per the aspects that must be given attention according to the labels affixed on the operation manual and the product.
- Warranty repairs can only be performed by an authorised service centre. When filling a warranty claim, the original bill of purchase (With the date of purchase) must be submitted.
- The warranty contents are only limited to the free repair of the product. No other warranty service is provided even within the warranty period. The warranty only covers defects in materials or workmanship.
- The warranty will not apply in cases of:
  - Normal wear and tear
  - Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
  - Failures and damages caused by product crashes after purchase. The use of force or damage caused by external influences
  - Failures and damages caused by fires, earthquakes or other natural disasters
  - Damage caused by non-compliance with the user manual, e.g. Connection to an inadequate power supply or non-compliance with the installation instructions
  - Failures and damages during the handling and transportation process after purchase
- Partially or completely dismantled appliances
- Not being able to show the purchase receipt
- The warranty card has not been filled with the date of purchase, the customer's name, the name of the retail shop or any of the above data has been modified
- The warranty card is only valid in THAILAND.
- The warranty card must be the original and must be kept appropriately.

#### Repair memorandum

- ※ The purchase receipt constitutes the certificate corresponding to the repair and replacement conditions clearly stipulated in the user manual. However, the warranty card restricts any customer from enjoying any legal rights from the company (Person responsible for the warranty) and any dealer. Please check with your retail shop for repair-related matters after the warranty period.
- ※ Please check with the "Warranty and after-sales service" for any repairs after the warranty period and the remaining period of spare parts.

Client : IRIS Ohyama Inc.,  
Address : 2-12-1, Itsutsubashi, Aoba-ku, Sendai-shi, Miyagi-ken, Japan  
Manufacturer : IRIS HOME PRODUCTS (SUZHOU)CO.,LTD.  
Address : NO.139 QINGHUA ROAD XUSHUGUAN TOWN,  
SUZHOU NEW DISTRICT, JIANGSU P.R.CHINA

Distributor :

## IRIS OHYAMA(THAILAND) CO.,LTD.

Address : 388 Exchange Tower, 29th Floor, Unit 2901-2904,  
Sukhumvit Road, Klongtoey, Klongtoey, Bangkok, 10110