


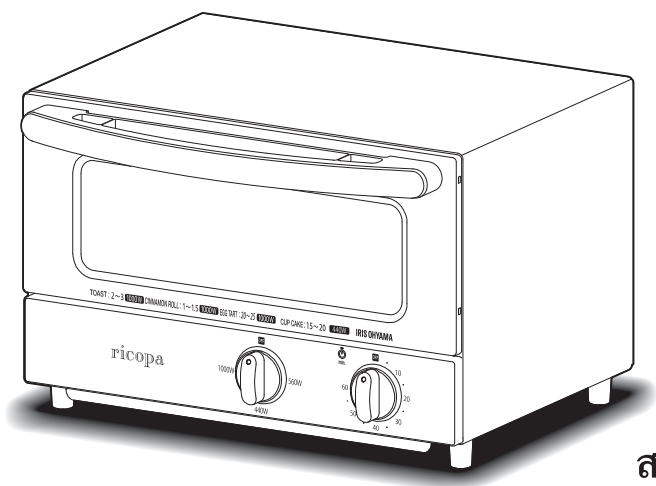

สำหรับใช้งานภายในอาคารและครัวเรือน

เตาอบขนมปัง EOT-R021

คู่มือการใช้งาน



สารบัญ

การเตรียมความพร้อมก่อนการใช้งาน

ข้อควรระวังเพื่อความปลอดภัย.....	2
ข้อควรระวังในการใช้งาน.....	5
ชิ้นส่วนต่างๆ.....	6

คำแนะนำในการใช้งาน

การเตรียมการ.....	7
วิธีใช้.....	8
การดูแลรักษาและทำความสะอาด.....	9

อื่นๆ

ข้อมูลทางเทคนิค.....	9
เกณฑ์ในการประกอบอาหาร.....	10
การแก้ไขปัญหา.....	10
ใบรับประกันสินค้า.....	ปกหลัง
การรับประกันและบริการหลังการขาย.....	ปกหลัง

ข้อควรระวังเพื่อความปลอดภัย

กรุณาอ่าน “ข้อควรระวังเพื่อความปลอดภัย” โดยละเอียดและใช้งานอย่างถูกต้อง
ข้อควรระวังนี้เป็นการอธิบายข้อควรปฏิบัติ เพื่อป้องกันไม่ให้เกิดอันตรายต่อบุคคลและความเสียหายต่อทรัพย์สิน
ความหมายของสัญลักษณ์



สัญลักษณ์นี้หมายถึง
“การแจ้งเตือน”



สัญลักษณ์นี้หมายถึง
“ห้ามทำ”



สัญลักษณ์นี้หมายถึง “คำแนะนำ”
ที่จำเป็นต้องปฏิบัติตาม



คำเตือน

สัญลักษณ์นี้หมายถึง การใช้งานที่ผิดวิธีอาจนำไปสู่การเสียชีวิตและ
การบาดเจ็บร้ายแรง

กรุณาใช้ปลั๊กไฟและสายไฟอย่างถูกต้อง



ตรวจสอบ
ให้แน่ใจว่า

- กรุณาเช็ดทำความสะอาดฝุ่นละอองออกจากปลั๊กไฟอย่างสม่ำเสมอ
การสะสมของฝุ่นละอองอาจเป็นเหตุให้เกิดเพลิงไหม้หรือไฟฟ้าช็อต เนื่องจากความบกพร่องของฉนวนไฟฟ้า
- เสียบปลั๊กเข้ากับเต้ารับให้สุด
หากไม่ปฏิบัติตามอาจก่อให้เกิดเพลิงไหม้หรือไฟฟ้าช็อต เนื่องจากไฟฟ้าลัดวงจร
- ใช้เต้ารับที่มีขนาดไฟฟ้ากระแสสลับ 220-240V~
หากไม่ปฏิบัติตามอาจก่อให้เกิดเพลิงไหม้



ถอดปลั๊ก
ผลิตภัณฑ์

- ถอดปลั๊กไฟออกจากเต้ารับทุกครั้งเมื่อต้องการดูแลรักษา ตรวจสอบเช็ค หรือเคลื่อนย้ายผลิตภัณฑ์
หากไม่ปฏิบัติตามอาจก่อให้เกิดไฟฟ้าช็อตหรือได้รับบาดเจ็บได้



ห้ามสัมผัส
ขณะมือเปียก

- ห้ามถอดหรือเสียบปลั๊กไฟในขณะที่มือเปียก
หากไม่ปฏิบัติตามอาจก่อให้เกิดไฟฟ้าช็อต ผลไหม้ หรือได้รับบาดเจ็บได้



ห้ามทำ

- ห้ามใช้งานขณะที่สายไฟหรือปลั๊กไฟชำรุดเสียหายหรือได้รับหลวม
หากไม่ปฏิบัติตามอาจก่อให้เกิดเพลิงไหม้หรือไฟฟ้าช็อตเนื่องจากไฟฟ้าลัดวงจร หากสายไฟชำรุดให้ติดต่อสอบถามไปยังศูนย์บริการซ่อมแซมเฉพาะทาง
- ห้ามเปิดเครื่องหากสายไฟพันกัน
หากเปิดเครื่องอาจก่อให้เกิดผลไหม้หรือเพลิงไหม้เนื่องจากความร้อนสูงเกินไป และต้องมั่นใจว่าสายไฟไม่พันกันเมื่อใช้งาน
- ห้ามทำให้สายไฟชำรุดเสียหาย
- ห้ามดึงสายไฟในขณะที่เคลื่อนย้ายหรือจัดเก็บ
ห้ามทำให้สายไฟชำรุดเสียหาย กดทับสายไฟ หัก ดึง บิดงอ วางของหนักทับสายไฟ หรือดัดแปลงใดๆ
หากสายไฟชำรุดเสียหาย อาจก่อให้เกิดเพลิงไหม้หรือไฟฟ้าช็อต
- ห้ามให้เด็กเล็กสัมผัสปลั๊กไฟ
หากไม่ปฏิบัติตามอาจก่อให้เกิดการบาดเจ็บหรือไฟฟ้าช็อต



ห้ามทำ

- ห้ามนำไปใช้งานภายนอกอาคาร
- ห้ามใช้งานใกล้กับวัตถุที่ติดไฟได้ง่าย เช่น ผ้าผืน
- ห้ามใช้งานโดยใส่หรือวางบนเครื่องใช้ภายในบ้านหรือภาชนะที่ทำจากพลาสติก
- ห้ามใช้งานบนวัตถุที่ไม่ทนต่อความร้อน เช่น เสื้อทาทามิ พรม หรือผ้าปูโต๊ะ
หากไม่ปฏิบัติตามอาจก่อให้เกิดเพลิงไหม้



ห้ามทำ

- ห้ามใช้งานใกล้กับสิ่งที่เป็นเชื้อเพลิง (เช่น น้ำมันก๊าด น้ำมันเบนซิน ทินเนอร์) และวัตถุที่ติดไฟได้
- ห้ามใช้งานใกล้กับบริเวณที่มีควันจากการเผาไหม้ของน้ำมันฟุ้งกระจายอยู่
- ห้ามฉีดพ่นของเหลวลงบนผลิตภัณฑ์ (เช่น ยาม่าแมลง ผลิตภัณฑ์จัดแต่งทรงผม หรือน้ำมันหล่อลื่น เป็นต้น)
หากไม่ปฏิบัติตามอาจก่อให้เกิดเพลิงไหม้





ถอดปลั๊ก
ผลิตภัณฑ์

- ในกรณีที่เกิดความผิดปกติหรือชำรุดเสียหาย ให้หยุดใช้งานผลิตภัณฑ์ในทันทีและถอดปลั๊กไฟออกจากเต้ารับ หากไม่ปฏิบัติตามอาจก่อให้เกิดควัน เปลวไฟไหม้ หรือไฟฟ้าช็อต

(ตัวอย่างความผิดปกติ)

- มีเสียงผิดปกติหรือกลิ่นเหม็นไหม้
 - ปลั๊กไฟและสายไฟร้อนขึ้นอย่างผิดปกติ
 - ผลิตภัณฑ์ติดๆ ดับๆ เมื่อขยับสายไฟ
 - ผลิตภัณฑ์หยุดทำงานเป็นบางครั้งในระหว่างใช้งาน
 - รู้สึกว่ามีกระแสไฟฟ้าช็อตเบาๆ เมื่อสัมผัสโดนผลิตภัณฑ์
- ➔ กรุณาหยุดใช้งานและติดต่อร้านค้าที่จำหน่ายผลิตภัณฑ์หรือศูนย์บริการของไอรিস



ห้ามทำ

- ห้ามให้เด็กใช้งานผลิตภัณฑ์โดยลำพังหรือใช้งานในบริเวณที่เด็กเล็กเอื้อมถึง
- ห้ามนั่งหรือพิงไปที่ผลิตภัณฑ์ หากไม่ปฏิบัติตามอาจก่อให้เกิดเพลิงไหม้ ไฟฟ้าช็อต หรืออุบัติเหตุได้



ห้ามทำ

- ห้ามใส่อาหารที่ห่อด้วยแรป ภาชนะที่ทำจากกระดาษหรือพลาสติก เข้าไปในเตาอบ
- ห้ามใส่น้ำมันหรือของเหลวอื่นๆ ลงบน ภาชนะอบ หากไม่ปฏิบัติตามอาจก่อให้เกิดเพลิงไหม้



ระวังร้อน

- ระวังร้อนเมื่อนำอาหารออกมาจากเตาหลังจากอบเสร็จ กรุณาใช้ที่จับของร้อนหรือถุงมือกันความร้อน เมื่อต้องการนำภาชนะอบออกจากเตา

กรณีที่อาหารเกิดควันหรือไฟลุก



ห้ามทำ

- ห้ามเปิดประตูเตาอบ หากอาหารเกิดควัน ห้ามเปิดประตูเตาอบ จนกว่าไฟจะดับลง เพราะอาจทำให้อากาศ ไหลเวียนเข้าไปด้านในและทำให้ไฟลุกลาม มากขึ้นได้



ห้ามถอดแยก
ชิ้นส่วน

- ห้ามถอดแยกชิ้นส่วน ซ่อมแซม หรือ ดัดแปลงผลิตภัณฑ์ด้วยตนเอง หากดำเนินการเองอาจก่อให้เกิดเพลิงไหม้ ไฟฟ้าช็อต หรือเกิดการบาดเจ็บ และอาจ เกิดอันตรายหากผู้ดำเนินการซ่อมแซมไม่ใช่ ผู้เชี่ยวชาญด้านการซ่อมแซม ในการซ่อมแซม กรุณาปรึกษากับร้านค้าที่ จำหน่ายผลิตภัณฑ์หรือศูนย์บริการซ่อมแซม เฉพาะทาง



ห้ามสัมผัส

- ในระหว่างการใช้งานหรือหลังใช้งาน ห้าม สัมผัสแผงทำความร้อน ตัวเครื่อง ภายใน ตัวเครื่อง และกระจกประตู หากสัมผัสอาจก่อให้เกิดแผลไหม้



หลีกเลี่ยงการทำให้
ผลิตภัณฑ์เปียก

- ห้ามใช้งานในบริเวณพื้นที่เปียกหรือบริเวณ ที่มีความชื้น เช่น ห้องน้ำ เป็นต้น
- ห้ามนำผลิตภัณฑ์ไปแช่น้ำหรือทำให้เปียกน้ำ หากผลิตภัณฑ์เปียกน้ำอาจก่อให้เกิดเพลิง ไหม้หรือไฟฟ้าช็อต



ระวัง

การใช้งานที่ผิดวิธีอาจนำไปสู่การบาดเจ็บหรือเครื่องชำรุดเสียหาย



ตรวจสอบ
ให้แน่ใจว่า

- ในการบำรุงรักษาให้ดำเนินการหลังจากตัว เครื่องและส่วนต่างๆ เย็นลงแล้ว หลังจากใช้งาน ตัวเครื่องจะยังคงความร้อน อยู่ โปรดระมัดระวังเพื่อไม่ให้เกิดแผลไหม้



ห้ามทำ

- ห้ามชน ทำหล่น หรือก่อให้เกิดการกระทบ กระเทือนอย่างรุนแรงต่อผลิตภัณฑ์ หากไม่ปฏิบัติตามอาจทำให้ผลิตภัณฑ์ชำรุด เสียหาย เกิดเพลิงไหม้หรือไฟฟ้าช็อต

ข้อควรระวังเพื่อความปลอดภัย (ต่อ)

ห้ามใช้ของสิ่งต่างๆ ดังต่อไปนี้



ห้ามทำ

- ห้ามนำอาหารที่มีน้ำมันไหลออกมา เช่น ปลาหรือเนื้อดิบ ของทอด มาอบโดยวางบนตะแกรง
หากไม่ปฏิบัติตามอาจทำให้น้ำมันไหลลงด้านล่างหรือกระเด็น และก่อให้เกิดควันหรือเกิดเพลิงไหม้ ให้นำมาอบโดยวางบนถาดรองอบที่แถมมากับผลิตภัณฑ์หรือถาดทนความร้อนที่จำหน่ายทั่วไปตามท้องตลาด
- ห้ามใช้ของชนบั้งที่ทาเนยหรือแยม
หากไม่ปฏิบัติตามอาจก่อให้เกิดเพลิงไหม้
- ห้ามนำอาหารกระป๋องหรืออาหารบรรจุขวดมาอบโดยตรง
หากไม่ปฏิบัติตามอาจทำให้ภาชนะบรรจุแตกหรือระเบิด หรือร้อนเกินไป และก่อให้เกิดแผลไหม้ได้
- ห้ามเริ่มอบโดยที่ภายในเตาอบว่างเปล่า
หากไม่ปฏิบัติตามอาจทำให้ประตูเตาอบหรือด้านในเตาอบร้อนจนเกินไป ซึ่งอาจก่อให้เกิดแผลไหม้ เกิดควัน หรือเกิดเพลิงไหม้ และโปรตระมัตระวังเมื่ออาหารที่นำมาอบมีปริมาณน้อย
แต่สำหรับการอุ่นเตาอบในการใช้งานครั้งแรก ให้ปฏิบัติตามคำอธิบายในคู่มือการใช้งานเล่มนี้ (→ หน้า 7)
- ห้ามให้อาหารสัมผัสกับแผงทำความร้อน
หากอาหารชิ้นใหญ่เกินไปให้ตัดแบ่งเป็นส่วนๆ และไม่อบอาหารปริมาณมากในครั้งเดียว

ในระหว่างการใช้งาน



ห้ามทำ


- ห้ามเคลื่อนย้ายตัวเครื่อง
หากเคลื่อนย้ายอาจก่อให้เกิดอุบัติเหตุได้
- ห้ามให้ความร้อนแก่อาหารเกินความจำเป็น
หากไม่ปฏิบัติตามอาจทำให้อาหารเกิดควันหรือไฟลุกได้
และโปรตระมัตระวังอาหารที่มีส่วนประกอบของน้ำมันอยู่มาก เพราะอาจเกิดไฟลุกได้ง่าย
- ห้ามออกห่างจากเตาอบมากเกินไป
โปรตระมัตระวังเนื่องจากอาหารอาจเกิดควันหรือไฟลุกได้

ติดตั้งในตำแหน่งที่ปลอดภัย



ตรวจสอบให้แน่ใจว่า

- ใช้งานเตาอบบนพื้นผิวเรียบและมีความมั่นคง
หากใช้งานในจุดที่ไม่มั่นคง อาจทำให้เตาอบหล่นลงมาหรือล้มคว่ำจนทำให้ได้รับบาดเจ็บหรือเกิดเพลิงไหม้ได้
- วางให้ห่างจากผนัง เครื่องใช้ภายในบ้าน หรือผ้าม่าน ตามระยะห่างที่ระบุไว้ตามภาพด้านล่าง
- วางให้ห่างจากกระจกของหน้าต่างหรือเครื่องใช้ภายในบ้านเกินกว่า 20 ซม.
หากวางในตำแหน่งที่ผนัง เครื่องใช้ภายในบ้าน หรือผ้าม่านชำรุดเสียหายและมีประกบสกปรก หรือจุดที่แคบจนเกินไป อาจก่อให้เกิดความร้อนสูงเกินกำหนดหรือเกิดเพลิงไหม้ได้ กรุณาวางในจุดที่อากาศถ่ายเทสะดวกและไม่เปียกน้ำ

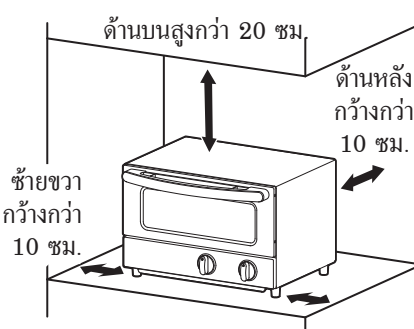

ห้ามทำ

- ห้ามวางในจุดที่สูงกว่าระดับไหล่
หากวางในจุดที่สูงเกินไป อาจทำให้เกิดความไม่มั่นคงเมื่อนำอาหารออกจากเตาอบ ได้รับบาดเจ็บ หรือเกิดแผลไหม้ได้



ตรวจสอบให้แน่ใจว่า

- ใช้งานโดยติดตั้งถาดรองเศษขนมปังทุกครั้ง
- หลังจากใช้งานเตาอบขนมปัง ให้ทำความสะอาดเศษขนมปังบนถาดรองเศษขนมปังทุกครั้ง
หากไม่ปฏิบัติตามอาจก่อให้เกิดเพลิงไหม้



ห้ามทำ

- ห้ามวางแผ่นอะลูมิเนียมฟอยล์ลงบนถาดรองเศษขนมปัง
หากไม่ปฏิบัติตามอาจก่อให้เกิดความร้อนสูงเกินกำหนดและเกิดเพลิงไหม้



ตรวจสอบ
ให้แน่ใจว่า

- ในระหว่างการใช้งาน ตรวจสอบให้แน่ใจว่าตัวจับเวลาทำงานได้อย่างถูกต้องแม่นยำหรือไม่ หากตัวจับเวลาทำงานไม่ถูกต้อง อาจก่อให้เกิดความร้อนสูงเกินกำหนด เกิดควัน หรือเกิดเพลิงไหม้ได้



ห้ามทำ

- ห้ามขยายเวลาอบในขณะที่ตัวจับเวลา กำลังทำงานอยู่ หากไม่ปฏิบัติตามอาจก่อให้เกิดความร้อนสูงเกินกำหนดจนเครื่องทำงานผิดปกติ และอาจก่อให้เกิดเพลิงไหม้ได้



ถอดปลั๊ก
ผลิตภัณฑ์

- กรุณาจับบริเวณหัวปลั๊กและห้ามจับบริเวณสายไฟขณะถอดปลั๊ก หากไม่ปฏิบัติตามอาจทำให้สายไฟชำรุดเสียหาย เกิดเพลิงไหม้ หรือไฟฟ้าช็อต
- กรุณาถอดปลั๊กไฟออกจากเตารับทุกครั้ง หากไม่ได้ใช้งานเป็นเวลานาน หากไม่ปฏิบัติตามอาจก่อให้เกิดเพลิงไหม้หรือไฟฟ้าช็อต เนื่องจากฉนวนไฟฟ้าเสื่อมสภาพ



ห้ามทำ

- ห้ามวางสิ่งของบนเตาอบ หากไม่ปฏิบัติตามอาจทำให้เตาอบผิดรูปหรือเกิดเพลิงไหม้เนื่องจากความร้อน
- ห้ามวางสิ่งของบนประตูเตาอบที่เปิดไว้ หากไม่ปฏิบัติตามอาจทำให้เตาอบคว่ำลงและอาหารไหลออกมาจากเตาอบ ได้รับบาดเจ็บหรือเกิดแผลไหม้ได้



ห้ามทำ

- ห้ามใช้งานเพื่อวัตถุประสงค์อื่นนอกจากการประกอบอาหาร หากไม่ปฏิบัติตามอาจก่อให้เกิดเพลิงไหม้หรือเกิดแผลไหม้
- ห้ามนำไปใช้นอกเหนือจากการใช้งานภายในครัวเรือน เช่น การใช้งานเชิงพาณิชย์ หากนำไปใช้นอกเหนือจากที่กำหนดอาจก่อให้เกิดเพลิงไหม้



ห้ามทำ

- ห้ามวางเตาอบบนวัตถุที่เปิดไฟได้ (เช่น เตาแก๊ส) หรือแผงทำความร้อนไฟฟ้า หากไม่ปฏิบัติตามอาจก่อให้เกิดเพลิงไหม้

ข้อควรระวังในการใช้งาน

การปรับอุณหภูมิ


- เตาอบเครื่องนี้ ใช้เทอร์โมสตัท (Thermostat) ในการปรับอุณหภูมิการอบ พร้อมการเปิด/ปิดแผงทำความร้อน หากแผงทำความร้อนดับลงในระหว่างการอบ จะไม่ถือว่าเครื่องชำรุดเสียหายแต่อย่างใด

การทิ้งผลิตภัณฑ์


- ในการทิ้งผลิตภัณฑ์หรือวัสดุบรรจุภัณฑ์ กรุณาปฏิบัติตามระเบียบในการทิ้งขยะที่กำหนดไว้ในพื้นที่ของท่าน

ชิ้นส่วนต่างๆ


ตัวเครื่อง

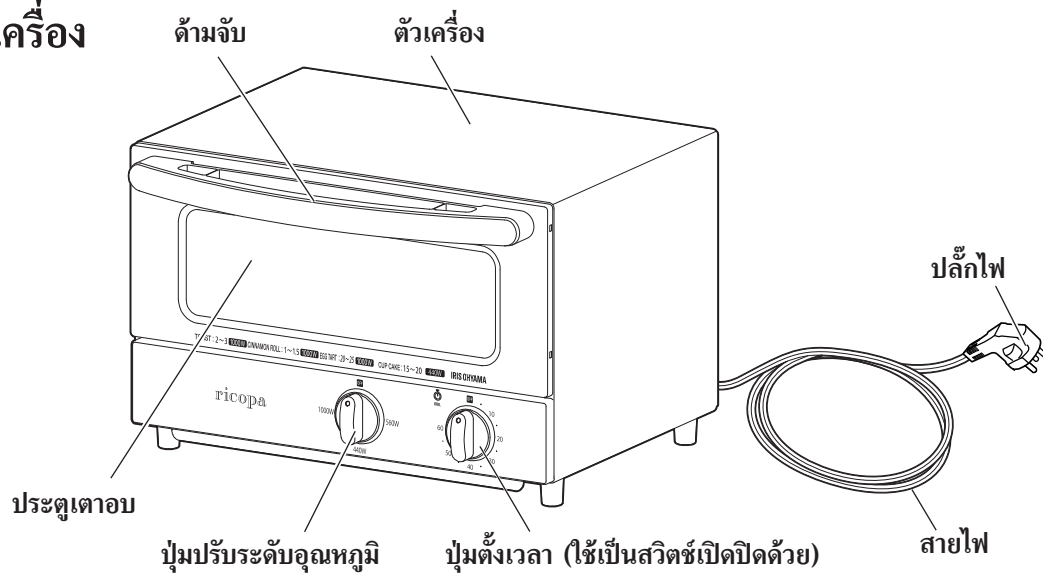

ภายในตัวเครื่อง

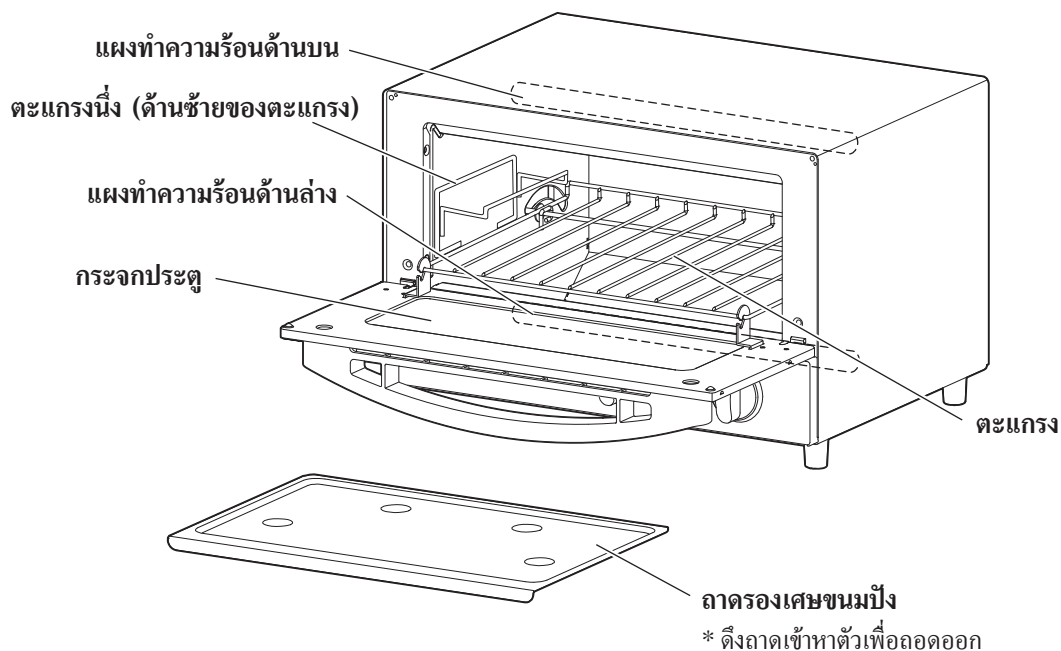

อุปกรณ์เสริม

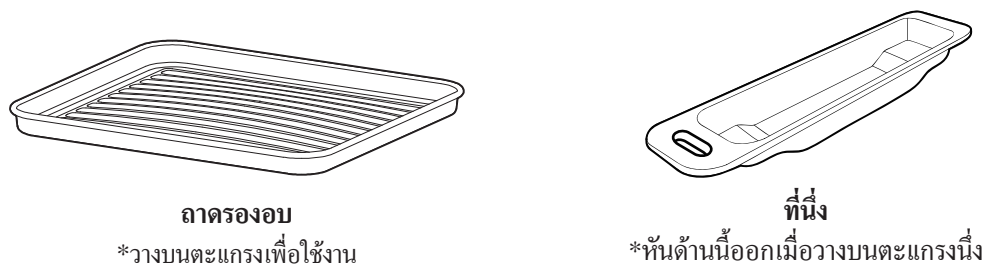

การเตรียมการ

■ การติดตั้ง


1

ติดตั้งในจุดที่ต้องการ

- กรุณาติดตั้งโดยดูจาก “ติดตั้งในตำแหน่งที่ปลอดภัย” ในหน้า 4


2

ถอดตัวยึดที่ยึดตะแกรงไว้ (2 จุด)

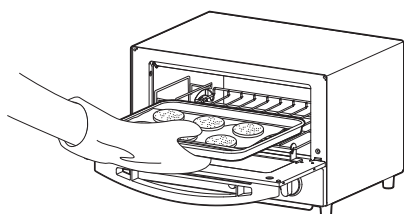

3

เสียบปลั๊กไฟเข้ากับเต้ารับ

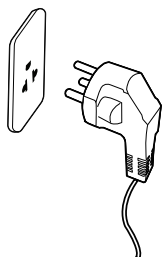

- ห้ามติดตั้งในจุดที่โดนแสงอาทิตย์โดยตรง หรือจุดที่ได้รับลมร้อนจากเครื่องปรับอากาศและอุปกรณ์ทำความร้อน หากไม่ปฏิบัติตามอาจทำให้เกิดผลิตภัณฑ์ผิดรูป เปลี่ยนสี หรือไม่สามารถปรับอุณหภูมิตามที่ต้องการได้



ระวัง


- ด้านใต้เตาอบขนมปังอาจเกิดความร้อนขึ้นได้ ห้ามสอดสายไฟลอดใต้เตาอบขนมปังเป็นอันตราย

■ การอุ่นเตาเปล่า

กรุณาอุ่นเตาเปล่าก่อนการใช้งานครั้งแรก


1

ใส่ถาดรองอบเข้าไปและปิดประตูเตาอบ

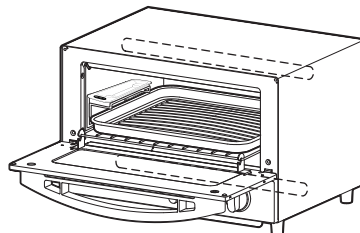

2


หมุนปุ่มปรับระดับอุณหภูมิเป็น 1000 วัตต์

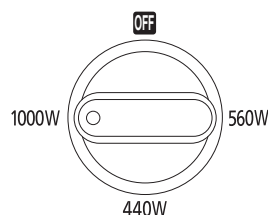

3

หมุนปุ่มตั้งเวลาเป็น 15 และเริ่มการเผาเตาอบ

- กรุณาหมุนปุ่มตั้งเวลาไปที่ 16 ขึ้นไป แล้วย้อนกลับไปที่ 15

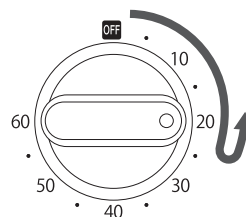

* เมื่ออุ่นเตาอบเสร็จสิ้น จะมีเสียงเตือนดัง “ติ๊ง”



คำเตือน

- ในระหว่างและหลังจากการอุ่นเตาอบ ตัวเครื่อง กระจกประตู ตะแกรง และถาดรองอบจะมีอุณหภูมิสูง โปรดระมัดระวังไม่สัมผัสโดยตรง

วิธีใช้



ระวัง

- หากใช้ประกอบอาหารอย่างต่อเนื่อง อาจมีกรณีที่ตัวปรับอุณหภูมิทำงานและแผงทำความร้อนดับลง แต่แผงทำความร้อนและภายในเตาอบจะยังคงมีอุณหภูมิสูงอยู่ โปรดระมัดระวังเพื่อไม่ให้เกิดแผลไหม้
- ดูแลรักษาเตาอบทุกครั้งหลังการใช้งาน

1


ใส่อาหารเข้าไป

- * กรุณาวางอาหารดังต่อไปนี้ลงบนถาดรองอบ และวางถาดลงบนตะแกรงก่อนเริ่มประกอบอาหาร
 - อาหารที่มีน้ำมันไหลออกมา
 - อาหารที่มีซूपไหลออกมา
 - อาหารที่แตกหรือละลายได้ง่าย
 - อาหารที่มีขนาดเล็กกว่ารูบนตะแกรง

- ในกรณีที่ใช้แผ่นอะลูมิเนียมฟอยล์ โปรดระวังไม่ให้ฟอยล์สัมผัสโดนแผงทำความร้อน เนื่องจากแผ่นอะลูมิเนียมฟอยล์อาจละลายและไปติดกับแผงทำความร้อนทำให้เกิดการชำรุดเสียหายได้

- * วางอาหารบริเวณกึ่งกลางของตะแกรง (หากวางไว้ด้านหน้าหรือลึกเกินไป อาจทำให้สีของอาหารไม่เท่ากันได้)

ใช้งานที่นึ่ง

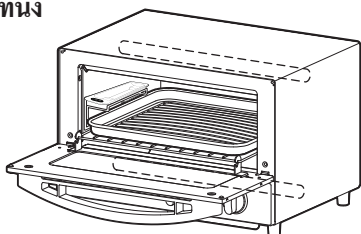


- * ความจุมาตรฐาน: ประมาณครึ่งหนึ่งของที่นึ่ง ท่านสามารถเติมน้ำลงในที่นึ่งและวางที่นึ่งบนตะแกรงนึ่ง แต่ห้ามเติมของเหลวอื่นๆ นอกจากน้ำ หรือสิ่งที่อาจทำให้เกิดไฟไหม้

2

หมุนปุ่มปรับระดับอุณหภูมิเพื่อเลือกระดับความร้อน

- กรุณาปรับโดยดูจาก “เกณฑ์ในการประกอบอาหาร” ในหน้า 10

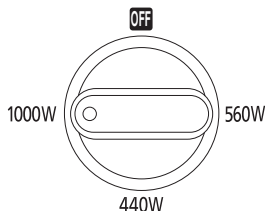


1000 วัตต์ (แผงทำความร้อนด้านบน-ล่าง)	ใช้แผงทำความร้อนทั้งด้านบนและด้านล่าง ใช้สำหรับอบขนมปัง โฉนด พิซซ่า เป็นต้น
560 วัตต์ (แผงทำความร้อนด้านบน)	ใช้เฉพาะแผงทำความร้อนด้านบน
440 วัตต์ (แผงทำความร้อนด้านล่าง)	ใช้เฉพาะแผงทำความร้อนด้านล่าง

3

หมุนปุ่มตั้งเวลาให้เหมาะสมกับเวลาที่ใช้ทำอาหาร


- เริ่มทำอาหาร
- หากตั้งเวลาไม่เกิน 10 ให้หมุนปุ่มไปที่ 11 ขึ้นไปแล้วย้อนกลับมา
- เมื่อต้องการหยุดทำอาหารกลางคัน ให้หมุนปุ่มตั้งเวลาไปที่ **OFF**

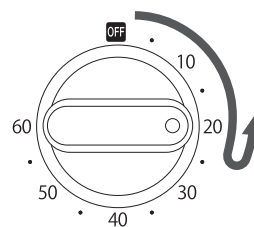

4

การทำอาหารเสร็จสิ้น

- ตัวเครื่องจะส่งเสียงดัง “ติ๊ง” และตัวจับเวลาจะหยุดทำงาน
- ในกรณีที่ใช้ถาดรองอบที่กลมมากับผลิตภัณฑ์หรือถาดทนความร้อนที่จำหน่ายทั่วไปตามท้องตลาด กรุณานำออกจากเตาโดยใช้ที่จับของร้อนหรือถุงมือกันความร้อน

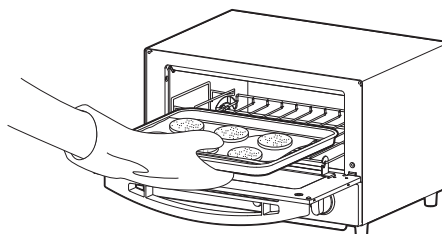

- * หลังจากตัวจับเวลาหยุดทำงาน จะยังคงได้ยินเสียงตัวเครื่องกำลังทำงานอยู่ แต่ไม่ได้เกิดจากการชำรุดเสียหายแต่อย่างใด



ระวัง

- โปรดระมัดระวังไม่สัมผัสโดนแผงทำความร้อนด้านบนและด้านล่างเมื่อนำอาหารออกจากเตา
- ในระหว่างทำอาหารหรือหลังจากทำอาหาร ตัวเครื่อง กระดาษประตู และตะแกรงจะมีอุณหภูมิสูง โปรดระมัดระวังไม่สัมผัสโดยตรง
- ห้ามถอดตะแกรงออกด้วยตนเอง กรุณาอบโดยใช้ถาดรองอบเพื่อให้ทำความสะอาดเศษอาหารตกค้างได้ง่ายขึ้น
- ห้ามนำที่นึ่งออกจากเตาทันทีหลังจากทำความร้อน หากไม่ปฏิบัติตามอาจถูกลวกเป็นแผลไหม้

การดูแลรักษาและทำความสะอาด



ระวัง


- กรุณาถอดปลั๊กไฟออกจากเต้ารับและรอให้ตัวเครื่องเย็นลงก่อนการดูแลรักษาทุกครั้ง
- กรุณาทำความสะอาดถาดรองเศษขนมปังให้สะอาดอยู่เสมอ หากใช้งานในขณะที่ถาดสกปรกหรือมีเศษขนมปังหลงเหลืออยู่อาจก่อให้เกิดไฟลุกหรือเกิดเพลิงไหม้ได้
- หลังการดูแลรักษา ให้ติดตั้งถาดรองเศษขนมปังกลับเข้าไปทุกครั้ง หากไม่ติดตั้งถาดรอง อาจทำให้บริเวณที่ติดตั้งผลิตภัณฑ์ไหม้เกรียมจากความร้อนได้
- ห้ามปล่อยให้อยู่ในเตาที่มีอาหารหรือคราบสกปรกหลงเหลืออยู่ เพราะอาจก่อให้เกิดไฟลุกหรือเกิดเพลิงไหม้ได้

- ห้ามทำความสะอาดโดยใช้ผงขัดทำความสะอาด ฝอยขัดหม้อ ทินเนอร์ หรือน้ำมันเบนซิน

ตัวเครื่องและภายในตัวเครื่อง

เช็ดทำความสะอาดด้วยผ้าชุบน้ำบิดแห้ง


- หากเช็ดครบสกปรกออกยาก ให้เช็ดออกโดยใช้ผ้าผสมน้ำยาทำความสะอาดที่มีฤทธิ์เป็นกลางที่เจือจางแล้ว จากนั้นเช็ดคราบน้ำยาออกโดยใช้ผ้าชุบน้ำบิดแห้ง

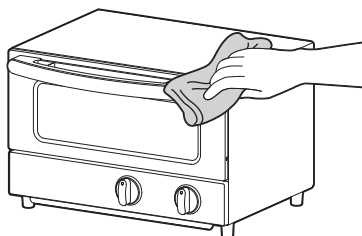

ถาดรองเศษขนมปัง

นำถาดออกมาที่เศษขนมปังทิ้ง จากนั้นเช็ดคราบสกปรกออก


- หากคราบสกปรกฝังแน่น ให้นำไปล้างโดยใช้ฟองน้ำร่วมกับน้ำยาล้างจานที่มีฤทธิ์เป็นกลางที่เจือจางแล้ว จากนั้นนำไปล้างผ่านน้ำและผึ่งให้แห้งสนิท

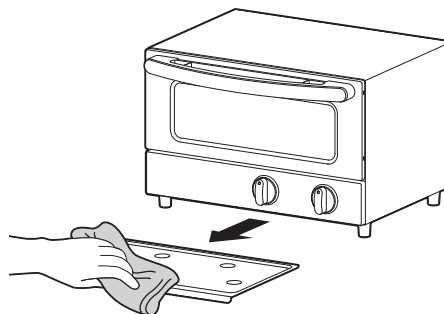

ถาดรองอบ

นำไปล้างโดยใช้ฟองน้ำร่วมกับน้ำยาล้างจานที่มีฤทธิ์เป็นกลางที่เจือจางแล้ว จากนั้นนำไปล้างผ่านน้ำ

- หลังจากล้างน้ำแล้วผึ่งให้ถาดรองแห้งสนิท

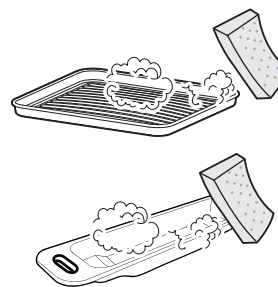


ข้อมูลทางเทคนิค

แรงดันไฟฟ้า	220-240V~
พิกัดความถี่	50-60Hz
กำลังไฟฟ้าที่กำหนด	1000W
กำลังไฟฟ้าที่ปรับได้	440/560/1000W
ตัวจับเวลา	60 นาที (ใช้เป็นสวิตช์เปิดปิดด้วย)
ขนาดภายนอก (ไม่รวมสายไฟ, รวมด้ามจับ)	W332 x D290 x H221mm
น้ำหนัก (รวมถาดรองอบ)	3.5kg
ความยาวสายไฟ (ประมาณ)	0.9m

* ข้อมูลทางเทคนิคของผลิตภัณฑ์อาจมีการเปลี่ยนแปลงได้โดยไม่แจ้งให้ทราบล่วงหน้า

เกณฑ์ในการประกอบอาหาร

- เกณฑ์ในการประกอบอาหารอาจแตกต่างกันไปตามชนิด ปริมาณ ขนาดของอาหาร และอุณหภูมิก่อนเริ่มทำอาหาร ให้ พิจารณาจากสภาพแล้วเพิ่มลดตามความเหมาะสม
- หากอาหารทับซ้อนกัน ให้พลิกสลับบนล่างระหว่างทำอาหาร
- หากใช้ทำอาหารอย่างต่อเนื่อง โปรดตั้งเวลาทำอาหารให้น้อย ลงกว่าครั้งที่ 1
- หากภายในเตาอบร้อนขึ้น แผงทำความร้อนอาจไม่ทำงานใน พื้นที่เนื่องจากการทำงานของเทอร์โมสตัท

ตัวอย่างอาหาร	จำนวน	กำลังไฟฟ้าที่ใช้	ถาดรองอบ	ตั้งเวลา (อบครั้งแรก)	หมายเหตุ
ขนมปังปิ้ง (ตัด 6 แผ่น)	2 แผ่น	1,000 วัตต์ (แผงทำความร้อนด้านบน-ล่าง)	—	2 - 3 นาที	เพิ่ม-ลดเวลาตามขนาด ความหนา และชนิดของขนมปัง
อุ่นครัวซองต์	2 ชิ้น	560 วัตต์ (แผงทำความร้อนด้านบน)	—	1 - 2 นาที	
อุ่นบัตเตอร์โรล	4 ชิ้น	1,000 วัตต์ (แผงทำความร้อนด้านบน-ล่าง)	—	1 - 1.50 นาที	
อุ่นเบเกิล	1 ชิ้น (ผ่าครึ่ง)	560 วัตต์ (แผงทำความร้อนด้านบน)	—	3 - 4 นาที	วางให้ด้านที่ ตัดอยู่ด้านล่าง 
คิริโมจิ (โมจิตัดก้อน)	4 แผ่น	1,000 วัตต์ (แผงทำความร้อนด้านบน-ล่าง)	—	3 - 4 นาที	วางเรียงให้เสมอกัน ใช้ถาดรองอบ หากโมจิมีขนาดเล็ก
พิซซ่าแช่แข็ง	1/2 แผ่น (เส้น ผ่านศูนย์กลาง 18 ซม.)	1,000 วัตต์ (แผงทำความร้อนด้านบน-ล่าง)	ใช่	4 - 5 นาที	ปูแผ่นอะลูมิเนียมฟอยล์บนถาดรองอบ
ขนมปังพิซซ่า	2 แผ่น	1,000 วัตต์ (แผงทำความร้อนด้านบน-ล่าง)	ใช่	3 - 4 นาที	ปูแผ่นอะลูมิเนียมฟอยล์บนถาดรองอบ
คุกกี้	เส้นผ่านศูนย์กลาง 3.5 ซม. x หนา 3 มม. 15 ชิ้น	1,000 วัตต์ (แผงทำความร้อนด้านบน-ล่าง)	ใช่	3 - 4 นาที	ปูกระดาษรองอบบนถาดรองอบ
ฮอตดอก	2 ชิ้น	1,000 วัตต์ (แผงทำความร้อนด้านบน-ล่าง)	—	6 - 7 นาที	ประกบไส้ที่ปรุงเสร็จแล้วและห่อด้วย แผ่นอะลูมิเนียมฟอยล์
กราแตง	2 จาน	1,000 วัตต์ (แผงทำความร้อนด้านบน-ล่าง)	—	5 - 6 นาที	จานขนาด 11 X 15 X 3.5 ซม.



ระวัง

- ห้ามใช้อบอาหารแช่แข็งที่ต้องอุ่นโดย “ใช้ไมโครเวฟ” เพราะอาจก่อให้เกิดเพลิงไหม้ได้ และสามารถใช้อบได้เฉพาะอาหารแช่แข็งที่จำหน่ายทั่วไปซึ่งระบุไว้ว่า “ใช้เตาอบขนมปัง” เท่านั้น

การแก้ไขปัญหา

กรณีที่เกิดความผิดปกติขึ้นในระหว่างการใช้งาน ก่อนที่จะส่งซ่อม กรุณาอ่านคู่มือเล่มนี้โดยละเอียด แล้วตรวจสอบหัวข้อต่อไปนี้

สภาพ	สาเหตุ	วิธีแก้ไข
หมูนุ่มตั้งเวลา แล้วแต่แผงทำความร้อนไม่ทำงาน	● เสียบปลั๊กไฟเข้ากับเต้ารับไม่แน่น	● เสียบปลั๊กไฟเข้ากับเต้ารับให้แน่น
	● ภายในเตาอบมีอุณหภูมิสูง เนื่องจากใช้งานเตาอบมาอย่างต่อเนื่อง	● หากภายในเตาอบมีอุณหภูมิสูง อาจทำให้แผงทำความร้อนไม่ทำงานในพื้นที่เนื่องจากการทำงานของเทอร์โมสตัท

การแก้ไขปัญหา (ต่อ)

อาหารที่บอออกมาสีไม่เท่ากันและบริเวณที่วางผลิตภัณฑ์มีรอยไหม้เกรียม	● มีเศษขนมปังและคราบสกปรกไหม้ติดอยู่บนถาดรองเศษขนมปัง	● กรุณาทำความสะอาดถาดรองเศษขนมปัง (→หน้า 9)
	● ไม่ได้ติดตั้งถาดรองเศษขนมปัง	● กรุณาติดตั้งถาดรองเศษขนมปังให้เข้าที่
มีควันออกมาหรือได้กลิ่นเหม็นไหม้	● ใช้งานโดยไม่ได้เผาเตาอบก่อนการใช้งานครั้งแรก	● กรุณาเผาเตาอบก่อนการใช้งานครั้งแรก (→หน้า 7) อาจมีกลิ่นเหม็นไหม้หลงเหลืออยู่ แต่กลิ่นจะค่อยๆ หายไปพร้อมกับการใช้งาน
	● มีเศษขนมปังและคราบสกปรกไหม้ติดอยู่บนถาดรองเศษขนมปัง	● กรุณาทำความสะอาดถาดรองเศษขนมปัง (→หน้า 9)
อาหารสุกไม่ถึงข้างใน	● ใช้เวลาในการอบสั้นเกินไป	● กรุณาเพิ่มเวลาในการอบ
	● อาหารที่นำไปอบเป็นชนิดที่ความร้อนผ่านเข้าไปไม่ถึงข้างในได้ยาก	● กรุณาเปลี่ยนรูปแบบการอบ เช่น ทำรอยบากหรือตัดแบ่งให้มีขนาดเล็กลง
เมื่ออบแล้วรอบนอกของอาหารไหม้เกรียม	● ใช้เวลาในการอบนานเกินไป	● กรุณาลดเวลาในการอบ
เวลาของตัวจับเวลาที่มีความคลาดเคลื่อน	● ตัวจับเวลาใช้ระบบกลไกกลานนาฬิกา จึงอาจเกิดข้อผิดพลาดขึ้นได้	● ไม่ใช่ความผิดปกติ
ตัวจับเวลาทำงานไม่ถูกต้อง	● หากใช้เวลาอบไม่เกิน 5 นาที ตัวจับเวลาอาจทำงานไม่ถูกต้อง	● หากใช้เวลาในการอบไม่เกิน 5 นาที กรุณาหมุนปุ่มตั้งเวลาไปที่ 6 ขึ้นไปแล้วค่อยย้อนกลับมา
แผงทำความร้อนดับลงกลางคันหรือติดบ้างไม่ติดบ้าง	● เทอร์โมสตัททำงานและกำลังปรับอุณหภูมิในการทำอาหารอยู่	● ไม่ใช่ความผิดปกติ

หากไม่สามารถแก้ไขปัญหาได้

กรุณาติดต่อร้านค้าที่จำหน่ายผลิตภัณฑ์หรือศูนย์ให้บริการของไอริส



คำเตือน

● ห้ามถอดแยก ซ่อมแซม หรือ
ดัดแปลงผลิตภัณฑ์ด้วย
ตนเอง



เตาอบขนมปัง EOT-R021

ใบรับประกัน

ใบเสร็จรับเงินเป็นส่วนหนึ่งของใบรับรองเพื่อให้คุณรับบริการโดยไม่เสียค่าใช้จ่ายในระยะเวลาถัดไปนับจากวันที่ซื้อตามข้อกำหนดการรับประกันต่อไปนี้

วันที่ซื้อ*		ระยะเวลาการรับประกัน	
		1 ปีนับจากวันที่ซื้อ ยกเว้นวัสดุสิ้นเปลือง	
แบบ	ชื่อ:	* แบบ	ชื่อร้าน:
	รหัสไปรษณีย์: ที่อยู่: หมายเลขโทรศัพท์ () -		ที่อยู่: หมายเลขโทรศัพท์ () -

สำหรับร้านค้าปลีก: โปรดกรอกข้อมูลในช่องที่มีสัญลักษณ์ * แล้วส่งไปยังลูกค้าของคุณ

ข้อกำหนดการรับประกัน

- 1 บริษัทจะจัดให้มีการซ่อมแซมหรือเปลี่ยนชิ้นส่วนโดยไม่คิดค่าใช้จ่ายในกรณีที่มีการทำงานผิดปกติ หรือความเสียหายที่เกิดขึ้นภายใต้สภาพการใช้งานปกติ โดยลูกค้าต้องให้ความสนใจคู่มือการใช้งานและฉลากบนผลิตภัณฑ์

2 การซ่อมแซมภายใต้การรับประกันสามารถทำได้โดยศูนย์บริการที่ได้รับอนุญาตเท่านั้น โดยต้องกรอกใบร้องเรียนการรับประกัน พร้อมแนบใบเสร็จชำระเงินตัวจริง(พร้อมวันที่ซื้อ)

3 เนื้อหาการรับประกันจะจำกัดอยู่กับการซ่อมผลิตภัณฑ์โดยไม่คิดค่าใช้จ่ายเท่านั้น ไม่มีการรับประกันอื่นใดให้อีกแม้จะอยู่ในระยะเวลาการรับประกัน การรับประกันครอบคลุมเฉพาะข้อบกพร่องในวัสดุหรือกระบวนการผลิต

4 การรับประกันจะไม่ครอบคลุมกรณีต่อไปนี้:

① การชำรุดสึกหรอตามปกติ

② การใช้งานไม่ถูกต้อง เช่น การโหลดเกินพิกัดของเครื่อง ใช้อุปกรณ์เสริมที่ไม่ผ่านการอนุมัติ

③ ชัดข้องและเสียหายเกิดจากผลิตภัณฑ์ชนกระแทกหลังการซื้อ การใช้กำลังหรือความเสียหายที่เกิดจากการกระทำภายนอก

④ ชัดข้องและเสียหายที่เกิดจากไฟไหม้ แผ่นดินไหวหรือภัยธรรมชาติอื่นๆ

⑤ ความเสียหายที่เกิดจากการไม่ปฏิบัติตามคู่มือผู้ใช้ เช่น การเชื่อมต่อกับแหล่งจ่ายไฟไม่เพียงพอ หรือไม่ปฏิบัติตามคำแนะนำในการติดตั้ง
- ⑥ ชัดข้องและเสียหายระหว่างการจัดการและขั้นตอนการขนส่งหลังการซื้อ

⑦ ส่วนประกอบเครื่องใช้ไฟฟ้าบางส่วนหรือทั้งหมดถูกถอดออก

⑧ ไม่สามารถแสดงใบเสร็จรับเงิน

⑨ ใบรับประกันไม่ได้ระบุวันที่ซื้อ ชื่อลูกค้า ชื่อร้านค้าปลีก หรือข้อมูลข้างต้นใดๆ ถูกแก้ไข

5 ใบรับประกันมีผลบังคับใช้ในประเทศไทยเท่านั้น

6 ใบรับประกันจะต้องเป็นต้นฉบับและต้องเก็บไว้อย่างเหมาะสม
- บันทึกข้อตกลงการซ่อมแซม
- * ใบเสร็จรับเงินเป็นใบรับรองสำหรับการซ่อมและการเปลี่ยนโดยได้รับเงินไขไว้ในคู่มือการใช้งานอย่างชัดเจน อย่างไรก็ตาม ใบรับประกันเป็นสิ่งที่รับรองว่าลูกค้าจะได้รับสิทธิทางกฎหมายจากบริษัท (ผู้รับผิดชอบการรับประกัน) และตัวแทนจำหน่ายของบริษัทโปรดตรวจสอบกับร้านค้าปลีกสำหรับปัญหาเกี่ยวกับการซ่อมหลังระยะเวลารับประกัน

* โปรดอ่านและทำความเข้าใจ “การรับประกันและบริการหลังการขาย” สำหรับการรับบริการหลังระยะเวลารับประกันและระยะเวลาการเก็บรักษาชิ้นส่วนอะไหล่

การรับประกันและบริการหลังการขาย

โปรดอ่านเนื้อหาต่อไปนี้อย่างละเอียด

- **ใบเสร็จรับเงิน**

กรุณาขอใบเสร็จรับเงินที่ร้านค้าปลีกเมื่อคุณซื้อผลิตภัณฑ์ คุณจะต้องชำระค่าธรรมเนียมการซ่อมแซมหากคุณไม่สามารถแสดงใบเสร็จรับเงิน ดังนั้นคุณต้องเก็บใบเสร็จรับเงินไว้ให้ดี
- **ภายในระยะเวลารับประกัน**

ระยะเวลารับประกัน: จำกัดเวลาจะระบุไว้ในใบรับประกัน (ด้านหลัง)

บริษัทจะให้การซ่อมแซมโดยไม่คิดค่าใช้จ่ายตาม “ข้อกำหนดการรับประกัน” ภายใต้เงื่อนไขการทำงานที่ผิดปกติ ภายในระยะเวลารับประกัน

- **หลังระยะเวลารับประกัน**

โปรดตรวจสอบกับร้านค้าปลีกและคุณต้องจ่ายค่าบริการที่เกี่ยวข้อง โดยหลังการซ่อมแซม คุณสามารถคงการใช้งานของผลิตภัณฑ์ได้ ซึ่งจะถูกเรียกเก็บเงินค่าซ่อมแซมบางชนิดตามความประสงค์ของลูกค้า
- **ระยะเวลาที่เหลือของชิ้นส่วนอะไหล่**

ระยะเวลาที่เหลือของชิ้นส่วนอะไหล่หลักของบริษัท คือ 5 ปีหลังจากผลิตภัณฑ์หยุดการผลิต ชิ้นส่วนอะไหล่สำรองต้องได้รับการตรวจสอบเพื่อคงการใช้งานของผลิตภัณฑ์
- **เกี่ยวกับบริการหลังการขาย**

โปรดตรวจสอบกับร้านค้าปลีกสำหรับบริการหลังการขายอื่นๆ

แบรนด์พริ้นซิפל: IRIS Ohyama Inc.,
ที่อยู่ : 2-12-1,Itsutsubashi,Aoba-ku,Sendai-shi,Miyagi-ken,Japan
ผู้จำหน่าย :

IRIS OHYAMA(THAILAND) CO.,LTD.

ที่อยู่ : No. 399 Interchange 21, Room No. 2208, 22 Floor, Sukhumvit Road, Klongtoey Nua Sub-district, Wattana District, Bangkok 10110

260821-JRR_HYJ_04

品名：EOT-R021取説
サイズ：182×257（B5） 12ページ
材質：上質紙 四六判70kg（81.4g／㎡）
刷色：1C（Black）

K

EOT-R021




Indoor/household use only

Oven Toaster

EOT-R021

Instruction Manual

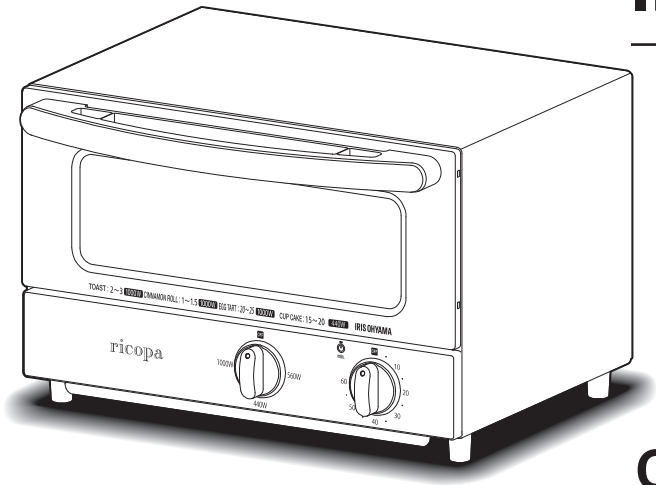

Contents

Preparations

Safety precautions.....	2
Usage precautions	5
Parts.....	6

Operation instructions

Preparations.....	7
How to use	8
Cleaning and maintenance.....	9

Others

Specifications.....	9
Cooking guides	10
Troubleshooting	10
Warranty card.....	Back cover
Warranty and after-sales services.....	Back cover

Safety precautions

Make sure to follow this "Safety precautions" in order to use the toaster oven correctly. The safety precautions describe the cautions that required to be observed in order to prevent any personal injury or property damage.

Examples of symbols



This symbol means
"Reminding"



This symbol means
"Prohibited"



This symbol means
necessary "Instruction"



Warning

The symbol means risks which may lead to death or serious injury during faulty operation.

Use the power plug and power cord correctly



Be sure to

- **Remove dust from the power plug periodically**
Collection of dust may cause poor insulation due to humidity etc., resulting in a fire or an electric shock.
- **Insert the power plug into the outlet fully**
Non-compliance may cause a short circuit, resulting in a fire or an electric shock.
- **Use an outlet with AC voltage of 220-240V~**
Non-compliance may cause a fire.



Unplug the product

- **Be sure to remove the power plug from the outlet when cleaning, inspecting or moving the oven**
Non-compliance may cause an electric shock or physical injury.



Avoid contact with wet hands

- **Do not insert or remove the power plug from the outlet with a wet hand**
Do not insert or remove the power plug from the outlet with a wet hand



Prohibited

- **Do not use the power cord and power plug when they are damaged or inserted loosely into the power outlet socket**
Non-compliance may cause a short circuit, resulting in a fire or an electric shock. If the power cord is damaged, contact the Repair Call Center.
- **Do not turn on the power while the cord is wrapped**
Non-compliance may cause overheating, resulting in a burn or a fire. Be sure to extend the cord when using it.
- **Do not damage the power cord**
- **Do not pull out the power cord forcibly when transporting or storing the oven**
Do not damage or modify the cord, bend; pull out or twist the cord forcibly; place a heavy object on the cord; or put the cord between objects. Non-compliance may cause damage to the power cord, resulting in a fire or an electric shock.
- **Do not let infants lick the power plug**
Non-compliance may cause an injury or an electric shock.



Prohibited

- **Do not use the product outdoors**
- **Do not use the product near flammable objects, such as a curtain**
- **Do not use the product near flammable objects, such as a curtain**
- **Do not use the product on objects that are easily affected by heat, such as a tatami mat, carpet, table cloth, etc.**
Non-compliance may cause a fire.



Prohibited

- **Do not use the product near combustible substances (such as kerosene, gasoline, or thinner) and flammable substances**
- **Do not use the product at a place where oil or smoke is splashed or emitted**
- **Do not spray liquids (insecticides, hair care products, or lubricating oil) onto the product**
Non-compliance may cause a fire.





Unplug the product

- **Stop using the product and remove plug of the power cord from the outlet immediately if there is any abnormality or a malfunction**
Non-compliance may cause smoke, a fire or an electric shock.

[Examples of abnormality]

- There is a noise or an odor
- The power plug and power cord have abnormal overheating
- The oven turns on or off when the power cord is moved
- The oven turns off occasionally while heating
- The user feels an electric current running through the finger when touching the product

➔ Stop using the product and contact the shop where you purchased the oven or the Iris Call Center.



Prohibited

- **Do not let a child use the oven alone or use it at a place where a child's hand can reach the product**
- **Do not stand or lean on the product**
Non-compliance may cause a fire, an electric shock or an injury.



Prohibited

- **Do not put any wrapped objects or a paper or plastic tray or container onto the oven**
- **Do not put oil or other types of fluid on the baking tray**
Non-compliance may cause a fire.



High temperature

- **Be careful when removing foodstuff from the oven after heating, as it is hot**
Use a mitten or a pot holder to remove a baking tray, etc. from the oven.

When a foodstuff emits smoke or ignites



Prohibited

- **Do not open the door**
If a foodstuff burns with a flame, do not open the door until the flame goes out. Non-compliance may cause air to flow into the oven, resulting in extension of the flame.
Also, turn the timer control knob to **OFF** and remove the power plug from the outlet.
- **Do not splash water on the door**
Non-compliance may cause the glass window to break.



Do not disassemble

- **Do not disassemble, repair, or modify the product**
Non-compliance may cause a fire, an electric shock or physical injury. It is dangerous for a person except an electrical device repairman to repair the oven.
Contact the shop where you purchased the oven or the Repair Call Center.



Do not touch

- **Do not touch the heating elements, the oven's body, the interior surfaces, and the glass window while or after using the oven**
Non-compliance may cause a burn.



Avoid getting the product wet

- **Do not use the product in a humid place, such as a wet area and a bathroom**
- **Do not wet the product or immerse it in water**
Non-compliance may cause a fire or an electric shock.



Caution

The symbol means a risk which may lead to a personal injury or property damage if the oven is used incorrectly.



Be sure to

- **Perform maintenance of the product after the body and parts have cooled down**
Beware of a burn, as the oven is still hot for a while after use.



Prohibited

- **Do not make a strong impact on the product by hitting or dropping it**
Non-compliance may cause a malfunction, resulting in a fire or an electric shock.

Safety precautions (continued)

Do not heat the following foodstuffs



Prohibited

- **Do not heat foodstuffs whose fat content comes out when heated, such as raw fish or meat, or fry on the wire rack**

Non-compliance may cause the fat content to drop or splash, resulting in smoke or a fire. Use the baking pan supplied with the toaster oven or a commercially-available microwave-safe plate.

- **Do not toast bread with butter or jam on it**
Non-compliance may cause a fire.
- **Do not heat canned food or bottled food directly in the oven**
Non-compliance may cause a rupture or overheating of the can or bottle, resulting in a burn.

- **Do not heat the oven while it is empty**
Non-compliance may cause the door and the inside of the oven to overheat, resulting in a burn, smoke or a fire.

Also, be careful when heating a small amount of foodstuff.
For heating if empty when starting to use the oven, follow the instruction in the manual. (→P7)

- **Do not allow a foodstuff to touch the heating elements**
Cut large foodstuffs into smaller pieces. Do not heat a large sized foodstuff.

while using the oven



Prohibited


- **Do not move the oven's body**
Non-compliance may cause an accident.
- **Do not heat foodstuffs more than needed**
Non-compliance may cause smoke or burning of the foodstuff.
Especially, be careful of heating the foodstuff that has a high fat content, as it may burn easily with a flame.
- **Stay near to the oven**
Non-compliance may cause smoking or burning of the foodstuff.

Install the oven in a safe manner



Be sure to

- **Use the oven on a horizontal place**
Use of the oven on an unstable place may cause the oven to drop or fall down, resulting in a physical injury or a fire.
- **Keep the oven away from a wall, furniture, or a curtain at the distances described in the illustration**
- **Keep the oven not less than 20cm away from a window or furniture**
Non-compliance may cause staining or damage to a wall, furniture or a curtain, or if the oven is used in a narrow area, it may cause overheating or a fire. Install the oven in a well-ventilated place that is not exposed to water.

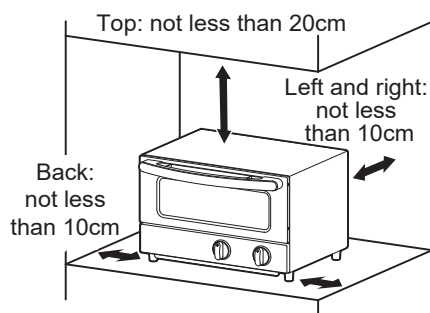

Prohibited

- **Do not install the oven in a location that is higher than the level of your shoulder**
Non-compliance may cause the user to become unstable when removing a foodstuff, resulting in physical injury or a burn.



Be sure to

- **Be sure to use the oven with the crumb tray installed**
- **Be sure to dispose of crumbs on the crumb tray after using the oven**
Non-compliance may cause a fire.



Prohibited

- **Do not place aluminum foil etc. on the crumb tray**
Non-compliance may cause overheating, resulting in a fire.



Be sure to

- **Ensure that the timer is working correctly while using the oven**
Malfunction of the timer may cause overheating, resulting in smoke or overheating of the oven.



Prohibited

- **Do not extend the heating time while the timer is working**
Non-compliance may cause overheating, resulting in a fire.



Unplug the product

- **Be sure to remove the plug without holding the power cord when removing the plug from the power socket outlet**
Non-compliance may cause a fault in the insulation, resulting in a fire or an electric shock.
- **Be sure to pull the power plug without holding the power cord when pulling the power plug out of the outlet**
Non-compliance may cause damage to the power cord, resulting in a fire or an electric shock.



Prohibited

- **Do not place any object on top of the oven's body**
Non-compliance may cause deformation of the object by heat or a fire.
- **Do not place any object on the oven's door**
Non-compliance may cause the oven's body to fall down and the foodstuff to slip, resulting in an injury or a burn.



Prohibited

- **Do not use the oven for any purpose other than heating foodstuff**
Non-compliance may cause a fire or a burn.
- **Do not use the oven for any purpose other than for household use (such as industrial use)**
Non-compliance may cause a fire.



Prohibited

- **Do not place the oven over an open fire (gas stove etc.) or on an electric heater**
Non-compliance may cause a fire.

Usage precautions

Temperature adjustment


- This oven adjusts the temperature by turning on and off the heating elements by activation of the thermostat. The heating elements may turn off while operating, but it is not a fault with the oven.

Disposal


- Dispose of this product and its packaging in accordance with the regulations enforced by the local municipality governing your residence's location.

Parts



Body

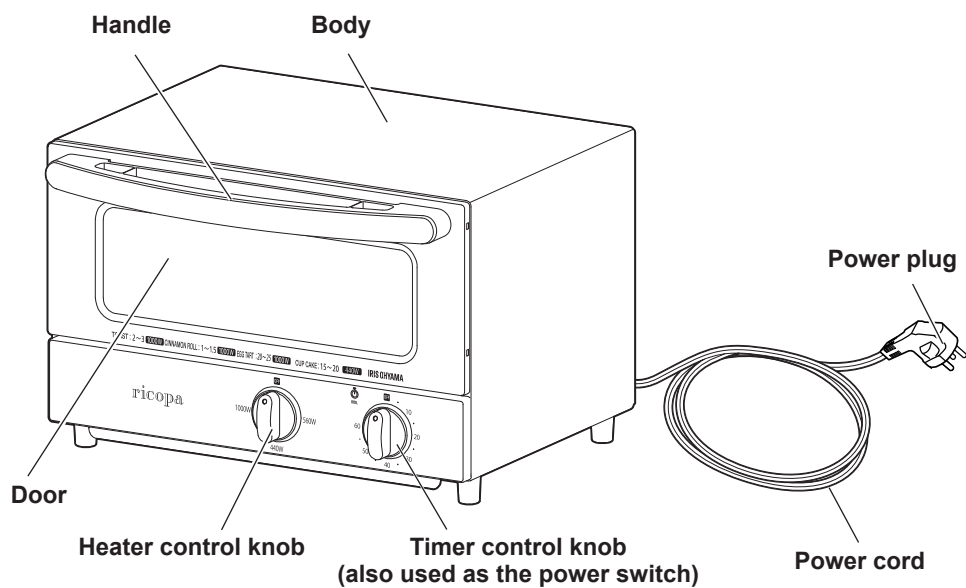

Inside

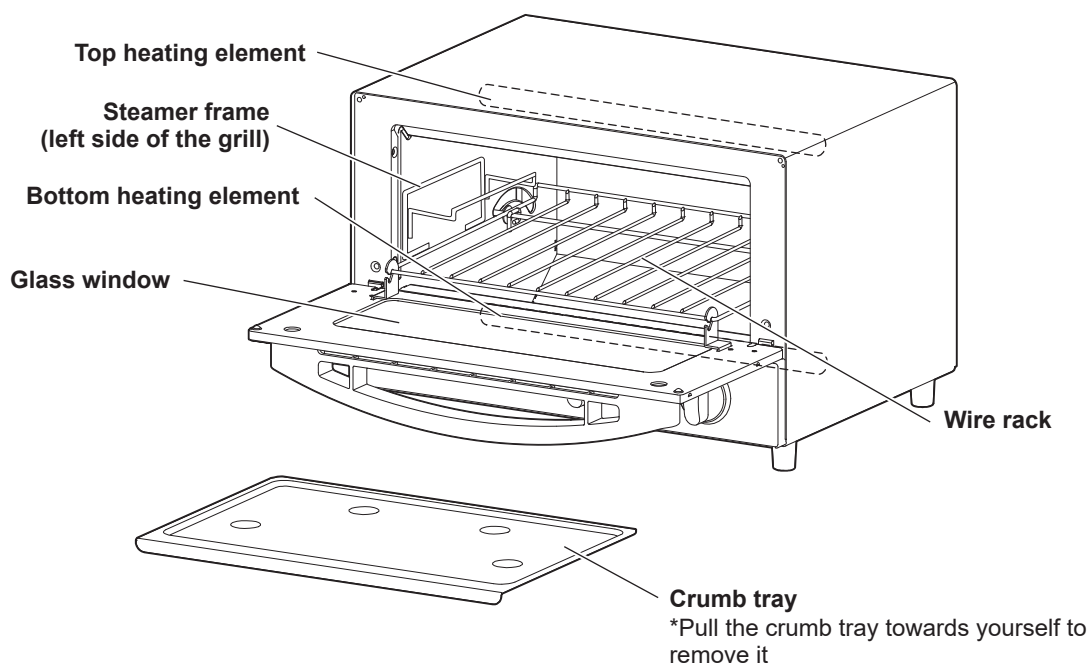

Accessory

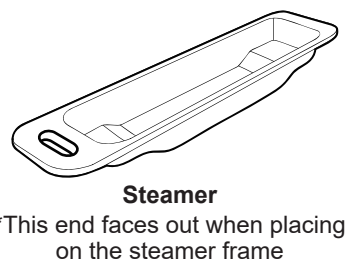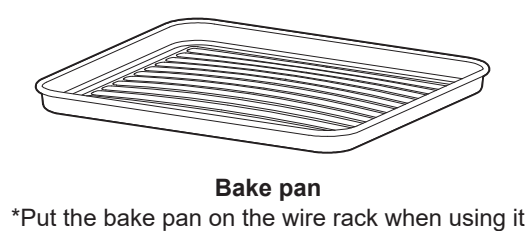


Preparations

Installation


1 Install the oven in a suitable installation location

- Install the oven by referring to "Install the oven in a safe manner" on page 4.

2 Remove the bands fixing the wire rack (two points)

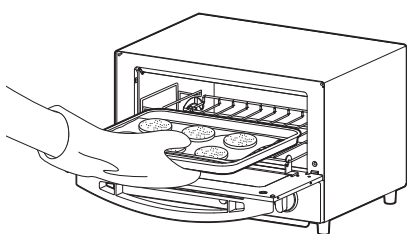

3 Insert the power plug into the outlet socket

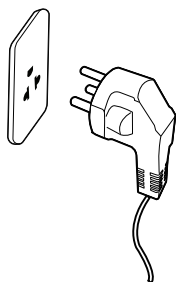

- Do not install the oven at where it is exposed to direct sunlight or hot air from an air conditioner or heater. Non-compliance may cause deformation, discoloration, or a failure to control the temperature correctly.




Caution

- **The bottom of the toaster oven may become hot**
Accordingly, do not place the power cord under the toaster oven.


Empty baking

Perform empty baking when using the oven for the first time.

1 Put the bake pan in the oven and close the door

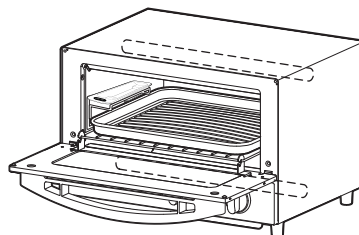


2 Select 1000W by turning the heater control knob

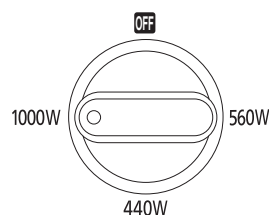

3 Start empty baking by turning the timer control knob to 15

- Turn the timer control knob to 16 or higher, and then turn it back to 15.

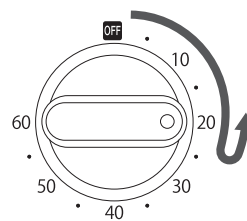

- * You can hear a "ding" sound when the oven ends heating.



Warning

- **The oven's body, glass window, wire rack and bake pan become hot for a while during and after empty heating. Be careful not to touch it directly.**

How to use



Caution

- If the oven is used continuously, the heating element may not turn on due to activation of the temperature adjustor. Even in this case, the heating element and the inside of the oven becomes hot. Beware of a burn.
- Perform the maintenance of the oven every time after using the oven.

1


Put a foodstuff

- * Place the bake pan etc. that is supplied with the oven on the wire rack when cooking the following foodstuff.
 - Foodstuff whose fat content come out when cooking
 - Foodstuff whose juice comes out
 - Foodstuff that deforms easily
 - Foodstuff that is smaller than the mesh of the wire rack

- When using aluminum foil, do not allow it to touch the heating element. Non-compliance may cause a failure of the oven, due to melted aluminum foil stuck to the heating element.

- * Place the foodstuff at the center of the wire rack (if the foodstuff is placed on the front or rear it may brown unevenly).

Use of the steamer

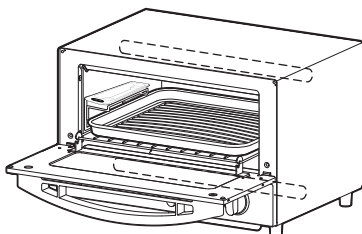


- * Standard capacity: Around half of the steamer. You can put the steamer with water on the steamer frame, but do not fill any liquids other than water, or it may cause fire.

2

Turn the heater control knob to select the heat level

- Select the heating level by referring to the "Cooking Guide" on page10.

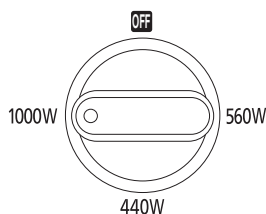


1000W (Top and bottom heating elements)	Using both the top and bottom heating elements. Use this setting for toasting and baking rice cakes and pizzas.
560W (Top heating element)	Only the top heating element is used.
440W (Bottom heating element)	Only the bottom heating element is used.

3

Turn the timer control knob to set the cooking time


- The oven starts to cook a foodstuff.
- To select 10 or less, turn the knob to the 11 or more and then turn it back to the time that you desire to set.
- To turn off the oven before the preset time is up, turn the timer control knob to **OFF**.

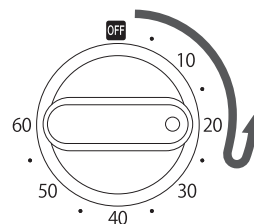

4

Finish cooking

- You can hear a "ding" sound when the timer has ended.
- In the case of using the bake pan supplied with the toaster oven or a commercially available microwave-safe plate in the oven, remove it with a mitten or a pot holder.

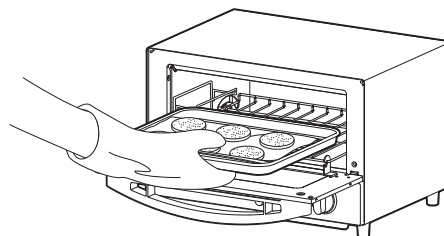

- * You can hear the sound of the timer during the timer's operation, but it is not a fault of the oven.



Caution

- Be careful not to touch the top and bottom heating elements when removing a foodstuff.
- The oven's body, glass window, wire rack and bake pan become hot during and after heating. Be careful not to touch them directly.
- Please do not disassemble the grill by yourself. You can use it with the bakeware to bake so that the food residue can be cleaned more easily.
- Do not take out the steamer immediately after heating. Doing so can cause scald.

Cleaning and maintenance



Caution


- Before performing maintenance, be sure to remove the plug from the power outlet socket, and ensure that the oven's body has cooled down.
- Keep the crumb tray clean. If crumbs or leftovers remain on the tray, they may burn or cause a fire.
- Do not forget to install the crumb tray in the oven after performing maintenance. Non-compliance may cause a burn of the installation location, etc.
- Do not leave leftovers and crumbs in the oven. Non-compliance may cause burning or a fire.

- Do not use polishing powder, a scrubbing brush, thinner, benzene, etc.

Oven's body and interior

Wipe the oven with a well-wrung cloth


- If the oven is heavily stained, wipe the oven with a soft cloth soaked in diluted neutral detergent. Then, wipe away any remaining detergent off with a well-wrung cloth, etc.

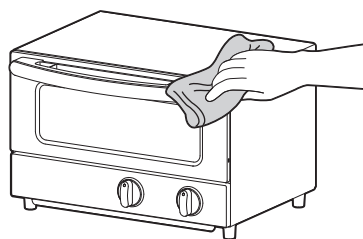

Crumb tray

Remove the crumb tray and dispose of any crumbs and wipe off stains


- If the tray is heavily stained, wash it with diluted neutral detergent and a sponge. Then, flush the tray with clean water and dry it well.

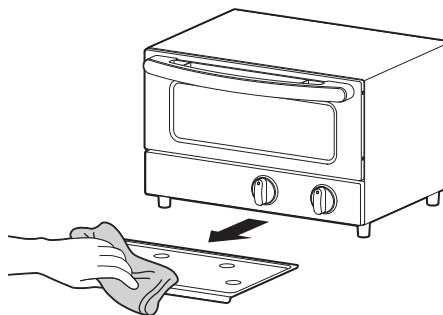

Bake pan

Wash the bake pan with diluted neutral detergent and a sponge and flush it well with water

- Dry the pan fully after flushing.

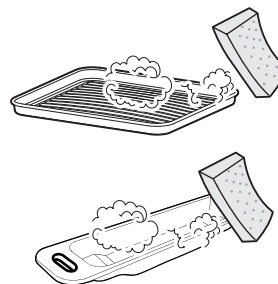


Specifications

Rated voltage	220-240V~
Rated frequency	50-60Hz
Rated consumption power	1000W
Output switching	440/560/1000W
Timer	60 minutes (Also used as the power switch)
External dimensions (excluding the power cord, including handle)	W332 x D290 x H221mm
Weight (including the bake pan)	3.5kg
Length of the power cord (about)	0.9m

* The specifications of the product are subject to change without notice.

Cooking Guides

- The following cooking guides vary according to the type, quantity and size of the foodstuffs and temperature before cooking. Accordingly, adjust the toaster oven depending on how much foodstuff is being cooked.
- When cooking overlapped foodstuff, adjust the layers during cooking.
- To cook foodstuff continuously, cook it for a shorter time than the first one.
- If the inside of the toaster oven is still hot, the heater may not turn on immediately due to activation of the thermostat.

Example	Quantity	Output switching	Bake pan	Timer setting (guide for initial timer setting)	Note
Toast (6 slices)	2 slices	1,000W (top and bottom heating elements)	—	2-3 minutes	Adjust the heating time according to the size, thickness and type of the toast.
Croissant (warming)	2 pieces	560W (top heating element)	—	1-2 minutes	
Butter roll (warming)	4 pieces	1,000W (top and bottom heating elements)	—	1-1.5 minutes	
Bagel (warming)	1 piece (cut into halves)	560W (top heating element)	—	3-4 minutes	Place a bagel with its cut end facing down. 
Chopped rice cakes	4 pieces	1,000W (top and bottom heating elements)	—	3-4 minutes	Arrange rice cakes at regular intervals. Use the bake pan for small pieces of rice cake.
Frozen pizza	½ slice (18 cm diameter)	1,000W (top and bottom heating elements)	Required to use	4-5 minutes	Put aluminum foil on the bake pan.
Pizza toast	2 slices	1,000W (top and bottom heating elements)	Required to use	3-4 minutes	Put aluminum foil on the bake pan.
Cookie	Diameter 3.5 cm x thickness 3 mm; 15 pieces	1,000W (top and bottom heating elements)	Required to use	3-4 minutes	Put a cooking sheet on the bake pan.
Hot dog	2 pieces	1,000W (top and bottom heating elements)	—	6-7 minutes	Put cooked foodstuff in the bun and cover it with aluminum foil.
Gratin	2 dishes	1,000W (top and bottom heating elements)	—	5-6 minutes	Bake pan (11x15x3.5cm)




Caution

- Do not heat frozen foods “for microwave”. Non-compliance may cause a fire. For commercially-available frozen foods, only those labelled “for toaster oven” may be heated.

Troubleshooting

If any abnormality occurs while using the oven, please read this instruction manual carefully and check the following points before requesting the repair service.

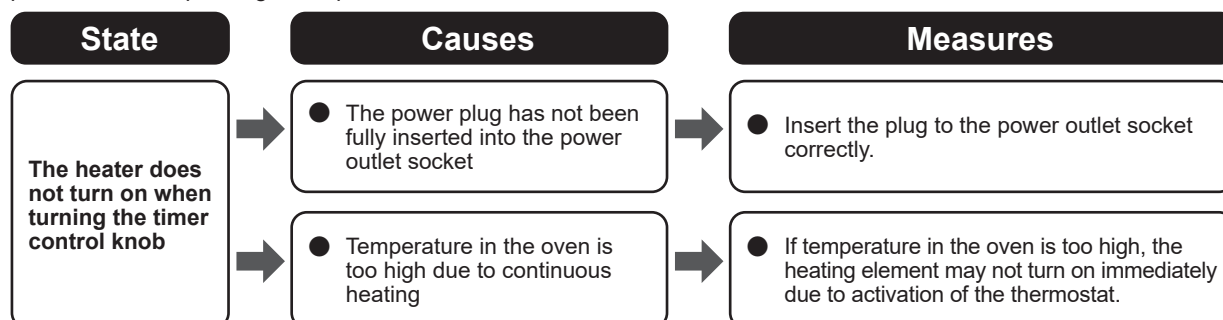

Troubleshooting (continued)

The foodstuff browns unevenly, or the place where the oven is located burns	● Crumbs and leftovers stuck to the crumb tray burn with a flame	● Clean the crumb tray (→P9).
	● The crumb tray is not installed	● Install the crumb tray.
Smoke or an odor comes out	● The heating element was used without performing empty heating	● Be sure to heat the oven as empty heating when using the oven for the first time (→P7). Although an odor may remain in the oven, it will disappear gradually as you use the oven.
	● Crumbs and leftovers stuck to the crumb tray burn with a flame	● Clean the crumb tray (→P9).
A foodstuff is not heated thoroughly	● The heating time is too short	● Lengthen the heating time.
	● A foodstuff that is difficult to heat thoroughly is heated	● Arrange the cooking method as it suits, such as making a slit in the foodstuff or cutting the foodstuff into smaller pieces.
The outside of a foodstuff burns during heating	● The heating time is too long	● Shorten the heating time.
There is an error in the timer	● As the timer control knob is a wind-up knob, there may be a certain error	● This is not a fault of the oven.
The timer is not working correctly	● If the timer is set to not more than five minutes, the timer may not work properly	● To set the timer at not more than 5 minutes, turn the timer control knob to 6 or more and turn it back to the time that you desire to set.
The heaters turns off during heating or turns on and off repeatedly	● The thermostat activates to control the heating temperature	● This is not a fault of the oven.

If you cannot resolve the problem after implementing the above actions;

Contact the shop where you purchased the oven or the Iris Customer Services Center.



Warning

● Do not try to disassemble, repair, or modify the oven yourself.

Oven Toaster EOT-R021

Warranty card

The purchase receipt constitutes the certificate so you can enjoy free repairs in accordance with the following repair provisions within the next period from the day of purchase.

Purchase date*		Warranty period	
Warranty period		1 years from the day of purchase	
		*Except for consumables	
Customer	Name:		Retail shop
	Shop name:		
	Address:		
Postal code:			
Address:			
Telephone number () -		Telephone number () -	

Notice to retail shops: Please fill in the fields marked with a * symbol and then deliver it to your customer.

Warranty provisions

- 1 The company will provide free repairs or replacements in conditions of malfunction or damage present under normal operating conditions as per the aspects that must be given attention according to the labels affixed on the operation manual and the product.

2 Warranty repairs can only be performed by an authorised service centre. When filling a warranty claim, the original bill of purchase (with the date of purchase) must be submitted.

3 The warranty contents are only limited to the free repair of the product. No other warranty service is provided even within the warranty period. The warranty only covers defects in materials or workmanship.

4 The warranty will not apply in cases of:

① Normal wear and tear

② Incorrect use, e.g. overloading of the appliance, use of non-approved accessories

③ Failures and damages caused by product crashes after purchase. The use of force or damage caused by external influences

④ Failures and damages caused by fires, earthquakes or other natural disasters

⑤ Damage caused by non-compliance with the user manual, e.g. Connection to an inadequate power supply or non-compliance with the installation instructions
- ⑥ Failures and damages during the handling and transportation process after purchase

⑦ Partially or completely dismantled appliances

⑧ Not being able to show the purchase receipt

⑨ The warranty card has not been filled with the date of purchase, the customer's name, the name of the retail shop or any of the above data has been modified

5 The warranty card is only valid in THAILAND.

6 The warranty card must be the original and must be kept appropriately.
- Repair memorandum
- * The purchase receipt constitutes the certificate corresponding to the repair and replacement conditions clearly stipulated in the user manual. However, the warranty card restricts any customer from enjoying any legal rights from the company (person responsible for the warranty) and any dealer. Please check with retail shop for repair-related matters after the warranty period.

* Please check the "Warranty and after-sales service" for any repairs after the warranty period and the remaining period of spare parts.

Warranty and after-sales services

Please make sure to carefully read the following contents.

- Purchase Receipt

Be sure to request a Purchase Receipt at the retail shop when purchase the product. The repair fee needs to be paid if you are unable to present a Purchase Receipt. Therefore, you must keep the Purchase Receipt securely.

■ Within the warranty period

Warranty period: Time limit specified by the warranty card (Back cover).

The company will provide free repair as per the "Warranty Provisions" under abnormal operating conditions within the warranty period.
- Over the warranty period

Please check with retail shop and you will have to pay for related repair expenses. It will be possible to maintain the functions of the product after repair. A certain repair cost will be charged according to customer's requirements.

■ About the remaining period of spares parts

The remaining period of the company's major spare parts is 5 years after stopped production of this product. The spare parts in operation correspond to the spare needed to maintain the functions of parts needed to maintain the functions of the product.

■ About after-sales service

Please check with retail shop for other after-sales issues.

Brand Principal : IRIS Ohyama Inc.,
Address : 2-12-1,Itsutsubashi,Aoba-ku,Sendai-shi,Miyagi-ken,Japan
Distributor :
IRIS OHYAMA(THAILAND) CO.,LTD.
Address : No. 399 Interchange 21, Room No. 2208, 22 Floor, Sukhumvit Road,
Klongtoey Nua Sub-district, Wattana District, Bangkok 10110